

SAILFISH 245 DC | OWNER'S MANUAL



2025 245 DUAL CONSOLE

anchored in excellence



LOA Hull Only 24' 0" 7.32 M	Beam 8' 6" 2.59 M
Length Rigged 26' 0" 7.92 M	Fuel Capacity 120 GAL 454 L
Cockpit Depth Bow 32" 81.28 CM	Draft (Hull Only) 18" 45.72 CM
Cockpit Depth Rear 27" 68.58 CM	Max Horsepower 300 HP 227 kW
Dead Rise (Multiangle) 22°-24°	Fresh Water 14 GAL 52 L
Bridge Clearance w/Hard Top 8' 5" 2.57 M	

Approx. Rigged Weight
5,350 LBS | 2,246 KG

12

Person Capacity

2

Battery Capacity

10

Rod Holders (Standard)



STANDARD FEATURES

Boat

- Boarding Ladder (4-Step w/ Grab Handle)
- Built-In Rigging Tubes (from Bilge to Helm w/ Pull Tapes)
- Carbon Fiber & Kevlar® Reinforced Deck & Hull
- Closed Cell Foam Flotation
- Cockpit Bolster Pads
- Exclusive Dot Matrix Non-Skid Flooring
- Exclusive VDS Hull Design (Variable Deadrise Stepped Hull)
- Fiberglass Hard Top (Powder Coated - White) w/PFD Storage
- Fuel Filter / Water Separator
- Oversized Bilge Access
- Powder Coated Walk-Thru Windshield w/ Tempered Glass
- Recessed SST Cup Holders (15)
- SailTech Composite Full Length Transom
- SailTech Foam-Filled Fiberglass Stringer System
- Transom Mounted Tool & Raw Water Washdown Hose Holder
- Trim Tabs (w/ Indicator & Built-In Auto-Retract Feature)
- Walk-Thru Transom Door w/ Wave Guard Step

Bow

- Bow Block-Off Door
- Bow Bottom and Backrest Cushions
- Chaise Lounge Style Seating
- Dual USB Charging Ports (2 - Port/Starboard)
- SST Split Low Profile Bow Rails

Electrical

- Accessory Switch Panel w/ Circuit Breakers
- Compass
- Electric Horn
- Full Digital Instrumentation
- Fully NMEA 2K Compliant
- Fusion Stereo System w/ Rockford Fosgate LED Lighted Speakers
- LED Anchor Light
- LED Interior Cockpit & Bilge Lighting
- LED Navigational Bow Light

Fishing

- Circulating Baitwell w/ LED Lighting (25-gal. Transom)
- In-Floor Fish Box (w/ Advanced Vacuum Pump)
- Insulated Bow Fish Boxes
- Recessed Rod Storage (Starboard)
- SST Rod Holders (4)
- SST Transom Rod Holders

Hardware

- Fender Cleats (4)
- Flush Mount Hinges, Latches & Deck Plates
- Heavy-Duty SST Bow & Stern Eyes
- Heavy-Duty SST Rub Rail
- Marine Grade SST Hardware
- Sailfish Engraved Transom Plate
- SST & Bronze Thru Hull Fittings
- SST Flush Mount Pull-Up Cleats (6)
- SST Propeller

Head

- Corian Countertops (w/ Freshwater Sink & SST Cup Holders)
- Finished Fiberglass Head
- Head Compartment Lighting
- Lockable Head Door
- Marine Deck Flooring (Foam)
- Mirror
- Porta Potti
- SST Port Light
- Towel Rack, TP Holder and Storage

Helm

- Dual USB Charging Ports
- Hydraulic Steering (Suzuki)
- Power-Assisted Hydraulic Steering (Mercury)
- Integrated Electro-Hydraulic Steering (Yamaha)
- Tilt SST Steering Wheel w/ Power Knob
- Large Dash Area

Plumbing

- Automatic Bilge Pumps (2000 GPH Aft and 800 GPH Forward)
- Freshwater Shower (Transom)
- Freshwater Tank (14-gal.)
- High-Speed Livewell Pickup
- Raw Water Washdown
- Self-Bailing Cockpit

Seating

- Aft Flip-Up Bolster Seating
- Deluxe Billfish Captain's Chair with Flip-Up Bolster, Adjustable Height Pedestal & Flip-Up Armrest
- Flip Flop Lounge Seat w/ Storage, Built-In Insulated Cooler & Removable Cooler
- Portside Aft Fold-Out Seat (36")
- Starboard Aft-Facing Seat

Storage

- Anchor Locker (Finished Fiberglass w/ Anchor Management System)
- Battery Storage (Bilge Compartment)
- Fiberglass Console Storage
- Glove Box (Helm)
- In-Floor Ski Locker (Mid-Ship)
- Storage Center in Starboard Passenger Seat Pod

OPTIONS

Boat Options

- 18" LED Light Bar (White)
- 90" Garmin Force Kraken Trolling Motor w/36V Lithium Battery
- Batteries (1 house/1 cranking) – 27 series
- Cockpit & Bow Covers
- Electric Marine Head w/Holding Tank (with deck pump out fitting)
- Hella Underwater LED Lights (2)
- In-Floor Rod Storage (2)
- Laporte Cockpit Sunshade (White)
- Lewmar Bow Pre-Wire

OPTIONS (Continued)

- Power-Assisted Hydraulic Steering (Suzuki)
- Retractable Ski Tow Pylon
- Removable Bow Table (w/ Additional Bracket)
- Spot Light for Hard Top
- Two-Tone Hard Top
- Trolling Motor Pre-Wire
- Windlass w/ Polished Roller, SST Scuff Plate, SST Anchor, Rode & Chain
- Windshield Wiper (Captain's Side) w/ Fresh Water
- Wireless Cell Phone Charger/Holder

Electrical Options

- Built-In 2 Bank Battery Charger
- Fusion Transom Remote Control
- Garmin GMRM 18 xHD Radome
- Garmin GPSMap 1243xsv w/o Transducer
- Garmin Thru Hull Transducer GT-12M w/ CHIRP
- Garmin Thru Hull Transducer GT-15M w/ CHIRP
- Garmin VHF Radio & Antenna
- Radar Cable & Power Cable
- Simrad Halo24 Pulse Compression Radome
- Simrad NSX 3012 w/o Transducer
- Simrad B60 Airmar Thru Hull Transducer w/o CHIRP
- Simrad B75 Airmar Thru Hull Transducer w CHIRP
- Simrad VHF Radio & Antenna
- Upgrade Trolling Motor Battery Charging System (12V to 36V)

Seating Options

- Bow Filler Cushion
- Starboard Side Aft Fold Out Seat (36")

Optional Packages

Entertainment Package

- Retractable Ski Tow Pylon, Removable Bow Table, Additional Table Bracket, Fusion Transom Remote Control & Hella Underwater LED Lights (2)

Engine Options



- Yamaha
- Single Yamaha F250XSB2 (White)
 - Single Yamaha F300XSB2 (White)
- Mercury
- Single Mercury 250XL Verado (Warm Fusion)
 - Single Mercury 300XL Verado (Warm Fusion)
- Suzuki
- Single Suzuki DF250APXW5 (White)
 - Single Suzuki DF300APXW5 (White)

SAILFISH
BOATS
sailfishboats.com

SAILFISH 245 DC | OWNER'S MANUAL - TABLE OF CONTENTS

- | | |
|--|---|
| 2. Boat Specifications | 26. Freshwater Washdown and Shower System |
| 4. Boat Trailer Measurement | 27. Livewell Operation |
| 5. Boat Layout | 28. Optional Retractable Ski Tow Pylon |
| 6. Seating / Occupant Locations | 29. Fishbox Pump |
| 7. Boat Safety & Warning Labels | 30. Optional Entertainment Center |
| 9. Boat Safety & Warning Label Locations | 31. Bennett Trim Tab Maintenance |
| 10. Boat Safety & Warning Label Replacements | 32. Optional Windlass |
| 11. Boarding Ladder & Unassisted Boarding Situations | 33. Optional Windlass Troubleshooting Chart |
| 12. Battery Switch Wiring | 34. Uflex Hydraulic Steering System |
| 13. Breaker Panel Schematic | 35. Optional Uflex Power Assisted Steering |
| 14. Switch Panel Schematic | 36. Yamaha Electric Steering System |
| 15. Distribution Harness | 37. Porta Potti |
| 16. Adapter Harness | 39. Optional Type III MSD Waste Management System |
| 17. Fuel System Layout | 46. Vinyl Care and Cleaning |
| 18. Plumbing Diagram | 47. Aluminum Cosmetic Corrosion (Pitting) |
| 19. Dash Layout | 48. Caring for Aluminum |
| 20. Ignition Switch, Engine Shut-Off Cord/Lanyard | 49. Caring for Stainless Steel |
| 21. Plug and Play Wiring / Fuel-Water Separator | 50. Windshield Washing and Care |
| 22. Console / Head Area | 51. Gel Coat |
| 23. Bilge Access and Explanation | 53. Sailfish Boats Limited Warranty |
| 24. Bilge Pumps | |
| 25. Raw Water Washdown System | |

SAILFISH 245 DC | OWNER'S MANUAL - TRAILER MEASUREMENTS

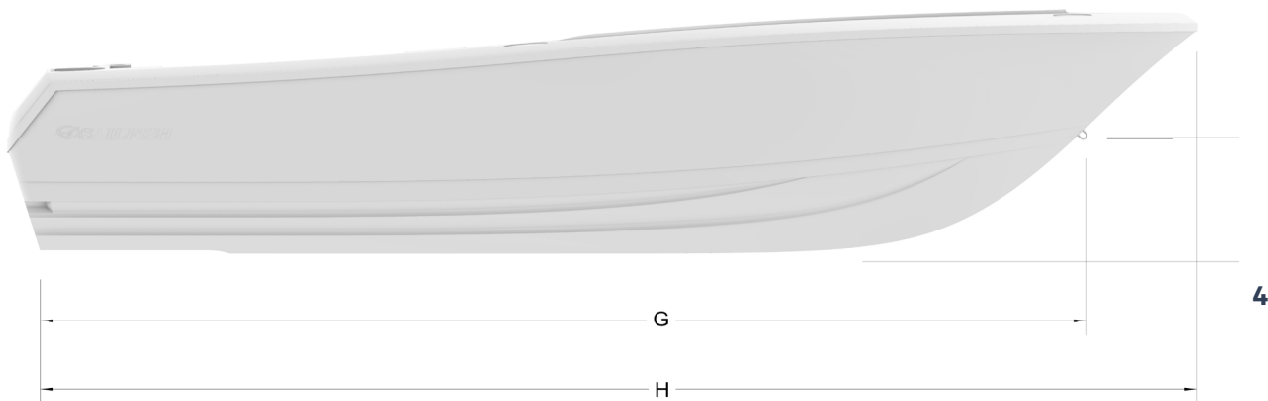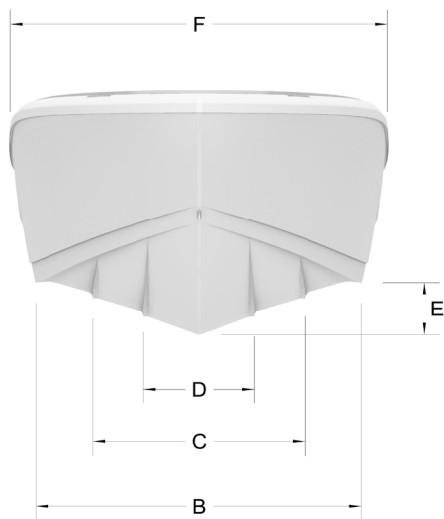


Boat Model	B	C	D	E	F	G	H	I
245DC	91 in.	57.5 in	30 in.	14 in.	103 in.	250 in.	273 in.	36 in.

SAILFISH 245 DC | OWNER'S MANUAL - BOAT LAYOUT


KEY	DESCRIPTION
1	Boarding Ladder / Fresh Water Fill
2	Bilge Access
3	Aft Folding Seat
4	Fuel Sender and Pick-Up Access
5	25 Gallon Livewell
6	Port Side Aft Fold-Out Seat
7	Fish Boxes/Storage
8	Fuel Fill

KEY	DESCRIPTION
9	Lounge Seat
10	Head Area
11	Floor Storage
12	Helm Storage Compartment
13	Anchor Locker
14	Helm Area
15	Starboard Aft Facing Seat
16	Optional Starboard Aft Fold-Out Seat

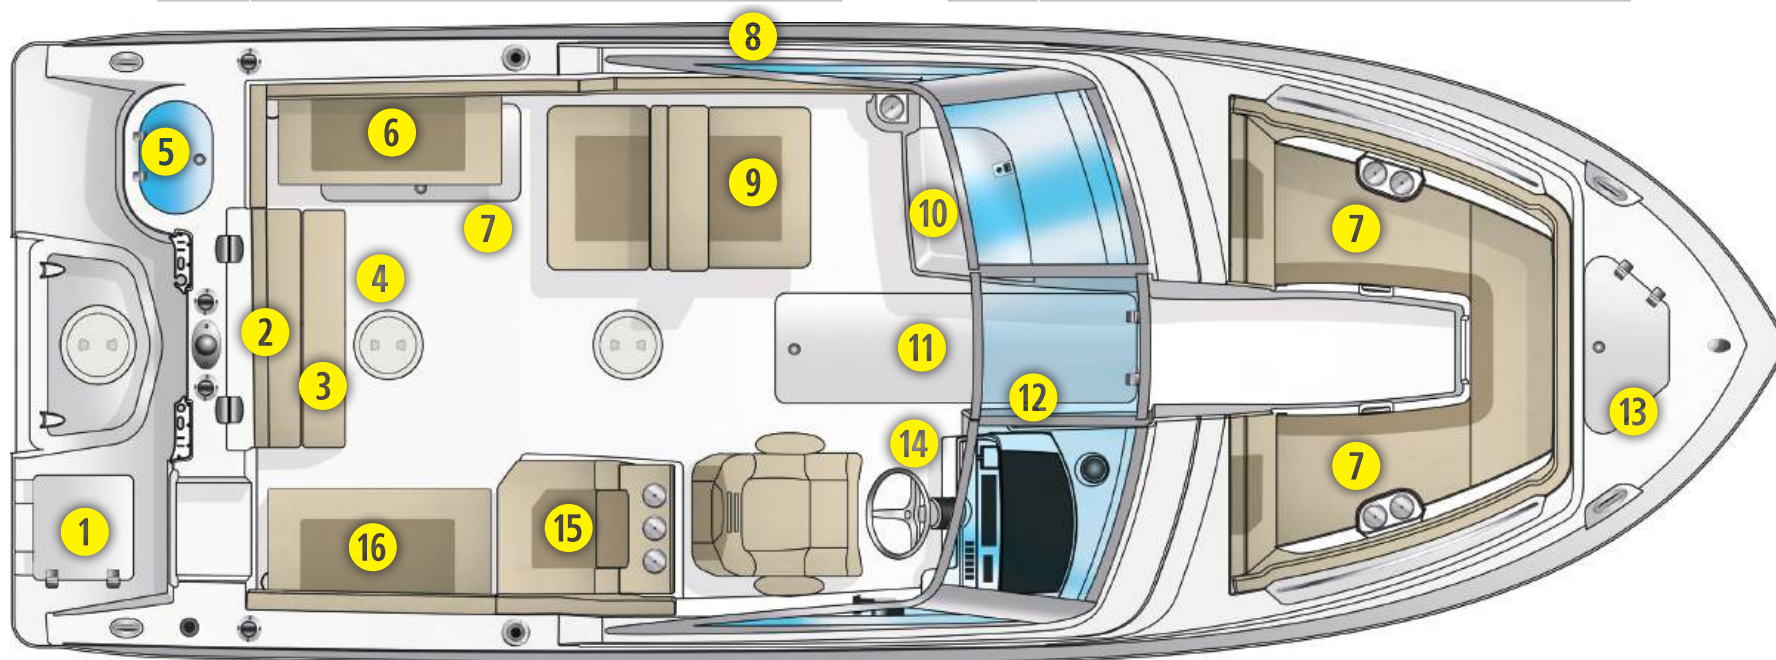


5

SAILFISH 245 DC | OWNER'S MANUAL - SEATING / OCCUPANT LOCATIONS

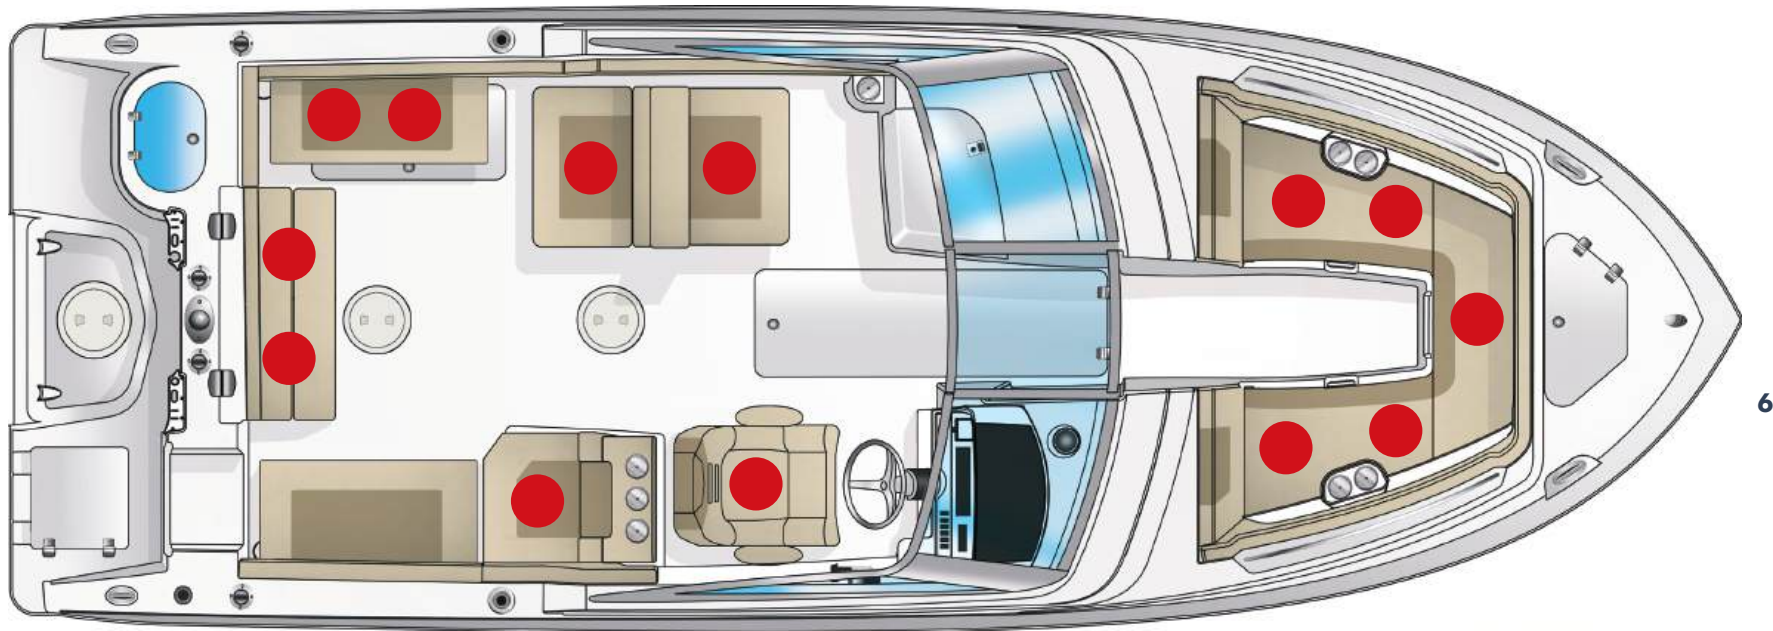

6

SAILFISH 245 DC | OWNER'S MANUAL - BOAT SAFETY & WARNING LABELS



⚠ WARNING

Carbon monoxide (CO) can cause brain damage or death.


Engine and generator exhaust contains odorless and colorless carbon monoxide gas.

Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.

Get fresh air if anyone shows signs of carbon monoxide poisoning.

See Owner's Manual for information regarding carbon monoxide poisoning.

NW-204-14



⚠ DANGER

Carbon monoxide (CO) can cause brain damage or death.

Engine and generator exhaust contains odorless and colorless carbon monoxide gas.


Carbon monoxide will be around the back of the boat when engines or generators are running.

Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

NW-206-14

⚠ DANGER

- **CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.**
- **SHUT OFF ENGINES** while people are in the water near the boat, on the swim platform, or on the boarding ladder.
- **NEVER OPERATE IN REVERSE TOWARD A PERSON** in the water.



NW-300-23



⚠ DANGER


CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.

STAY CLEAR OF BOAT AND STAY OFF SWIM PLATFORM AND BOARDING LADDER WHILE ENGINE IS RUNNING.

NW-301-23

As a boat owner, you need to become familiar with the locations of the Caution, Warning and Danger Labels found on your boat in order to ensure your safety, as well as everyone on board.

These are images of the labels to help you maintain and operate your boat safely.

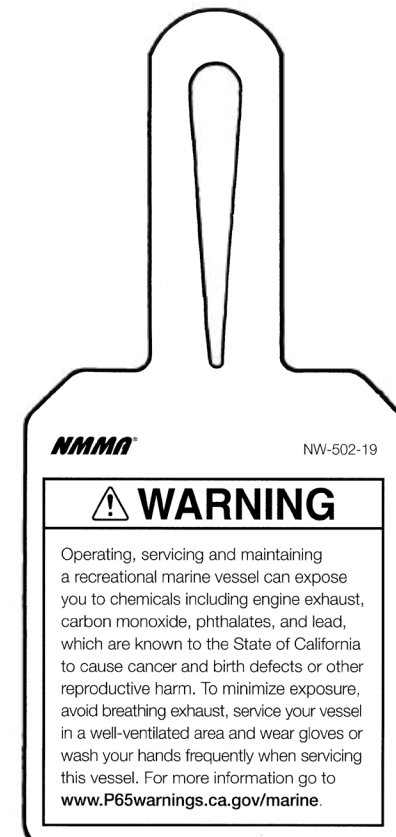



(California Only)

SAILFISH 245 DC | OWNER'S MANUAL - BOAT SAFETY & WARNING LABELS

Warning Labels Continued


As a boat owner, you need to become familiar with the locations of the Caution, Warning and Danger Labels found on your boat in order to ensure your safety, as well as everyone on board.

These are images of the labels to help you maintain and operate your boat safely.

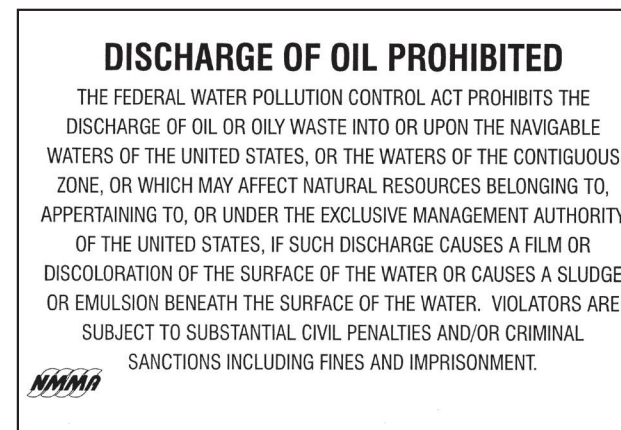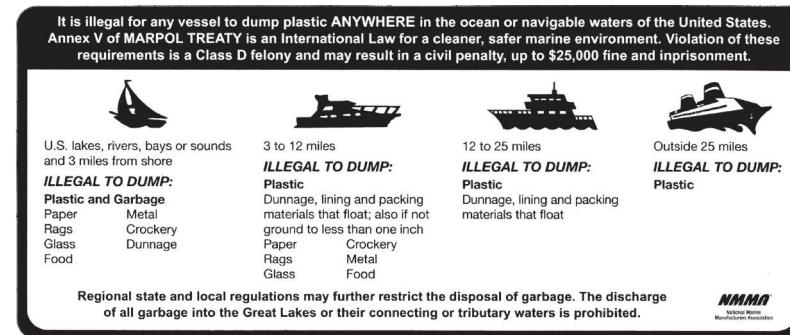

SAILFISH 245 DC | OWNER'S MANUAL - LABEL LOCATIONS

⚠ DANGER




CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.

STAY CLEAR OF BOAT AND STAY OFF SWIM PLATFORM AND BOARDING LADDER WHILE ENGINE IS RUNNING.

NMB-081-03

⚠ DANGER



Carbon monoxide (CO) can cause brain damage or death.

Engine and generator exhaust contains odorless and colorless carbon monoxide gas.


Carbon monoxide will be around the back of the boat when engines or generators are running.

Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

NMB-008-14

⚠ DANGER

- **CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.**
- **SHUT OFF ENGINES** while people are in the water near the boat, on the swim platform, or on the boarding ladder.
- **NEVER OPERATE IN REVERSE TOWARD A PERSON** in the water.



NMB-080-02

It is illegal for any vessel to dump plastic ANYWHERE in the ocean or navigable waters of the United States. Annex V of MARPOL TREATY is an International Law for a cleaner, safer marine environment. Violation of these requirements is a Class D felony and may result in a civil penalty, up to \$25,000 fine and imprisonment.

U.S. lakes, rivers, bays or sounds and 3 miles from shore	3 to 12 miles	12 to 25 miles	Outside 25 miles
ILLEGAL TO DUMP: Plastic and Garbage Paper Metal Rags Dunnage Glass Food	ILLEGAL TO DUMP: Plastic Dunnage, lining and packing materials that float; also if not ground to less than one inch	ILLEGAL TO DUMP: Plastic Dunnage, lining and packing materials that float	ILLEGAL TO DUMP: Plastic

Regional state and local regulations may further restrict the disposal of garbage. The discharge of all garbage into the Great Lakes or their connecting or tributary waters is prohibited.

NMMA

⚠ WARNING

CONTENTS CAN BE UNDER PRESSURE

AVOID SERIOUS INJURY OR DEATH FROM FIRE OR EXPLOSION

OPEN SLOWLY IN WELL VENTILATED AREA, NO SMOKING OR OPEN FLAMES



⚠ WARNING

Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, pesticides, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to www.P60warnings.ca.gov/marine.

NMB-020-19

MEETS U.S. EPA EVAP STANDARDS USING CERTIFIED COMPONENTS

SEMINOLE MARINE GROUP INC., CAIRO, GA

MAXIMUM CAPACITIES

12 PERSONS OR 1850 LBS.

2000 LBS. PERSONS, MOTOR, GEAR
300 H.P. MOTOR

THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION

MEETS U.S. EPA EVAP STANDARDS USING CERTIFIED COMPONENTS.

INFO: SEMINOLE MARINE

MODEL: SAILFISH 245 DC

CAIRO, GA

DESIGN COMPLIANCE WITH NMMA REQUIREMENTS IS VERIFIED. MANUFACTURED PERMANENTLY FOR REGULATION CONTROL.

 
NMMA
NATIONAL MARINE MANUFACTURERS ASSOCIATION

DISCHARGE OF OIL PROHIBITED

THE FEDERAL WATER POLLUTION CONTROL ACT PROHIBITS THE DISCHARGE OF OIL OR OILY WASTE INTO OR UPON THE NAVIGABLE WATERS OF THE UNITED STATES, OR THE WATERS OF THE CONTIGUOUS ZONE, OR WHICH MAY AFFECT NATURAL RESOURCES BELONGING TO, OR APPERTAINING TO, OR UNDER THE EXCLUSIVE MANAGEMENT AUTHORITY OF THE UNITED STATES, IF SUCH DISCHARGE CAUSES A FILM OR DISCOLORATION OF THE SURFACE OF THE WATER OR CAUSES A SLUDGE OR EMULSION BENEATH THE SURFACE OF THE WATER. VIOLATORS ARE SUBJECT TO SUBSTANTIAL CIVIL PENALTIES AND/OR CRIMINAL SANCTIONS INCLUDING FINES AND IMPRISONMENT.

NMMA

⚠ WARNING



Carbon monoxide (CO) can cause brain damage or death.


Engine and generator exhaust contains odorless and colorless carbon monoxide gas.

Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.

Get fresh air if anyone shows signs of carbon monoxide poisoning.

See Owner's Manual for information regarding carbon monoxide poisoning.

NMB-008-14

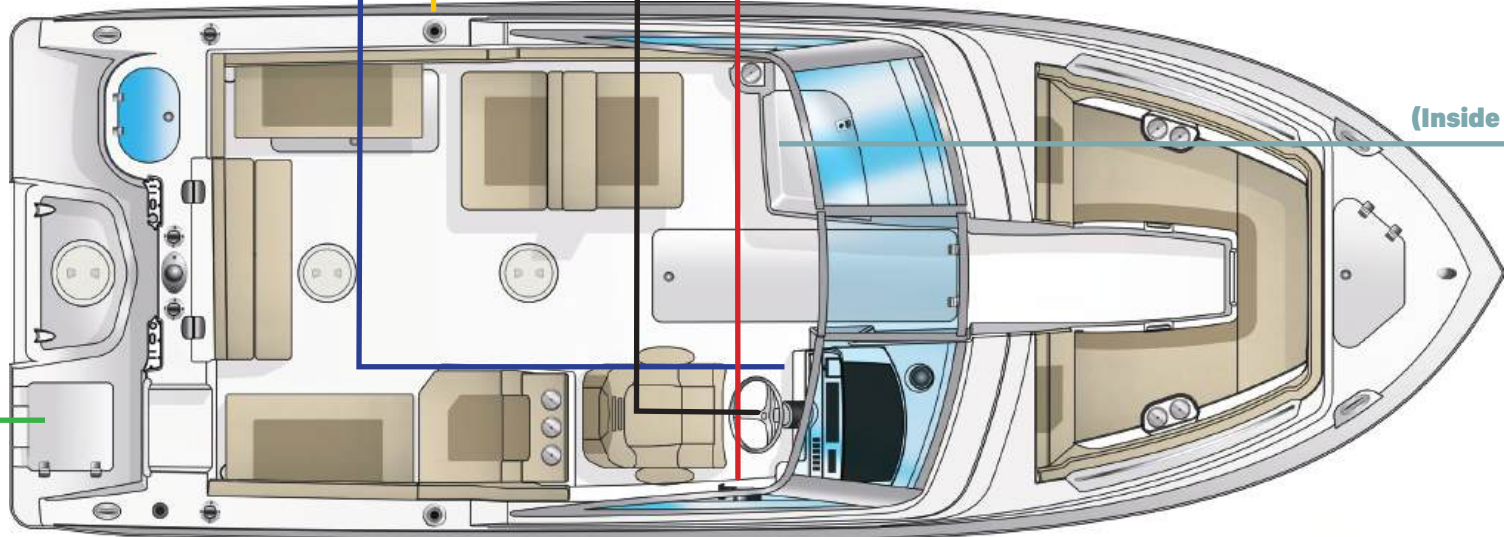

(Inside Head)

SAILFISH 245 DC | OWNER'S MANUAL - WARNING LABELS & NAVIGATION LIGHTS

If any of your Boating Safety or Warning Labels become damaged, please call Sailfish Boats' parts department for replacement stickers at 229-377-2125.

Your vessel comes equipped with navigation lights that meet or exceed all Coast Guard Requirements.

Never modify navigation lights.

Additional lights should not be installed, as they could diminish the visibility of navigation lights or be confusing to other boaters.

Navigation Lights should be replaced when intensity becomes diminished or the lights fail.

For proper replacements, please call Sailfish Boats' parts department for replacement lights at 229-377-2125.



THE SAILFISH PROMISE

Sailfish is committed to building **practical, purposeful, powerful boats** that deliver a premium boating experience without a premium price tag. Our customers and dealers know that our **build quality and safety are unsurpassed**, and our feature sets reflect intentional choices born of deep expertise. With our strong fishing heritage, we are **passionate about empowering anglers** for success while recognizing that those anglers deserve the **comfort, convenience and versatility to maximize their family's enjoyment** of the water.




SAILFISH 245 DC | OWNER'S MANUAL - UNASSISTED BOARDING

Unassisted Boarding Instruction

When using the ladder in an unassisted boarding situation, reach over the transom and open the covering board lid that is covering the ladder, pull ladder towards you, by picking up the ladder by the steps, release the strap, deploy the four step ladder by rotating it to the down position. Use your hand or foot to fully extend the ladder in the down position. Use the grab handle and ladder to board your boat. When fully onboard, be sure to place the ladder back in the storage position by reversing the deployment process.




SAILFISH 245 DC | OWNER'S MANUAL - BATTERY SWITCH WIRING

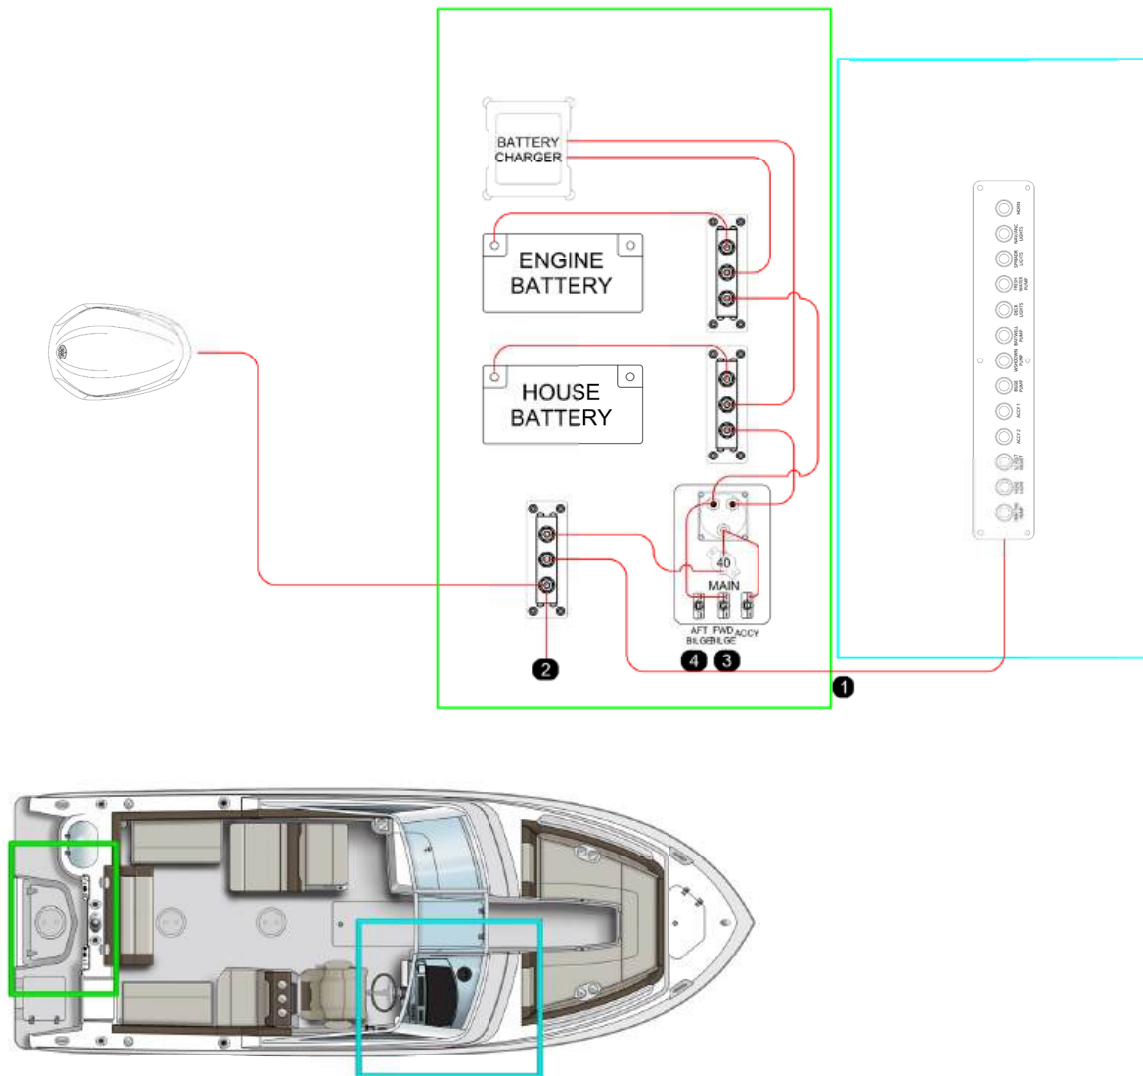

12




SAILFISH 245 DC | OWNER'S MANUAL - BREAKER PANEL SCHEMATIC

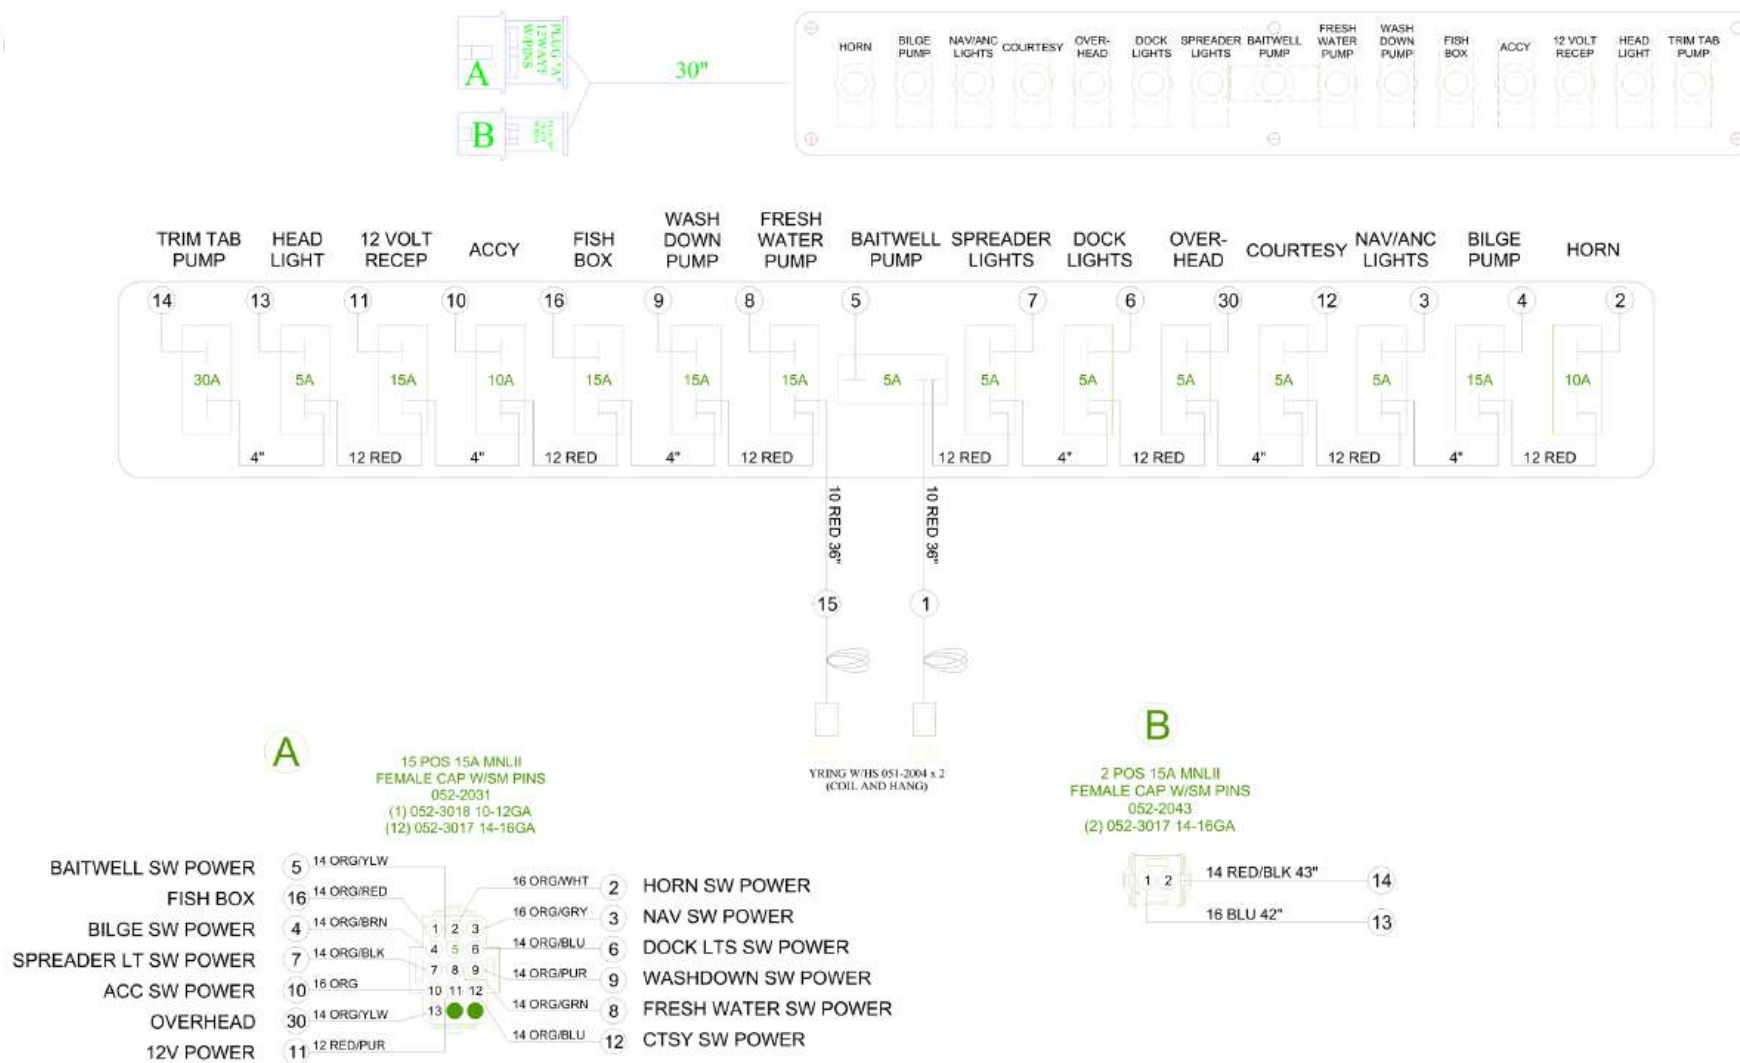

13


[Download High Resolution Diagram](#)

SAILFISH 245 DC | OWNER'S MANUAL - SWITCH PANEL SCHEMATIC

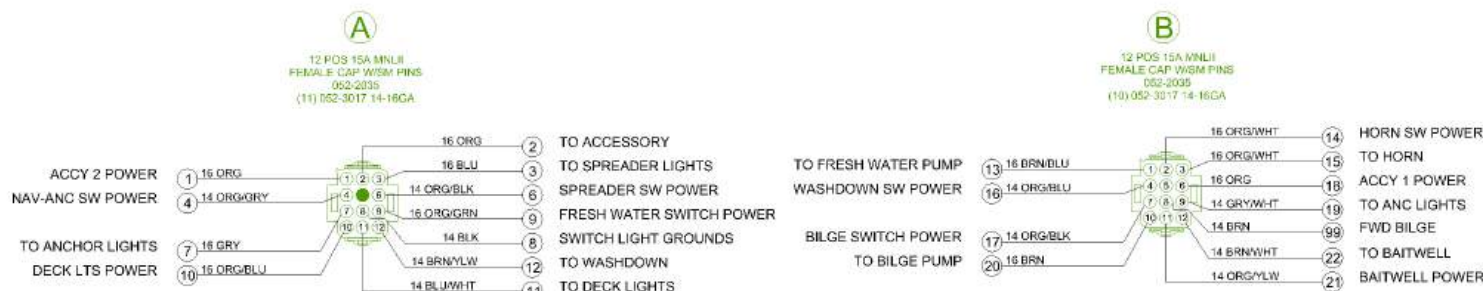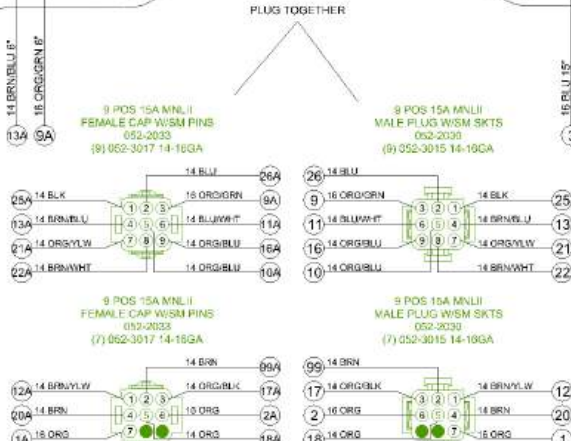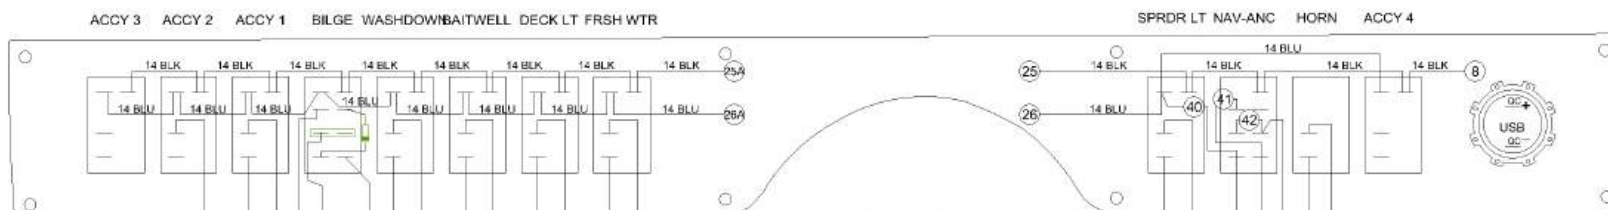

[Download High Resolution Diagram](#)

SAILFISH 245 DC | OWNER'S MANUAL - DISTRIBUTION HARNESS

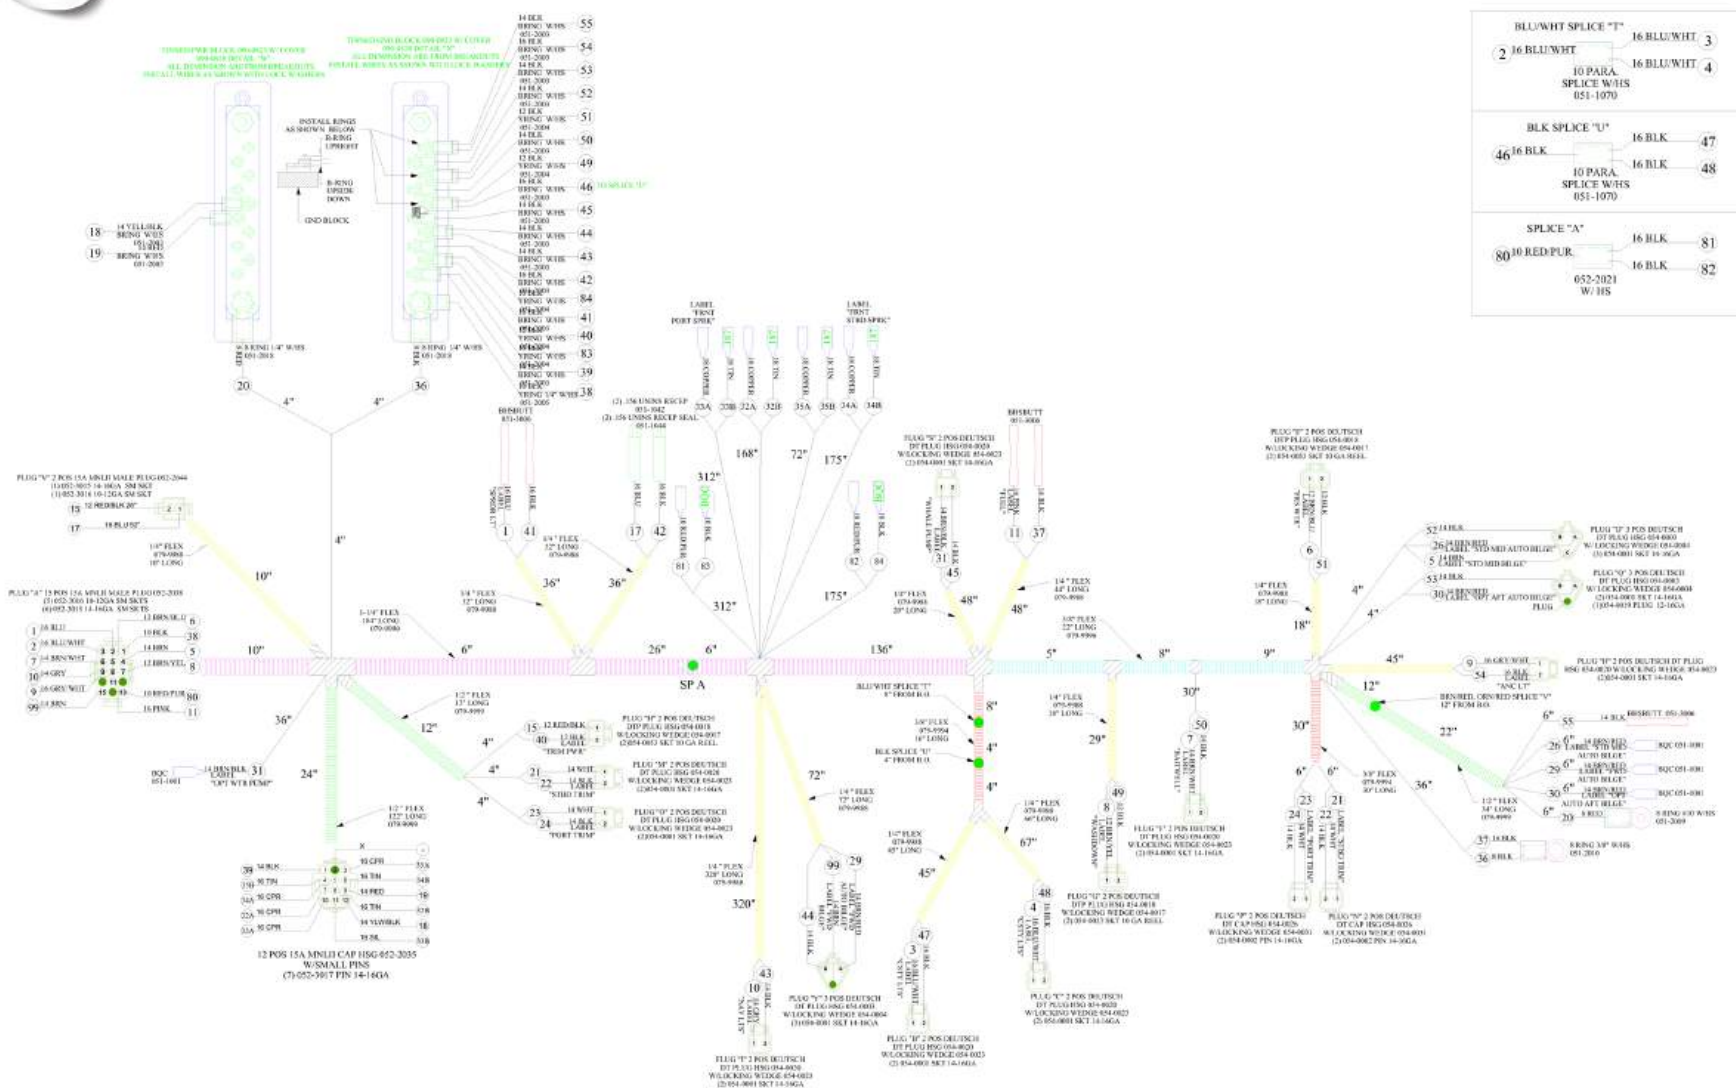

Download High Resolution Diagram




[Download High Resolution Diagram](#)


SAILFISH 245 DC | OWNER'S MANUAL - FUEL SYSTEM LAYOUT



KEY	DESCRIPTION
1	Primer Bulb
2	Fuel Filter Access
3	Fuel Tank Location
4	Fuel Pickup
5	Fuel Sender
6	Fuel Fill

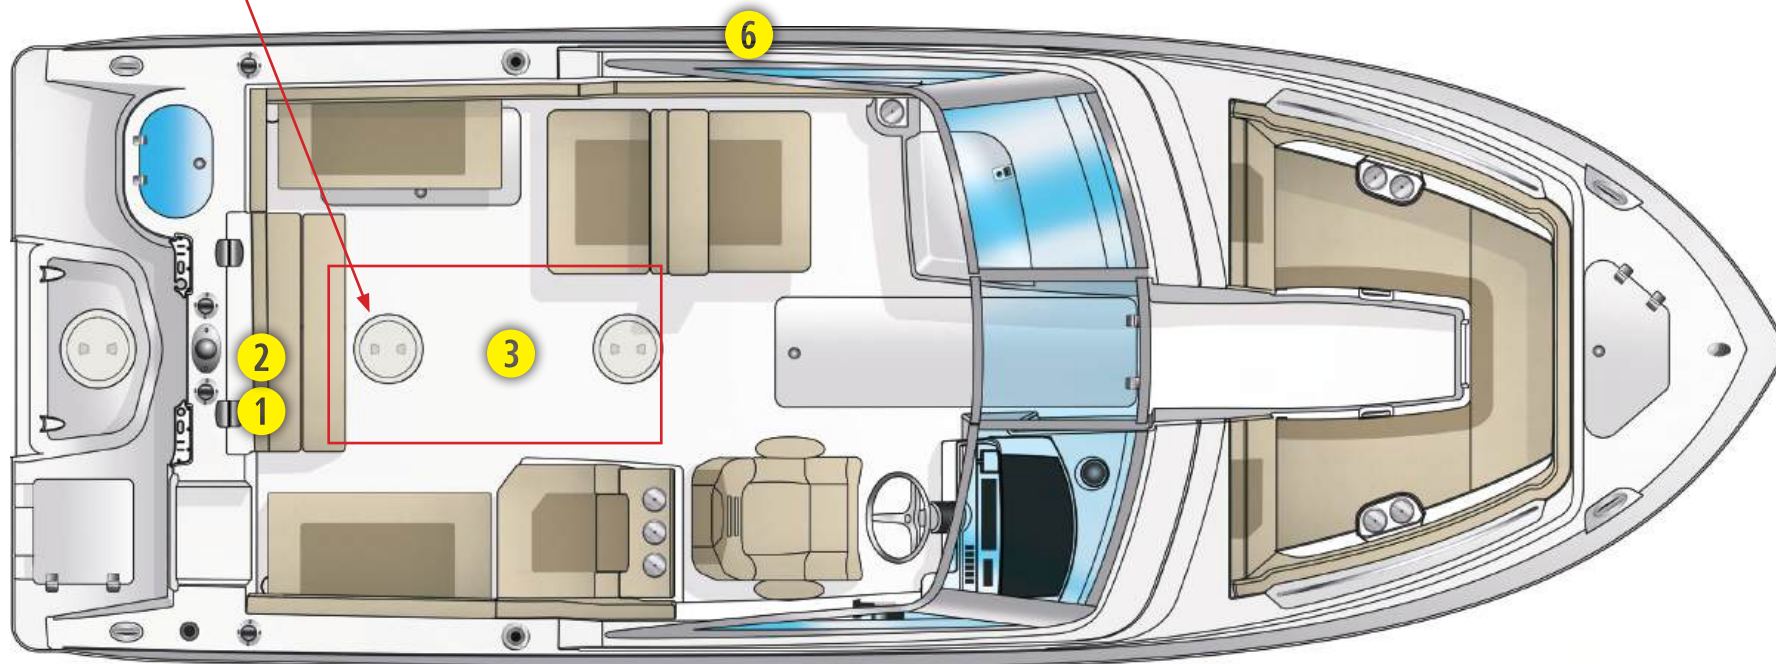


SAILFISH 245 DC | OWNER'S MANUAL - PLUMBING DIAGRAM

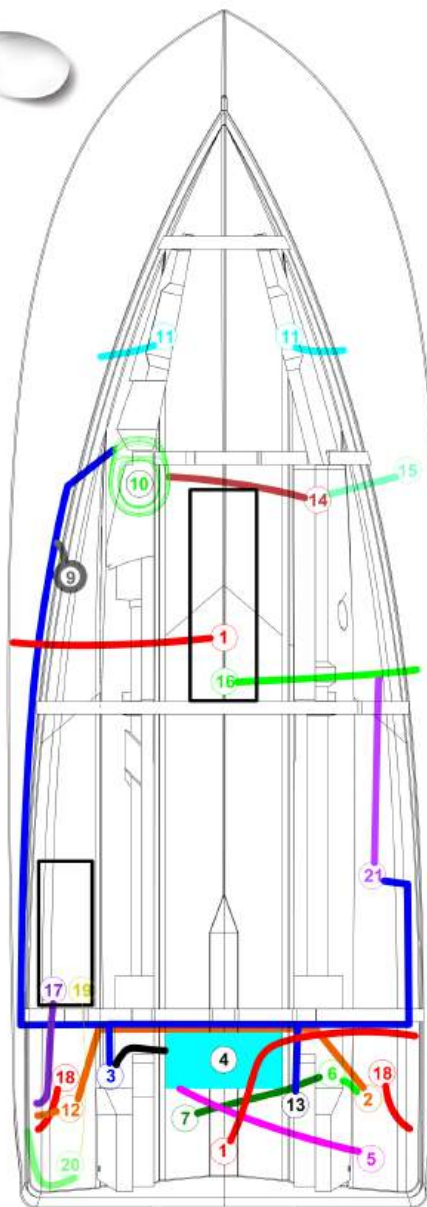

- | | |
|------------------------------------|----------------------------|
| 1. Bilge Pumps | 16. Ski Locker Deck Drain |
| 2. Livewell Pump/ Highspeed Pickup | 17. Aft Fishbox Deck Drain |
| 3. Fresh Water Pump | 18. Deck Drains |
| 4. Fresh Water Tank | 19. Aft Fishbox Drain |
| 5. Fresh Water Fill | 20. Gulper Pump |
| 6. Raw Water Pump | |
| 7. Raw Water Washdown | |
| 8. Optional Galley Freshwater Sink | |
| 9. Head Freshwater Sink | |
| 10. Fresh Water Marine Head | |
| 11. Fishbox Drains | |
| 12. Livewell | |
| 13. Transom Shower | |
| 14. Waste Tank | |
| 15. Dockside Pumpout and Vent | |

SAILFISH 245 DC | OWNER'S MANUAL - DASH LAYOUT

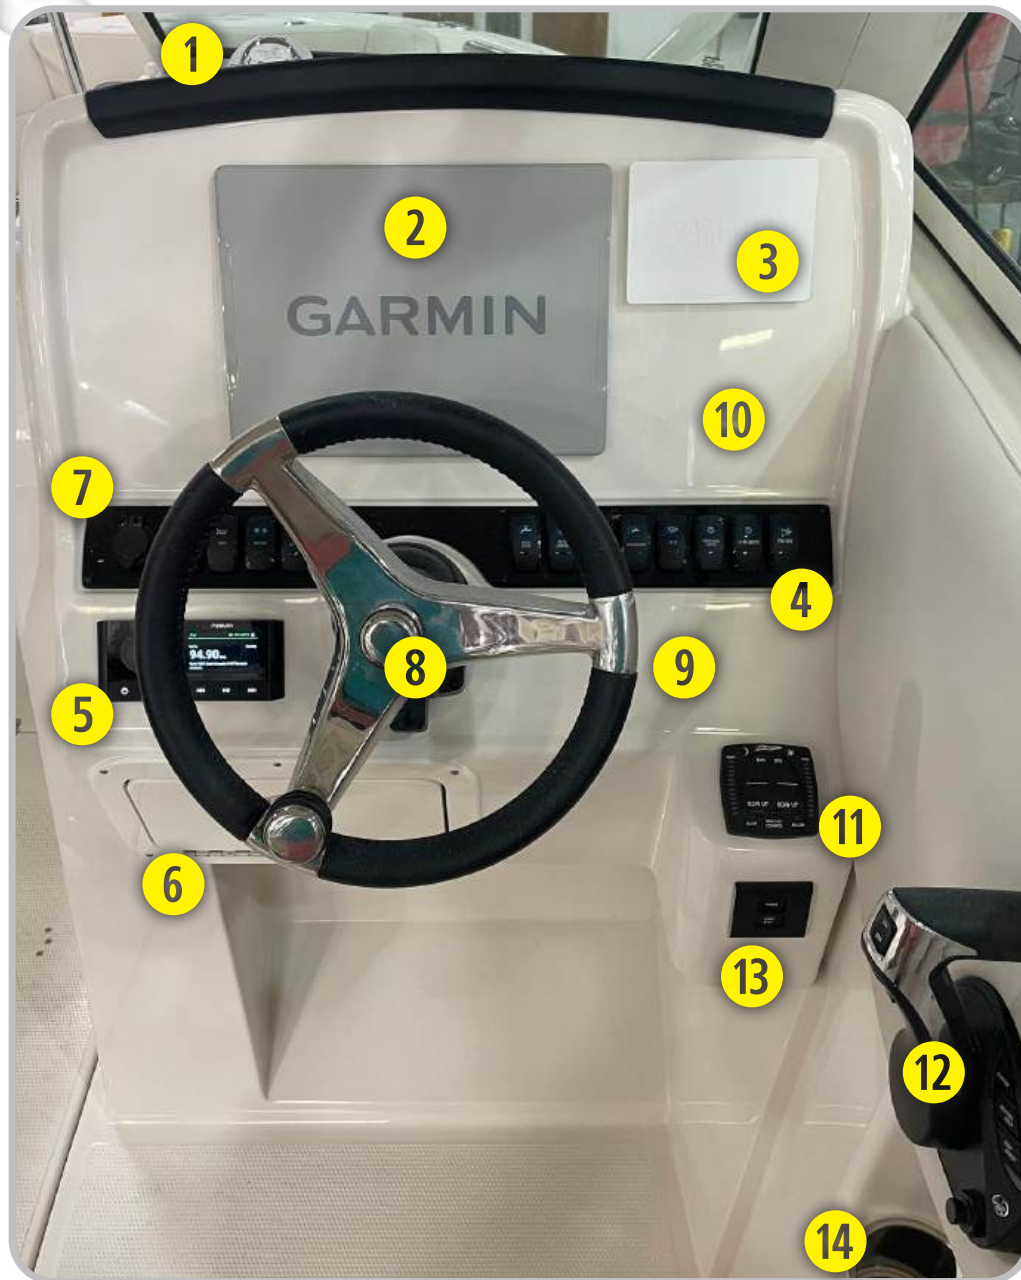

KEY	DESCRIPTION
1	Compass
2	Optional Multi-Function Display
3	Brand Specific Motor Guages
4	Switch Panel
5	Fusion Stereo
6	Glove Compartment
7	USB Port
8	Tilt Helm
9	Optional VHF (Not Shown)
10	Power Assist Steering Controls (Not Shown)
11	Trim Tab Actuator Switches
12	Binnacle and Emergency Shut-Off Lanyard
13	Ignition Switches
14	Cup Holder

19

Ignition Switches, Engine Shut-off Cord/Lanyard

Each Sailfish boat will be equipped with an ignition switch with an emergency engine shut off cord/lanyard.


This lanyard should be worn at all times while operating the vessel, if the vessel operator falls or moves a unsafe distance away from the helm controls the lanyard will pull out causing the engine to shut down.

Make sure the lanyard is not attached to a part of your clothing that could be easily torn free causing the switch not to pull. See your YAMAHA, MERCURY or SUZUKI owner's manual for more information on this safety feature.

Engine Break-In Period

Each new outboard motor will need to go through a break in period to make sure all of the internal moving parts and components have a chance to correctly mate.

For more information on the break in period specific to your engine please refer to your YAMAHA, MERCURY or SUZUKI Owner's manual.

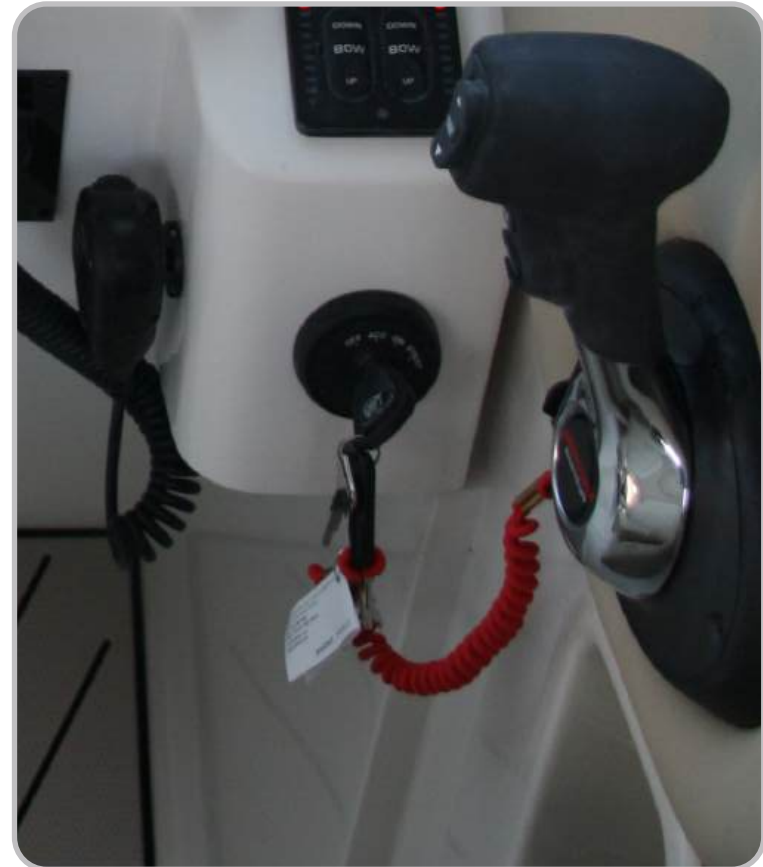

Plug and Play Wiring

Deutsch Connectors are quick disconnect plugs used for durability and ease of replacing components in your Sailfish Boat.

These water resistant plugs are for use in electrical systems where moisture, salt spray, dirt and dust could affect the electrical connections or systems.





Fuel-Water Separator

Sailfish installs water fuel separators in the bilge compartment on all models rigged with Yamaha & Suzuki engines. Each engine will have its own filter, which can be accessed through the bilge access doors in the back of the boat.

On Sailfish boats rigged with Mercury engine(s), the fuel-water separator(s) may be built into the engine - depending on the engine Model.

For more information on these filters, please review your Yamaha, Mercury or Suzuki Owner's Manuals.

SAILFISH 245 DC | OWNER'S MANUAL - CONSOLE / HEAD AREA

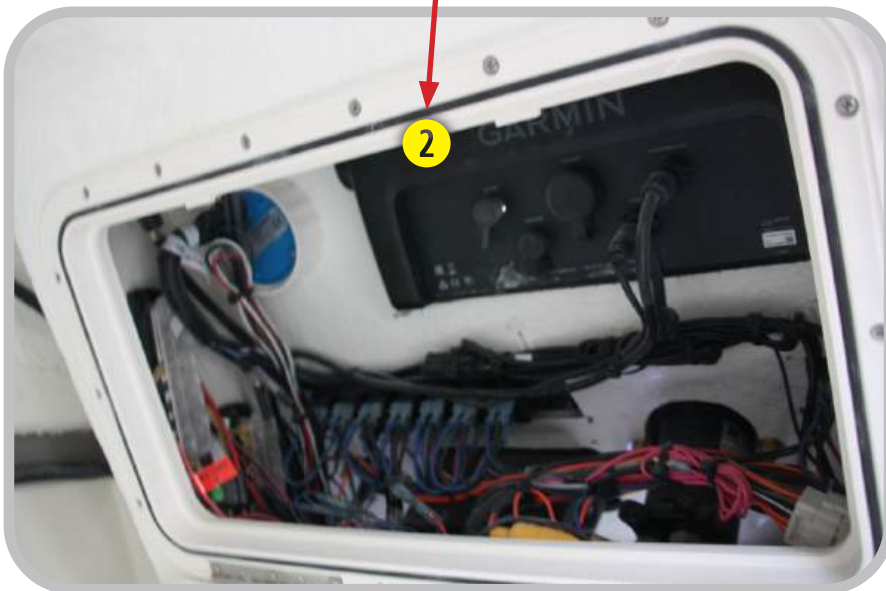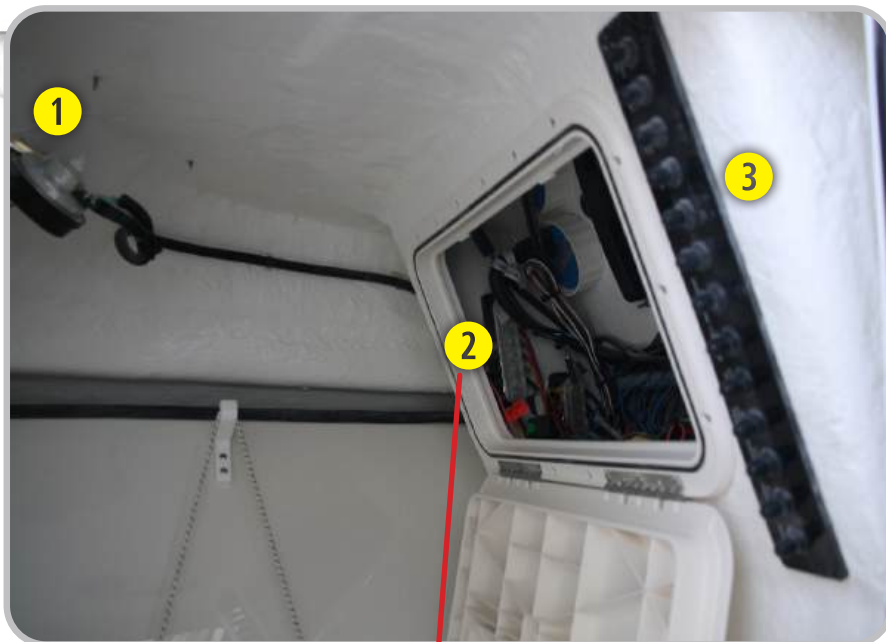

KEY	DESCRIPTION
1	Standard Horn
2	Large panel for easy access to Console Components
3	Breaker Panel
4	Available with Porta Potti or Optional Electric Marine Head



22

SAILFISH 245 DC | OWNER'S MANUAL - BILGE ACCESS & EXPLANATION

The bilge of your boat can be accessed through the large door in the aft of the boat. This large door allows easy access to many of the boats components.

You may also access it through the two access plates in the splash-well.

The bilge area of your sailfish boat should be checked before, during and after each operation.



SAILFISH 245 DC | OWNER'S MANUAL - BILGE PUMPS

All Sailfish Boats are furnished with Auto-Sensing Bilge Pumps, which are engaged when the water level rises in the bilge and the causing the pump to turn on until the water level falls to a sufficient level.

These pumps can be tested by turning them upside down, the pump should turn on, once turned back over it will run for a few more seconds and then shut off. The pumps also have a manual switch function on the main switch panel which when engaged, will cause the pump to run until the switch is turned off.

The auto function of the pumps are wired into your boat bypassing the battery switch so that they have power at all times, this safety feature will counter water intrusion (up to the capacity of flow of the system) while you are away from the boat and the batteries are turned off.

The manual switch function is powered through the battery switch to prevent the pumps from remaining on accidentally by inadvertantly leaving the switch on.

The Sailfish 245DC is equipped with an Aft - 2000GPH pump and a midship - 800GPH pump.

Never leave your vessel unattended while in the water for long periods of time and always monitor your batteries voltage level and bilge water level.



24



SAILFISH 245 DC | OWNER'S MANUAL - RAW WATER WASHDOWN SYSTEM

The raw water washdown on your Sailfish Boat is powered by a Shur-flo Pro Blaster Pump which creates a pressurized system, once the pump is turned on and pressure is created the pump will shut down until more pressure is needed.

The raw water washdown pump can be accessed through the bilge access door in the aft of the boat. The raw water washdown system uses the same seacock as the livewell, it is accessed in the bilge area. To operate make sure the seacock is in the open position.

The hose fitting for the washdown is located in the transom splash well, to use simply attach a hose with a nozzle and turn the switch on. Pressure will build up in the hose and the nozzle and as you spray the pump will continue to engage as needed.

THIS PUMP HAS A BUILT-IN STRAINER THAT MUST BE CHECKED AND CLEANED REGULARLY TO MAINTAIN PROPER FUNCTION.



SAILFISH 245 DC | OWNER'S MANUAL - FRESHWATER WASHDOWN & SHOWER

The freshwater shower system on your Sailfish Boat is powered by a Shur-flo Pro Blaster Pump which creates a pressurized system.

When the pump is turned on pressure is created to the freshwater shower, once the system is pressurized the pump will shut down until more pressure is needed.

You should allow a few seconds for the system to prime and pressurize before attempting to use the transom shower. The freshwater holding tank is located behind the fuel tank in the bilge area. The fill for this tank is located under the boarding ladder on the port side of the vessel.

The freshwater pump can be accessed through the bilge access door in the aft of the vessel.

THIS PUMP HAS A BUILT-IN STRAINER THAT MUST BE CHECKED AND CLEANED REGULARLY TO MAINTAIN PROPER




KEY	DESCRIPTION
1	Freshwater Fill



SAILFISH 245 DC | OWNER'S MANUAL - LIVEWELL OPERATION

Instructions

- Make sure the seacock in the bilge area is in the open position.
- Turn on the livewell switch.
- Adjust the black aerator in the livewell to the desired flow (shown in CLOSED picture).
- In order to fill the livewell, place the white stand pipe with the strainer into the center drain hole.
- To drain the livewell remove the stand pipe and the water will flow out the drain hole.

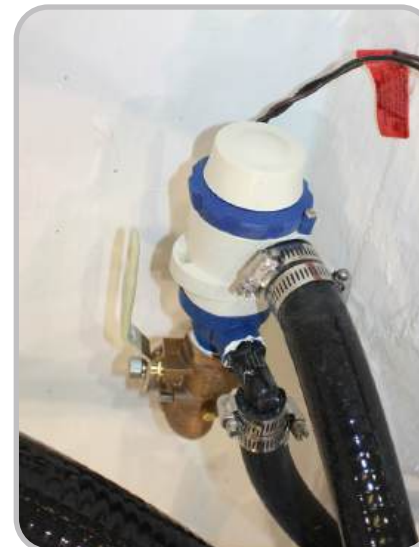

27



SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL RECTRACTABLE SKI TOW PYLON



1. Catch fingers under the top of the ski tow bar and pull up
2. After pulling up to use the tow bar, turn to the left to lock the tow pole in the UP position by finding and listening to the catch bar secure in place
3. To lower the tow bar, turn to the right for it to release and lower gently into place. DO NOT drop it

Use caution when raising and lowering the ski bar. Ski tow bar is heavy and can cause harm to fingers.

MAX WEIGHT LIMIT – 1,500 / 681 kg

*As shown on 276DC



28



WARNING - NOT TO BE USED TO TOW BOATS, JET SKIS, INFLATABLES OR SUCH. Designed ONLY for use for water sport activities.

SAILFISH 245 DC | OWNER'S MANUAL - FISHBOX PUMP

The 245DC is equipped with a diaphragm pump called the Gulper Grouper (pictured below right). The Whale Gulper Grouper pump has no impeller to clog or burn out, Unlike impeller pumps these have no-choke valves that easily pump out fish box waste.

They also offer long term durability, they can run dry without causing damage.

Troubleshooting

Electric Motor Runs but doesn't pump

- Disconnect pump and turn off all power.
- Disconnect hoses and unscrew housings.
- Check entire hose system for blockage.
- Inspect tricuspid valves for blockage or inverted valve(s).
- If valve(s) are blocked, remove blockage, re-assemble the pump and continue use.
- If a tricuspid valve is inverted, replace with a new tricuspid valve, reassemble the pump and continue use.

If the electric motor will not operate, check that:

- The isolator switch is on.
- There is 12 volts at the battery terminals.
- The in-line fuse / circuit breaker are operational.

If the fuse / circuit breaker has blown, check for debris in pump head and clean out if necessary. Replace the fuse or re-set circuit breaker and run the pump.



Entertainment Center

The Optional Entertainment Center on the 245DC comes standard with a fresh-water sink, and storage in the side.



SAILFISH 245 DC | OWNER'S MANUAL - BENNETT TRIM TAB MAINTENANCE

ELECTRICAL CONNECTIONS

- Periodically, check for clean electrical connections on all components.

COLD TEMPERATURES

- Cold temperatures do not affect the trim tab system. No winterization is necessary.

SACRIFICIAL ANODES

- To deter electrolysis, a sacrificial anode should be attached to the top of each trim tab. The anode must make direct contact with the stainless steel trim tab. Do not paint the anode. Do not ground trim tabs to other underwater appendages.

PAINT TRIM TABS TO DISCOURAGE MARINE GROWTH

- Clean surface of all grease, oil, dirt.
 - Apply two coats of epoxy metal primer.
 - Apply two coats of anti-fouling paint. Actuator, including the piston, may be painted.
- Unpainted trim tabs may acquire an orange discoloration. THIS OXIDATION OF SURFACE CARBON MOLECULES IS NORMAL. The integrity of the stainless steel is not affected. Orange coating can be cleaned off, but may eventually return. NOTE: This discoloration should not be confused with the pitting and corrosion of electrolysis.

MAINTENANCE PRECAUTIONS

- Take immediate action to correct any malfunction or failure of your trim tabs.
- Occasionally, check for loose or corroded wiring connections.
- Stepping on the trim tab may cause damage to the unit, or injury.
- Leaving the actuator extended when boat is not in use will NOT cause seal damage.

OPERATION PRECAUTIONS

- Do not over-trim, particularly at high speeds as the bow will dig in and wave action may cause the boat to veer.
- While underway, do not move one trim tab significantly farther down than the other as undesirable listing could occur.
- Use your trim tab helm control with caution.
- For best maneuverability, trim tabs should be fully retracted in a following sea, or when running an inlet.
- Improper use of trim tabs can cause an accident or injury. Bennett Trim Tabs have a significant effect on the operation and versatility of your boat. No one knows your boat better than you. The best learning method is to spend time getting familiar with your boat's reaction to the trim tabs. As your experience with Bennett Trim Tabs increases, so will your enjoyment. Always operate your boat with safety first in mind.

31



 **SAILFISH**
BOATS

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL WINDLASS

If your boat has a factory installed windlass, then there will be a complete owners' manual in your owners packet. For more detailed information please refer to your windlass owner's manual.

Included on this page are some maintenance recommendations and a troubleshooting guide.

Maintenance

General Recommendations

- After the first two or three anchor recoveries, check the mounting nuts to ensure that the windlass is still fastened tightly to your deck, as it should now be bedded-in.
- Regularly wash down the exterior of your windlass with fresh water.
- Examine all electrical connections for possible corrosion, clean and lightly grease as necessary.
- Anchor rode splice should be checked regularly and remade if there is any evidence of wear.
- The Gypsy should be examined on a regular basis, because it is a high wear item. The Gypsy is designed for short scopes of chain and will last longer if properly used.

The windlass breaker is mounted below the battery switch in the hatch located on starboard side of the walk-through transom doorway.

Troubleshooting

Anchor Rode pays out independently while windlass is not in use

This problem is a result of not securing the anchor rode combined with the Gypsy Drive Cap being slack. Tighten the Gypsy Drive Cap using the tool provided and always secure the anchor rode independently of the windlass whenever it is not being deployed or recovered.

Electrical Troubleshooting

As with most electrical marine equipment the majority of problems that arise are electrical in nature. Therefore it is essential that the proper voltage be maintained. The proper voltage on a 12 Volt system is 12.5-13.5 Volts. (Constant low voltage will destroy the motor). If possible, use the windlass while the engine is running to allow the power to the windlass to be provided by the engine's alternator.

Follow the charts on the following page to troubleshoot the problem.

32



Failure to Operate Troubleshoot Chart: Reversing Toggle Control Switch (Part No. 0052519)

Is there voltage at the input terminal (positive) to the control switch?	If no voltage is present, the battery isolation is OFF, the breaker is tripped or a fuse has blown. The battery may also have been dead or disconnected.
Yes ▼ No ►	
Check voltage at the output terminals of the control switch with the switch on forward then reverse.	Control switch is defective.
Yes ▼ No ►	
Replace Motor	

Sluggish Operation Troubleshoot Chart

Is windlass overloaded?	Ease the load and ensure the battery is well charged.
Yes ▼ No ►	
Check the voltage across the motor leads with the windlass on. (Proper voltage is 13.5V. Constant low voltage will destroy the motor).	There is a severe voltage drop in the circuit. Check for undersized cables, poor connections or corroded connections. Also check for resistance across the battery isolation switch or solenoid. (Feel them to see if they are heating up).
Is the voltage low? (Below 11.0V on a 12V system?)	
Yes ▼ No ►	
Is the voltage correct? (Above 11.0V and anchor is not fouled).	The motor is defective. Replace the motor.
Yes ▼ No ►	

SAILFISH 245 DC | OWNER'S MANUAL - UFLEX HYDRAULIC STEERING SYSTEM



Mercury & Suzuki powered Sailfish Boats come standard with UFLEX Hydraulic Steering, a full stainless steel shaft; cylinders are built with carbon steel pistons, coupled with extra-large end caps to prevent leakage.

All of their connection materials are 304 stainless steel that has been electro-polished and passivated.

[For more information on the service and maintenance of your UFLEX system, refer to the manufacturer's documentation.](#)

Visit the [manufacturer's website](#).





MasterDrive™ is a power assisted steering system operated by an electrohydraulic pump which delivers fingertip control regardless of speed or torque conditions, ensuring full control of the boat both during maneuvers and in bad sea conditions.

The MasterDrive™ is made up of three main components: helm, power unit and user interface. The user interface, which is located on the boat dashboard, allows the boater to select three different power modes according to the sailing conditions:

- Fishing
- Cruise
- MasterDrive™

SAILFISH 245 DC | OWNER'S MANUAL - YAMAHA ELECTRIC STEERING

Helm Master EX offers boaters customizable, integrated boat control with more ease and convenience than ever before.

Yamaha's Digital Electronic Steering (DES) is the electronically controlled steering system is the Industry-first integrated electric steer-by-wire system. Unlike aftermarket steering systems, it is digitally connected from the helm to the engine. It offers stable and assured steering and also steering setting can be changed depending on various boating situations.

For more information on the use of your Yamaha Helm Master EX steering system please refer to your Yamaha owner's manual or view supplemental videos at <https://yamahaoutboards.com/owner-center/videos/helm-master-ex/>



36



 **SAILFISH**
BOATS

SAILFISH 245 DC | OWNER'S MANUAL - PORTA POTTI

Prepare Unit

- Separate tanks (Fig. 1A & 1B).
- Add Deodorant (Fig. 2A & 2B) and 4-oz of water.
- Close valve (Fig. 2C).
- Recombine Tanks (Fig. 3)
- Fill upper tank with fresh water (Fig.4). Replace cap and tighten securely.







NEVER add deodorant to fresh water tank.

Before Use

Vent any built-up heat or altitude pressure and prevent splashing: close cover (Fig. 5A), and open and close holding tank valve (Fig. 5B).

To Flush

- Open Valve (Fig. 2A).
- Bellows: Fig. 6.
- Piston Pump: Fig. 7.
- Electric Flush: Fig. 8 For best rinse and efficient water use, press button quickly several times.
- Close valve completely for odor-tight seal (Fig. 2C).

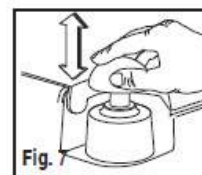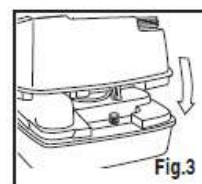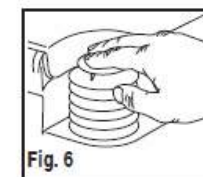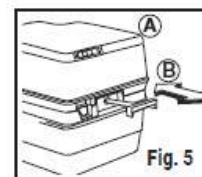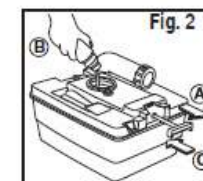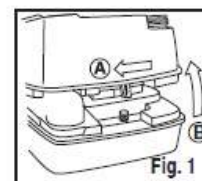

37

Deodorizing

Recommended holding tank deodorant for best performance:

Thetford SupremeGreen
Thetford Aqua-Kem
Thetford Campa-Chem



Care

Recommended cleaner:
Thetford Aqua-Clean

NEVER use scouring powders, acids or concentrated cleaners, which can damage plastic parts and rubber seals.



Service & Parts




For parts and/or service, contact your RV Dealer.

For warranty issues or more information, call Thetford's Customer Relations Department:
1-800-521-3032.



Emptying Waste Tank

1. DO NOT OVERFILL TANK. Empty when waste level indicator turns from green to red (Fig. 9). (Toilet without an indicator: open valve to check visually).
2. Be sure valve handle is closed. Separate tanks (Fig. 10).
3. Carry waste tank to a permanent toilet.
4. Remove Pour-Out Spout Cap while it is pointing upward (Fig. 11).
5. Press Air relief valve to prevent splashing (Fig. 12).
6. Rinse, recharge and reassemble unit.

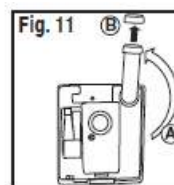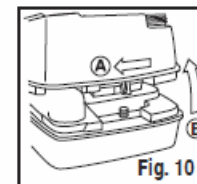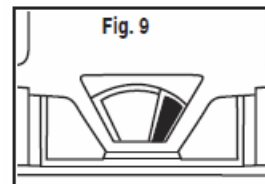

38

Deodorizing

Recommended holding tank deodorant for best performance:

Thetford SupremeGreen
Thetford Aqua-Kem
Thetford Campa-Chem



Care

Recommended cleaner:
Thetford Aqua-Clean

NEVER use scouring powders, acids or concentrated cleaners, which can damage plastic parts and rubber seals.




Service & Parts

For parts and/or service, contact your RV Dealer.


For warranty issues or more information, call Thetford's Customer Relations Department:
1-800-521-3032.

Type III MSD Waste Management System

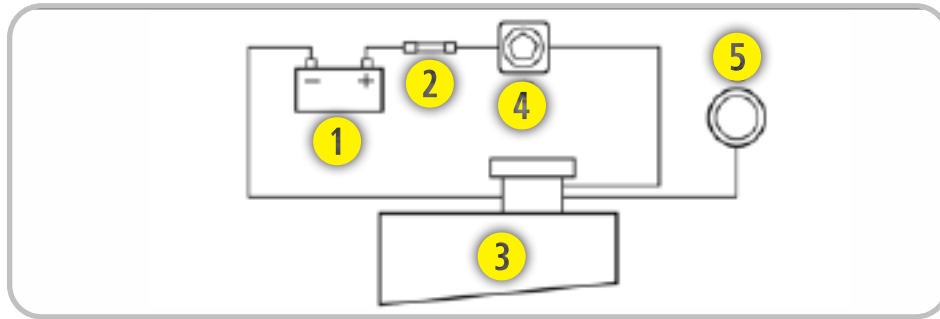

KEY	DESCRIPTION
1	Battery
2	Fuse
3	Waste Management System
4	Master Switch
5	Controller for Waste Management System



39

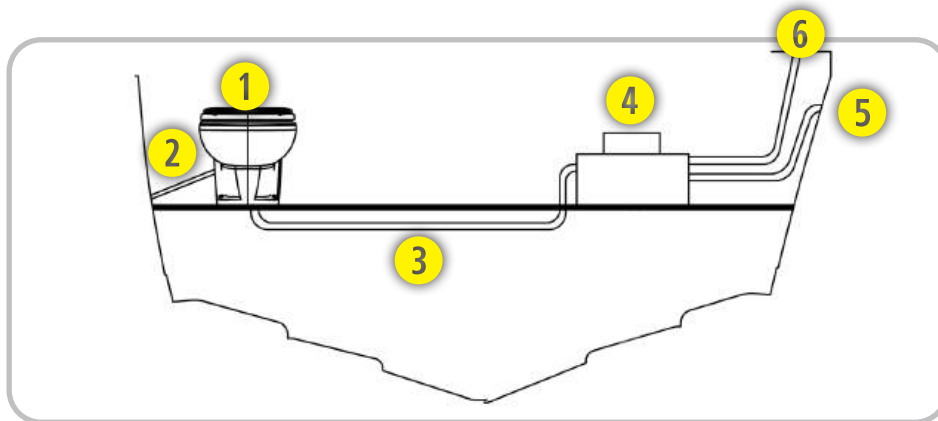

KEY	DESCRIPTION
1	Toilet
2	Inlet
3	Vertical Loop Outlet
4	Waste Holding Tank
5	Vent
6	Deck Pumpout

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL TYPE III MSD WASTE MANAGEMENT SYSTEM

Dometic MasterFlush

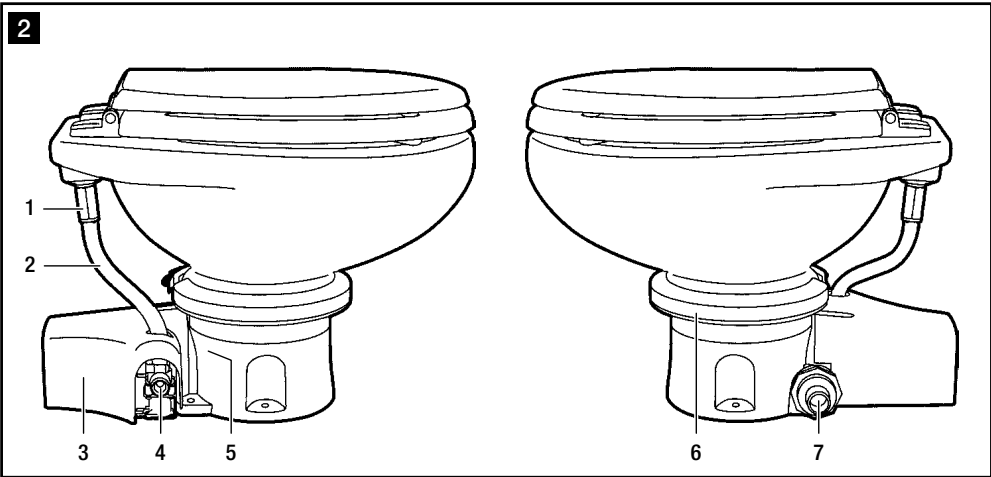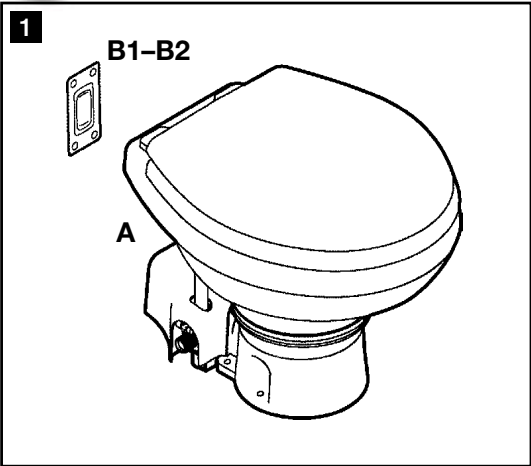

Components

Installed toilet (fig. 1)

Ref.	Description
A	Macerator toilet
B1	DFS-2F flush switch (standard - freshwater flush toilet)
B2	DFS-1F flush switch (standard - sea water flush toilet)
NS	DFST flush switch (optional) NOT SHOWN

Toilet components (fig. 2)

Ref.	Description
1	Rim flush check valve (freshwater toilet) or adapter (sea water model)
2	Water supply hose
3	Macerator pump (under plastic cover)
4	Electric water valve
5	Product ID label location
6	Stainless steel compression band
7	Discharge fitting

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL TYPE III MSD WASTE MANAGEMENT SYSTEM

Dometic Flush Toggle Switch

Toilet System Start-Up

1. Turn on Fresh Water Supply to toilet.
2. Press "Add Water" and Hold until desired water level is achieved.
3. Press "Flush" and Hold for at least 10 seconds.
4. Toss Several Sheets of toilet paper into bowl and repeat cycle. The bowl should completely clear

Flushing Toilet

Press "Add Water" switch and hold until desired water level is achieved. (Do not press "Add Water" switch too long or overflow may occur.)

Press "Flush" switch down and hold until waste drains from toilet bowl (about 10-20 seconds). This switch activates a macerator pump that siphons water and waste from the bowl, macerates, and propels the effluent to the discharge line / holding tank.



41



Caution: Do not operate toilet without water supply turned on. Damage to internal components may occur.

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL TYPE III MSD WASTE MANAGEMENT SYSTEM

Full Tank Monitor

- Your vessel is equipped with a waste tank level monitor and shut down relay which will disconnect power from the toilet when the waste tank becomes full. This is intended to prevent damage from flushing waste while the holding tank is already full.
- Pump out the waste holding tank to allow the marine head to reset the system and allow the marine head to flush again.
- When the waste holding tank is full, the LED Indicator shown below will light up.



Standard Dometic Tank Monitor

42



All Toilets are equipped with a “Full-tank” shut-down relay.

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL TYPE III MSD WASTE MANAGEMENT SYSTEM

Maintenance & Winterizing

Cleaning the toilet

To maintain the toilet's original, lustrous appearance, use Dometic® Toilet Bowl Cleaner or other non-abrasive bathroom and toilet bowl cleaners. Please follow label directions.



Caution

To avoid damaging internal seals, do not clean toilet with abrasive cleaners, caustic chemicals, or lubricants and cleaners that contain alcohols or petroleum distillates.

Routine maintenance

MONTHLY

1. Inspect toilet, plumbing, and plumbing connections, wires, and wire connections.
2. Open and close all plumbing valves, including seacocks.
3. Check in-line water filters and vented loops for blockage.

YEARLY

Check water valve filter. Also check water valve filter if water flow into toilet becomes insufficient.

During extended periods of non-use

The macerator toilet and sanitation hoses should be protected if toilet will not be needed for an extended period of time (more than two weeks, especially in hot weather).

1. Flush toilet and add 4 oz. (118 ml) of liquid biodegradable laundry detergent (should NOT contain bleach or environmentally harmful substances). Note: If using sea water for flushing, shut off power to sea water pump and add fresh water directly into the bowl during the flush cycle.
2. Flush toilet at least five times.
3. Turn off water supply to toilet.
4. Flush the toilet without water very briefly to evacuate all water. (This procedure will minimize any remaining water in the macerator pump.)



Caution

During water evacuation process, do not operate sea water pump very long without water. Pump impeller may become damaged.

5. Turn off power to the toilet.
6. After extended periods of non-use, toilet and pump may dry. For easier re-start of toilet system, add one quart of water to bowl and let it stand for a few minutes before use.



Caution – Do Not Flush Foreign Objects!

Flush only water, bodily wastes and rapid-dissolving toilet tissue. Do not flush wet wipes, sanitary napkins, condoms, diapers, paper cups, cotton swabs, food, hair or liquids such as oils or solvents as clogging or damage to the toilet or toilet system may occur.



Note

Make sure all guests understand toilet operation before use.

43

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL TYPE III MSD WASTE MANAGEMENT SYSTEM

Maintenance & Winterizing

At the end of each season, the Dometic macerator toilet should be winterized for storage by using potable water-safe antifreeze (if boat or vehicle will be exposed to freezing temperatures).

If system will be subjected to freezing temperatures, please follow procedures in section 7.3, "During extended periods of non-use", and then winterize system as described here.



Note

Use nontoxic antifreeze designated for potable water systems. (See boat or vehicle owner's manual.)



Caution

Never use automotive-type antifreeze in freshwater systems.

44

PRESSURIZED FRESH WATER SYSTEM

1. Drain potable water tank and empty holding tank.
2. Add freshwater antifreeze to potable water tank.
3. Flush potable water antifreeze and water mixture through toilet(s) and into entire system, including the waste holding tank, diverter valve connections, discharge pumps, etc. Turn off power to toilet.

Each installation is different, so amounts may vary. User discretion is required to assure adequate protection.

NOTE: This is a freshwater marine head system that runs off the boats freshwater tank, using the head will effect the boats freshwater supply.

SAILFISH 245 DC | OWNER'S MANUAL - OPTIONAL TYPE III MSD WASTE MANAGEMENT SYSTEM

TROUBLESHOOTING

Problem	Possible Cause	Service Instruction
1. Flush function works, but water in bowl empties slowly or not at all.	<ul style="list-style-type: none">a. Discharge piping is pinched or kinked.b. Discharge piping is too high. (Remember, all upward vertical loops and should not exceed a total of 4 feet (1.2 m) in height.)c. The macerator pump or discharge piping is blocked.	<ul style="list-style-type: none">a. Check discharge piping.b. Reroute discharge piping.c. Close seacocks and clear blockage.
2. Macerator pump makes unusually loud noise or continually trips breaker.	<ul style="list-style-type: none">a. Foreign material in pump chamber.	<ul style="list-style-type: none">a. Close seacocks and clear foreign material.
3. Flush cycle is not activated after pushing on flush switch.	<ul style="list-style-type: none">a. Holding tank is full and signal from tank has shut down electrical power to toilet.b. Electrical power to toilet is shut off or disrupted.c. Flush switch is malfunctioning.	<ul style="list-style-type: none">a. Empty holding tank.b. Check wiring and circuit breakers (or fuses).c. Replace flush switch.
4. Insufficient or no water enters the bowl.	<ul style="list-style-type: none">a. Water supply line is pinched or kinked.b. Screen in water valve is blocked.c. Intake water filters are blocked (in sea water system).d. Water valve is malfunctioning.	<ul style="list-style-type: none">a. Check water supply line.b. Clear blockage at water valve.c. Clear water filters.d. Replace water valve.

DOs

Reactive & Preventative Cleaning

- Clean the material immediately if it comes in contact with substances like grease, blood, sauces, lipstick, wine, or coffee to prevent permanent stains and/or build-up.
- Clean at least once a week to extend the lifespan of the upholstery. This prevents dirt and other contaminants from building up and stains from becoming permanent. If there is a spill, wipe off any excess right away with a dry cloth, making sure not to spread it all over the surface.
- Clean the whole surface in circular motions using liquid hand soap (pH neutral) and water (1 part soap : 9 parts water). Wipe with a clean damp cloth to get rid of any excess soap. Repeat as needed and then let dry. Check the Spradling website for a complete list of approved cleaners. (<https://spradling.group/en-us/products/simtex?reference=Plata>)
- If there is any build-up that can't be removed with soapy water, then use this as a last resort. Mix 1 part isopropyl alcohol to 1 part water. (Using alcohol on a regular basis can affect the properties of the product.)
- Once a month, use a soft bristle brush for a deeper cleaning. Lighter colors need more care, more often.

DON'Ts

Techniques never to use

- Solvents like paint thinner, varsol, acetone, whiteners, waxes, silicones, detergents, and/or cleaning products that are not pH neutral.
- Products that are more than 50% alcohol.
- Never make marks on the product with pens or markers as it may absorb the ink and stain permanently.
- Cleaning tools like plastic or wire sponges, or hard-bristle brushes that can damage the material permanently.

46

Remember

- It is important to note that this guide is not a warranty. It has recommendations for properly using and cleaning our upholstery products. Users are responsible for using and cleaning the coated fabrics safely with products that don't affect the surface, composition, or, as a result, their performance and lifespan.
- Cleaning results may vary depending on the size of the stain, cleaning product used, and time the surface is exposed.

The information provided is designed to give you a thorough understanding of the factors that can impact the appearance of your anodized aluminum. By using this information, we hope to help you enhance the beauty and value of our products.

What Causes It?

Corrosion is a natural phenomenon that affects metals by either a chemical or electrochemical reaction. The rate at which aluminum corrodes depends greatly

on the environmental conditions and the amount of preventative maintenance performed. Our goal is to slow down or stop this natural phenomenon we call pitting (or corrosion).

Anodized Aluminum

The aluminum on your boat has been anodized. This creates a very hard protective seal on the surface of the aluminum to protect it as much as possible from pitting. When the anodized coating is broken and raw aluminum is exposed,

corrosion will take place. Damage from other abrasive impacts can break the anodized coating.

Chemical Attack

Corrosive chemicals containing high concentrations of acids or alkalis will remove the anodized coating. Solutions containing chlorine, salts, or ammonia are all harmful to the anodized aluminum on your boat. Many common household cleaners contain chemicals that will remove the anodizing and cause pitting.

47

Avoidable	Unavoidable
Strong acidic solutions found in cleaners, paint remover, degreasers, etc.	Airborne pollution. Airborne particles from local sources: vehicles, incinerators, paper mills, chemical plants, power plants, etc.
Concentrated alkaline based solutions. Many concentrated soaps fall into this category.	Harsh chemicals from work performed at local shipyards and dry docks.
Chlorine, sulfurs, solvents and ammonia based products.	Be aware of local sources that can expose your new boat to corrosive chemicals.



Tips

Avoid the use of bleach or chlorides to clean the aluminum or nearby components. Chlorides can leach onto the aluminum when used nearby.

Avoid abrasive cleaning products. Never use steel or brass wool, wire brushes, polishing wheels, rubbing or polishing compounds. These items will remove the anodizing and lead to pitting.

Protective Products

There are many different products available to protect aluminum. Some are designed to seal and protect before problems occur and others are designed to use after pitting has appeared.

While these products are effective, they are not one time solutions. Metal protectors must be reapplied on a regular basis. How often a protector should be used varies according to the protector you choose, the types of exposure your

boat is subjected to, and how often you use and wash your boat. Follow the application guidelines provided with the protector you choose.

Harmful Cleaners

Bleach (Chlorox, etc.)

Mild abrasive cleaners (Ajax, Comet, Soft Scrub, Rubbing Compounds, etc.)

Strong cleaners (409, Engine Degreasers, Bilge Cleaners, Teak Cleaners, Bottom Cleaners, etc.)



Below are some metal protection products that are readily available at marine retailers.

Woody Wax CPR	Woody Wax woody-wax.com 800-619-4363
Boeshield T-9	PMS Products, Inc. boeshield.com 800-962-1732
Premier Polish	Aquatech aquatech-marine.com 800-853-7760
Corrosion Block	Lear Chemical learchem.com 800-256-2548

The information provided is designed to give you a thorough understanding of the factors that can impact the appearance of your stainless steel. By using this information, we hope to help you enhance the beauty and value to our products.

What Makes Stainless Steel Stainless?

Oxygen is the key element in causing rust, or red oxide on steel and other metals. Stainless Steel contains Chromium which reacts with the oxygen in the air to form a chrome-oxide surface layer that is invisible to the eye, but strong enough to prevent further oxygen from "staining" (rusting) the surface. Higher levels of Chromium and the addition of other alloying elements such as nickel and molybdenum enhance this surface layer and improve the corrosion resistance of the stainless material.

What Determines Different Grades of Stainless Steel?

The grade of Stainless Steel is primarily determined by the amount of the Chromium and Nickel alloys contained in the material. 304 and 316 are the prominent grades of Stainless Steel: 304 contains 1% Chromium and 8% Nickel, while 316 Contains 16% Chromium and 10% Nickel and 2% Molybdenum. The Molybdenum is added to help resist corrosion to chlorides (like sea water and de-icing salts).

Can Stainless Steel rust?

Not in the way steel rusts. Steel will discolor, bubble and flake from red oxide development. Stainless Steel may develop red spots, but this is usually due to Iron particles on the surface of the Stainless Steel. Any Iron particles must be removed and the Stainless Steel cleaned with a high concentration of citric acid or a commercial cleaner specifically designed for Stainless Steel.

Is Stainless Steel Green (Environmentally Friendly)?

Stainless Steel is highly sought after by recyclers and is 100% recyclable. New Stainless Steel typically has a recycled content of between 65% & 80% which makes it one of the highest average content recycled construction materials on the planet.

Will Stainless Steel Discolor?

Cleaners that are typically used with cement, grout and stone, etc., may contain Muriatic Acid. Stainless Steel is not resistant to Muriatic Acid. MURIATIC ACID SHOULD NOT BE USED IF STAINLESS STEEL IS PRESENT. It is not even necessary that the acid touch the Stainless Steel, just the "fumes" from it will cause a discoloration of the Stainless Steel. Other than this, Stainless Steel is usually very resistant to discoloring.

49



50

1. If you have been offshore, be sure to spray the windshield liberally with a hose to melt and wash away any salt crystals.
2. Use commercially available glass cleaners or a mixture of fresh water and white vinegar. Do not use abrasives, harsh chemicals, or metal scrapers. Regular cleaning will help assure clarity of the glass for safe boating.

Your Boat's Gel Coat Finish

Congratulations! You are the proud owner of a new Sailfish. You are also the owner of a new gel coat finish on the hull and/or topside, and we would like you to be as proud of it as we are. That beautiful, shiny new color you love is the result of many years of gel coat research, testing and development.

But as proud as we are of the gel coat, no finish is totally impervious to chemicals and weathering. Imagine what a brand new car could look like if allowed to sit at a marina for years with no cover and no washing or waxing. With the same minimum maintenance you would ordinarily give your new automobile's finish, your boat's gel coat finish will retain its depth of color and gloss for years.

Overall Maintenance

Normal maintenance of your gel coated fiberglass boat is similar to the care you would give your automobile. Overall, automotive cleaners and waxes work fine, as well as the marine cleaners and waxes.

Note: Do not use caustic or highly alkaline (high pH) cleaners or those containing ammonia. These type of cleaners may darken white or off-white weathered gel coat surfaces. A chemical reaction producing staining occurs if these type of cleaners

are used on weathered gel coat. However, the stain may be removed with a rubbing compound or by lightly sanding with 400 grit sandpaper followed by an application of rubbing compound and a thorough waxing.

Cleaning

We recommend general washing to avoid soil build-up and staining. The soil to your gel coat is the result of regular use and environmental pollutants such as soot and smog. Periodic cleaning with a mild detergent is necessary to remove normal deposits of soil.

Waxing

From constant exposure over time to our natural environment and undesired pollutants, the gel coat begins to lose its gloss. To restore your finish to the original gloss and color requires your special attention. After washing with a mild soap or detergent, give the surface a good polishing with a self-cleaning marine or automotive wax. Waxing in the fall and spring is generally recommended to maintain and restore most of the original gloss. If the surface has not been maintained and has weathered badly, and if cleaning and waxing does not restore the finish satisfactorily, compounding will be required.

Compounding

Please see your marine dealer for advice. Polishing and compound (fine abrasive) or rubbing compound (coarser abrasive) is recommended for use on fiberglass boats to remove scratches, stains, or a severely weathered surface. Polishing or rubbing compound can be applied by hand or by pneumatic buffer. After the scratched, stained or weathered surface has been moved, it should be waxed to enhance the gloss and color while providing a seal to retard staining or new soil accumulation.

Discoloration Removal

Your marine dealer is best equipped and trained to do this work. If regular washing and waxing has been neglected, discoloration of the gel coated fiberglass surface may occur.

Discolored areas are very shallow in depth, literally right on the surface. The discoloration may be removed by gently wet-sanding the affected areas only by using 600 grit, wet or dry specially treated waterproof sandpaper. It's important to always sand in one direction, this includes the curves too. Use plenty of water to cool and clean the sandpaper and cut back on dust. After you are finished sanding, dry the areas and verify all the discoloration has been removed. If not, repeat the process.

After all the discoloration has been removed, the area will need to be buffed. Using an electrical or pneumatic buffer, buff at low speed (1750 rpm – 2250 rpm), this will restore the luster to the sanded surface. Using a generous amount of rubbing compound, apply it in a circular motion with a soft wool pad. When buffing has been completed, wash off the rubbing compound with clean water, and dry the surface.

To restore the gloss to the affected area, use a high-grade marine or automotive wax.

Repairs

During the life of your boat, some damage to the gel coat surface is unavoidable. We recommend repairs done by trained, experienced professionals at your local marine dealer.

Scratches

If the scratch is in the gel coat surface, not penetrating the fiberglass, use an automotive polishing compound and rub it out. Apply the compound by hand using a damp rag or by using a power buffer. The scratch may not entirely disappear, but it should be noticeably better.

Gouges and Chips

Our recommended patching procedure is to first clean the area needing repair with an acetone solvent to remove all traces of wax and oil. Next, thoroughly mix one tablespoon of "Patch Paste" with two or three drops of catalyst on a scrap piece of cardboard.

Apply the mixture to the pit, chip or gouge with a single-edge razor blade, matching the surface and contour of the area being repaired.

Apply slightly more mixture to avoid having to fill the damaged section a second time. Allow the patch to harden thoroughly for a minimum of two to three hours.

Using a fine grit "wet or dry" sandpaper on a sanding block, wet-sand the patch until it is level with the surrounding surface. Finish with a marine or automotive rubbing compound using the same approach as used for the scratches.

Refinishing

For a severely scratched or weathered fiberglass boat that is no longer restorable by using the previous methods, it may then be necessary to refinish it with two-package or two-part aliphatic urethane enamel. This can be done very effectively, but it is recommended refinishing should only be done by experienced professionals.





SAILFISH 245 DC | SAILFISH BOATS LIMITED WARRANTY

SEMINOLE MARINE INC. ("Sailfish" producer of Sailfish Boats warrants to you, the first retail purchaser of a new boat bought from a factory authorized dealer, that it will repair or replace defects in materials or workmanship that occur and are reported to your factory authorized dealer within the applicable Warranty Periods set forth below, subject to the terms, conditions and exclusions ("What This Warranty Does NOT Cover") set forth below. Your acceptance of delivery of the warranted boat constitutes your acceptance of the terms of this limited warranty. All warranty periods run from the date (the "Effective Date") of delivery to the original retail owner (the "Owner"), or twelve (12) months from the date the boat was delivered to the Sailfish dealer, whichever is earlier. This limited warranty applies only to covered defects first arising and reported to Sailfish or its authorized dealer within the applicable warranty coverage period.

U.S. purchasers: this warranty gives you specific legal rights, and you may also have other rights which vary from state to state. E.C. purchasers: the owner has legal rights under applicable national legislation and the Consumers Protective Directive 1999/44/EC of the European Parliament and of the Council of 25 May 1999 governing the sale of consumer goods, and those rights are not affected by this limited warranty. Any claim that the boat was nonconforming at the time of delivery must be made within two (2) years from the date of delivery.

WHAT THIS WARRANTY COVERS:

Structural Warranty: Structural fiberglass defects in workmanship and materials in the hull, stringers, transom causing the boat to be unfit for general use as a pleasure craft under normal conditions of operation - Limited Original Purchaser's Ten (10) years.

Component Warranty: For defects in workmanship and materials in factory manufactured and installed non-structural parts and components - One (1) year Limited Warranty.

The applicable Warranty Period runs from the date of delivery of the boat to the first retail customer, and warranty coverage applies only to warranted claims that first arise and are reported to Sailfish within the applicable warranty period. This warranty extends only to the first retail purchaser.

The express limited warranty described above is the sole and exclusive express warranty from Sailfish. **Under the laws of certain states, there may be no implied warranties or conditions from Sailfish applicable to your boat, and all implied warranties (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) and conditions are excluded and disclaimed from warranty coverage where allowed by law. Any IMPLIED WARRANTIES (if any) arising under applicable law are LIMITED IN THEIR DURATION TO TWO (2) YEARS FROM THE EFFECTIVE DATE.**

ALL IMPLIED WARRANTIES, if any, INCLUDING **MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED AND DISCLAIMED** IN THEIR ENTIRETY AFTER TWO (2) YEARS FROM THE EFFECTIVE DATE. There are no warranties which extend beyond the description on the face hereof. **Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.**

WHAT THIS WARRANTY DOES NOT COVER:

Sailfish does not provide any warranty coverage, nor have any liability or responsibility, for any defects, costs, expenses or damages relating to the following:

- The failure to use, maintain or store the boat as specified in the manuals supplied to the Owner;
- A boat purchased from anyone other than an authorized dealer;
- A boat, including its components, that has been altered, modified or not properly maintained;
- A boat, including components and systems, that has been altered or modified from factory specifications; equipment and accessories not factory installed by Sailfish;
- Engines, outdrives, controls, propellers, batteries, generators, appliances, air conditioners, stereos and other equipment or accessories that are not manufactured by Sailfish, whether or not warranted by other manufacturers. It is the owner's obligation to fulfill any warranty registration and other obligations as to any third-party manufacturer's warranty coverage, and to submit any warranty claims directly to the third-party warrantor. Note: it is the Owner's responsibility to complete any OEM warranty registration procedure that may be applicable;
- Non-structural parts and components manufactured or installed by third parties, whether or not warranted by other manufacturers;
- The cost of removal or reinstallation of parts or disassembly of units to repair or replace components covered by this limited warranty;



SAILFISH 245 DC | SAILFISH BOATS LIMITED WARRANTY

- Any boat which has been in an accident, misused, used in a negligent manner, used for racing, used for rental, charter, demo, military, rescue, fire, safety, medical, police, law enforcement, patrol, or other governmental or commercial purposes, operated contrary to any instruction furnished by Sailfish, or operated in violation of any governmental or agency laws, rules or regulations;
- Fiberglass blistering attributable to water penetration of the fiberglass (osmotic blistering);
- Any representation relating to speed, range, fuel consumption or other estimated performance characteristic;
- Loss of time, inconvenience, boat payments, retail charges, improper lifting or trailering, travel expenses, loss of use, in-and-out-of-water charges, towing and storage charges, loss of or damage to personal property, or other remedies not specifically allowed;
- Damage from osmosis blistering if the original gel surface has been altered in any way;
- Damage or deterioration of cosmetic surface finishes, including corrosion, cracking, crazing, discoloration, fading, rusting or oxidation of gel coat and painted fiberglass surfaces, wood finishes (varnishes, stains and paints), fabrics, plated or painted/powder coated metal and stainless steel finishes; anti-fouling bottom paint or zinc anodes;
- The cost to remove, disassemble or reinstall components not installed by Sailfish that require removal to access parts covered by this limited warranty;
- Dealer preparation, cleaning, final adjustments and alignments in preparing the boat for delivery or commissioning;
- Normal and routine maintenance and wear and tear, including leakage around windshield, hatches, canvas, or other designated openings;
- Window glass and windshield damage, leaks or breakage; damage, shrinkage or deterioration of carpet, upholstery, and exterior canvas tops, enclosures, and weather covers;
- Fit and adjustment of exterior canvas tops, enclosures and weather covers;
- Sacrificial deterioration of anti-fouling paint or zinc anodes; or
- Cosmetic and/or damage resulting from normal wear and tear, or improper care and maintenance, either by dealer prior to consumer purchase or by consumer are not covered.

REMEDIES AND OTHER INFORMATION:

Your **sole and exclusive remedy** (including any applicable implied warranty) is the repair or replacement, at Sailfish sole option, of parts and components covered by this warranty, **and does not include incidental or consequential damages which are specifically DISCLAIMED and EXCLUDED from warranty coverage**. U.S. purchasers: some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any legal action alleging a breach of warranty must be brought within one (1) year from the date the alleged breach first occurred, regardless of the time remaining in the applicable warranty period. The boat, including any alleged defective part, must be returned to an authorized dealer (or as otherwise directed by Sailfish) within the applicable warranty period to obtain warranty service. The authorized dealer will carry out the warranty procedures on the owner's behalf. All warranty work will be performed at an authorized dealer, another repair facility that Sailfish selects, or the factory, at Sailfish' option. The owner is responsible for the expense associated with transporting the boat to and from the repair facility.

This document contains the entire warranty given by Sailfish and there are no terms, promises, conditions or warranties regarding your Sailfish other than those contained herein. Sailfish reserves the right to change Sailfish specifications, features, and prices without prior notification and without obligation for Sailfish previously manufactured.

Your acceptance of delivery of the warranted Sailfish constitutes your acceptance of the terms of this limited warranty. Your Sailfish dealer is an independent business and is not the agent of Sailfish. Your Sailfish dealer may not modify or change the terms of this limited warranty, and any questions concerning the scope of this limited warranty coverage should be addressed directly to Sailfish. Neither your Sailfish dealer nor anyone else is authorized to extend the time or scope of this warranty, or to create or assume for Sailfish any other obligation or liability with respect to Sailfish or this warranty.

Any legal action alleging a breach of this warranty (or any implied warranty) must be brought within one (1) year from the date the alleged breach first occurred. The exclusive jurisdiction and venue for any court action commenced by you under or relating to this limited warranty or any implied warranty(ies) shall be in the Circuit Court for Grady County, Georgia or United States District Court for the Middle District of Georgia.

We may be contacted as follows: Sailfish Boats, Attention: Customer Service Department, 2501 Industrial Park Drive, Cairo, GA 39828, USA. +1-229-377-2125.



[SAILFISHBOATS.COM](https://www.sailfishboats.com)

Specifications, features, equipment, options, colors, materials and trim are based on information available at time of printing and are subject to change without notice. Some accessories shown in photographs, or described, may not be standard equipment or even available as an option(s). Confirm availability of all accessories and equipment with an authorized Sailfish Boats dealer prior to purchase.

© 2025 Sailfish Boats.