



### SAILFISH **316 DC** | TABLE OF CONTENTS

- 2. Boat Specifications
- 4. Boat Trailer Measurement
- 5. Boat Layout
- 6. Seating Locations
- 7. Boat Safety & Warning Labels
- 9. Boat Safety & Warning Label Locations
- 10. Boat Safety & Warning Label Replacements
- 11. Boarding Ladder & Unassisted Boarding Situations
- 12. Battery Selector Panel and Wiring
- 14. Breaker Panel Schematic
- Switch Panel Schematic
- 18. Hull Harness Schematic
- 19. Deck Harness Schematic
- 21. Hard Top Harness Schematic
- 22. Hard Top Switch Panel Schematic
- 23. Fuel System Layout
- 24. Plumbing Diagram
- 25. Helm Area
- 26. Ignition Switches & Engine Shut-Off Cord/Lanyard
- 27. Plug and Play Wiring | Fuel-Water Separator
- 28. Console / Head Area
- 30. VSR Battery System
- 31. Bilge Access and Explanation
- 32. Bilge Pumps

- 33. Raw Water Washdown System
- 34. Freshwater Washdown and Shower System
- 35. Livewell Operation
- 36. Fishbox Pump
- 37. Hard Top
- 39. Optional Retractable Ski Tow Pylon
- 40. Bennett Trim Tab Maintenance
- 41. Windshield Washing & Care
- 42. Lewmar Pro-Fish 700 Windlass
- 43. Lewmar Pro-Fish 700 Windlass Troubleshooting Chart
- 44. Uflex Power Assist Steering
- 45. Yamaha Helm Master EX Steering System
- 46. Optional Optimus Joystick
- 47. Standard Electric Steering (Mercury 350/400HP)
- 48. Optional Mercury Joystick
- 44. Marine Head With Waste Tank (Type III MSD Waste Management System)
- 58. Vinyl Care and Cleaning
- 59. Aluminum Cosmetic Corrosion (Pitting)
- 60. Caring for Aluminum
- Caring for Stainless Steel
- 62. Gel Coat
- 64. Sailfish Boats Limited Warranty





## 316 DUAL CONSOLE





The new 316 Dual Console is a versatile family fishing boat that checks all the boxes: comfort, safety, quality and reliability. Well-equipped for a range of activities, the 316 DC offers a roomy and social layout with convertible seating and loads of storage space. And when you want a fishing battlewagon, the 316 doesn't disappoint — it has all the features you need for angling success.





## 2024 **316 DC** SPECIFICATIONS

#### STANDARD FEATURES

- · Backing Plates for Radar and VHF Mounts in Hard
- Boarding Ladder (4-Step w/ Grab Handle)
- Built-In Rigging Tubes (from Bilge to Helm w/ Pull
- · Carbon Fiber & Kevlar® Reinforced Deck & Hull
- Closed Cell Foam Flotation
- · Cockpit Bolster Pads
- · Corian Countertops (Head & Galley)
- · Exclusive Dot Matrix Non-Skid Flooring
- Exclusive VDS Hull Design (Variable Deadrise Stepped Hull)
- Fiberglass Hard Top (w/ Integrated Docking/ Spreader Lights, Rod Holders (6) & PFD Storage)
- Fuel Filter / Water Separator
- Oversized Bilge Access
- Portside Dive Door w/ Ladder
- Recessed SST Cup Holders (10)
- SailTech Composite Full Length Transom
- SailTech Foam-Filled Fiberglass Stringer System
- Thru Hull Windlass System (w/ Stainless Steel
- Anchor, 200' of Line and 15' of Chain) • Transom Mounted Tool & Raw Water Washdown
- Trim Tabs (Dual Ram, Heavy-Duty, High-
- Performance w/ Indicators & Auto-Retract
- Walk-Thru Tempered Glass Full Height Windshield w/ Center, Sliding Bow Access Panel
- Walk-Thru Transom Door w/ Wave Guard Step
- · Windshield Wiper (Captain's Side w/ Freshwater Spray Tank)

#### Bow

- · Bow Block-Off Door
- Bow Bottom and Backrest Cushions
- · Built-In Bow Cooler
- Chaise Lounge Style Seating (w/ Fold-Down
- Dual USB Charging Ports (1 Port/Starboard)
- · Gull Wing Seat for Console & Storage Access (Starboard)

#### **Electrical**

- · Accessory Switch Panel w/ Circuit Breakers
- Electric Horn
- Full Digital Instrumentation
- Fully NMEA 2K Compliant
- Fusion Stereo System w/ Rockford Fosgate LED Lighted Speakers & 6 Channel Amp
- LED Anchor Light
- LED Interior Cockpit & Bilge Lighting
- LED Navigational Lights (Built into Hard Top)
- VSR Battery Charging System

#### **Fishing**

- · Circulating Baitwell w/ LED Lighting (30-gal. Transom)
- In-Floor Fish Boxes (2 w/ Advanced Vacuum
- Insulated Bow Fish Boxes
- SST Rod Holders (2)
- SST Transom Rod Holders

• 12V Refrigerator, Sink, Storage Drawers, Wine Rack Cooler & Counter Top Storage

- Fender Cleats (4)
- Flush Mount Hinges, Latches & Deck Plates
- Heavy-Duty SST Bow & Stern Eyes
- Heavy-Duty SST Rub Rail
- Marine Grade SST Hardware
- · Sailfish Engraved Transom Plates
- SST & Bronze Thru Hull Fittings
- SST Flush Mount Pull-Up Cleats (6)
- SST Propellers

#### Head

- · Electric Marine Head (w/ 10-gal. Holding Tank, Overboard Discharge & Deck Pump-Out Fitting)
- · Finished Fiberglass Head
- · Frosted Overhead Skylight
- Head Compartment Lighting
- · Lockable Head Door
- Mirror
- SeaDek® Flooring
- · Sink w/ Faucet
- SST Port Light
- · Under Counter Storage Unit

- 12-Volt DC Accessory Plug
- · Digital Electric Steering (Yamaha)
- Digital Electric Steering (Mercury 350/400XXL)
- Power Assist Steering (Mercury Twin 300XXL & Suzuki)
- Tilt SST Steering Wheel w/ Power Knob

#### **Plumbing**

- · Automatic Bilge Pumps (2- 2000 GPH Aft and 800 GPH Forward)
- Freshwater Shower (Transom)
- Freshwater Tank (19-gal.)
- · High-Speed Livewell Pickup
- Raw Water Washdown
- · Self-Bailing Cockpit

#### Seating

- · Aft Folding Seat (38")
- Deluxe Power Captains Chair with Flip-Up Bolster and Armrests
- Portside Companion Seat w/ Storage (26"), w/ **Dual USB Charging Port**
- Portside Folding Jump Seat (22")
- Rear Facing Bench Seat w/ Storage Drawer & Under Seat Storage

#### Storage

- 3-Drawer Storage Cabinet
- · Battery Storage (Bilge Compartment)
- Fiberglass Console Storage
- In-Floor Ski Locker (Mid-Ship)
- In-Floor Storage (Bow)
- · Passenger Deck Top Glove Box
- Starboard Console Storage w/ Bow Access

#### OPTIONS

#### **Boat Options**

- 18" LED Light Bar (White)-(2)
- · Bow Shower
- · Bow Thruster
- · Cockpit & Bow Covers
- Hardtop Hatches (2)
- Hella Underwater LED Lights (2)
- In-Floor Rod Storage (3)
- · Laporte Cockpit Sunshade (White)
- Mercury Electric Steering w/ Joystick (300XXL) Verado Only)
- Mercury Joystick For Electric Steering V10
- Optimus Joystick (Suzuki Only)
- · Removable Bow Table (w/ Additional Base)
- Spot Light for Hard Top
- Two-Tone Hard Top
- · Yamaha Joystick

#### **Electrical Options**

- · Built-In 3 Bank Battery Charger w/ LED Readout
- Fusion Transom Remote Control
- Garmin GMR™ 18 xHD Radome
- Garmin GPSMap 1243xsv w/o Transducer
- Garmin GPSMap Twin (1) 1243xsv w/o Transducer, (1) 1243
- · Garmin Radar Cable & Power Cable
- Garmin Thru Hull Transducer B75M Airmar w/
- Garmin Thru Hull Transducer GT-12M w/ CHIRP
- VHF Radio & Antenna

#### **Optional Packages**

#### Entertainment Package

· Retractable Ski Tow Pylon, Removable Bow Table, Additional Aft Table Bracket, Fusion Transom Remote Control & Hella Underwater LED Lights (2)

#### **Engine Options**

#### Yamaha

- Twin Yamaha F300XSB (Grav) • Twin Yamaha F300XSB2 (White)

#### Mercury

- Twin Mercury 300XXL Verado
- Twin Mercury 350XXL Verado V10
- Twin Mercury 400XXL Verado V10

#### • Twin Mercury White Motor Upgrade

- Twin Suzuki DF300APXX5 (Digital)
- Twin Suzuki DF300APXXW5 (White) (Digital)
- Twin Suzuki DF350ATXX5 (Digital)
- Twin Suzuki DF350ATXXW5 (White) (Digital)

September 12, 2023 2:13 PM




 
www.sailfishboats.com






## SAILFISH **316 DC** | TRAILER MEASUREMENT CHART

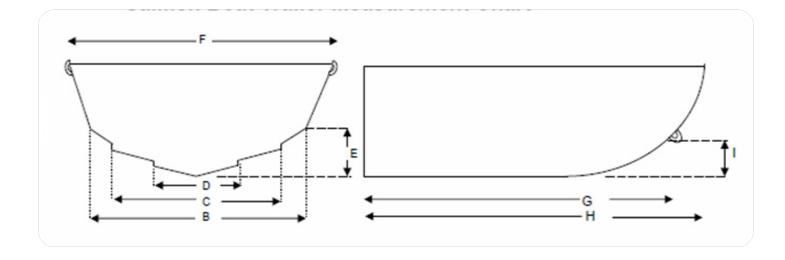





# SAILFISH **316 DC** | BOAT LAYOUT

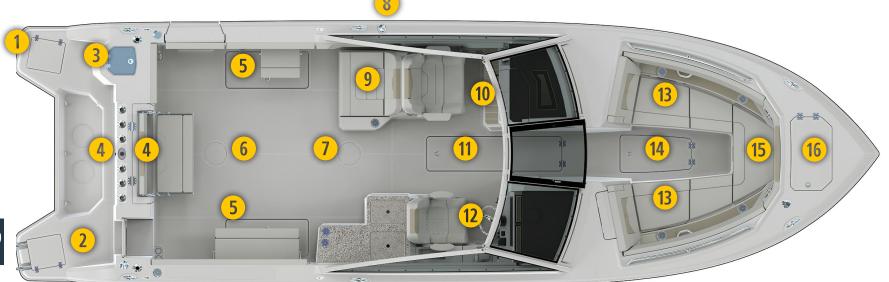

KŒY	DESCRIPTION
1	Sand Bar Cooler
2	Boarding Ladder / Fresh Water Fill
3	30 Gallon Livewell
4	Bilge Access
5	Insulated Fish Box (w/ Overboard Pump-Out System)
6	Fuel Sender and Pick-Up Access
7	Fuel Fill / Vent Hose Access
8	Fuel Fill

KEY	DESCRIPTION
9	Storage Under Seat
10	Enclosed Head System
11	In-Floor Ski Locker
12	Helm Area
13	Insulated Fish Boxes / Storage (Boxes drain overboard)
14	In-Floor Bow Storage
15	Insulated Bow Cooler
16	Thru-Hull Windlass System



Ę

# SAILFISH **316 DC** | SEATING LOCATIONS







#### **Warning Labels**

The safety for you and everyone on board, as a boat owner, you need to become familiar with and the locations of the Caution, Warning and Danger Labels found on your boat.

Below are images of the labels to help you maintain and operate your boat safely.

### (California Only)

### **MARNING**

Operating, servicing and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area and wear gloves or wash your hands frequently when servicing this vessel. For more information go to www.P65warnings.ca.gov/marine.



#### **A WARNING**

ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. SHUT OFF ENGINE WHEN NEAR PERSONS IN THE WATER.



NW-207-14

#### **A** WARNING



Carbon monoxide (CO) can cause brain damage or death.

Engine and generator exhaust contains odorless and colorless carbon monoxide gas. Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.

Get fresh air if anyone shows signs of carbon monoxide poisoning.

See Owner's Manual for information regarding carbon monoxide poisoning.

NW-204-14

#### **A WARNING**

ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. DO NOT APPROACH OR USE LADDER WHEN ENGINE IS RUNNING.

VW-208-14

#### **A DANGER**



Carbon monoxide (CO) can cause brain damage or death.

Engine and generator exhaust contains odorless and colorless carbon monoxide gas.

Carbon monoxide will be around the back of the boat when engines or generators are running.

Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

NW-206-14



#### **Warning Labels Continued**

The safety for you and everyone on board, as a boat owner, you need to become familiar with and the locations of the Caution, Warning and Danger Labels found on your boat.

Below are images of the labels to help you maintain and operate your boat safely.

### **A** WARNING




CONTENTS CAN BE UNDER PRESSURE

AVOID SERIOUS INJURY OR DEATH FROM FIRE OR EXPLOSION

OPEN SLOWLY IN WELL VENTILATED AREA, NO SMOKING OR OPEN FLAMES


MEETS U.S. EPA EVAP STANDARDS USING CERTIFIED COMPONENTS

SEMINOLE MARINE GROUP INC., CAIRO, GA

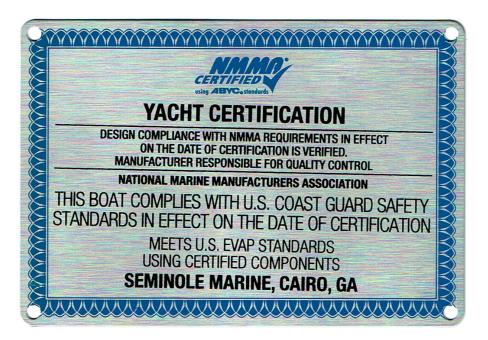



### SAILFISH **316 DC** | BOAT SAFETY & WARNING LABEL LOCATIONS

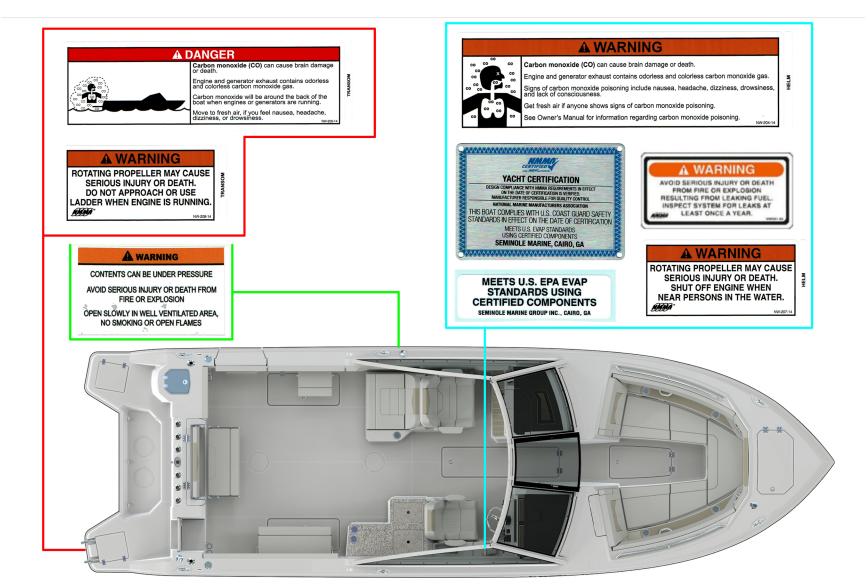






### SAILFISH **316 DC** | BOAT SAFETY & WARNING LABEL REPLACEMENTS



If any of your Boating Safety or Warning Labels become damaged, please call Sailfish Boats' parts department for replacement stickers at 229-377-2125.

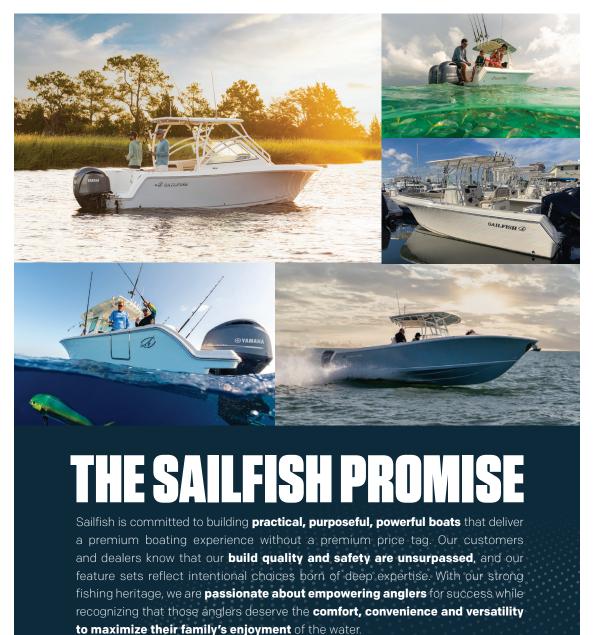



#### 11

### SAILFISH **316 DC** | BOARDING LADDER & UNASSISTED BOARDING SITUATIONS

### **Unassisted Boarding Instruction**

When using the ladder in an unassisted boarding situation, reach over the transom and open the covering board lid that is covering the ladder, pull ladder towards you, by picking up the ladder by the steps, release the strap, deploy the four step ladder by rotating it to the down position. Use your hand or foot to fully extend the ladder in the down position. Use the grab handle and ladder to board your boat. When fully onboard, be sure to place the ladder back in the storage position by reversing the deployment process.











# SAILFISH **316 DC** | BATTERY SELECTOR PANEL (FRONT)







THE INFORMATION CONTAINED IN THS DRAWING IS THE SOLE PROPERTY OF SAILEISH BOATS.
REPRODUCTION IN PART OR AS A WIFOLE WITHOUT THE WATTEN FERMISSION OF SAILEISH BOATS IS PROHIBITED.

316DC

LISED ON

2

DO NOT SCALE DRAWING

**Download High Resolution Diagram** 

SIZE DWG. NO.

B 316DC-BS


SCALE: NONE WEIGHT: N/A SHEET: 1 OF 1

Α






### SAILFISH **316 DC** | BREAKER PANEL SCHEMATIC

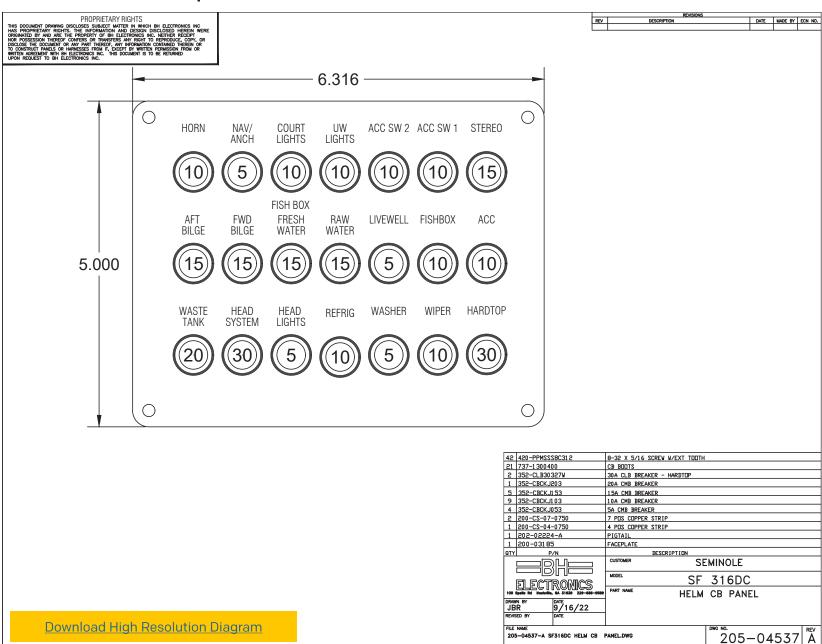








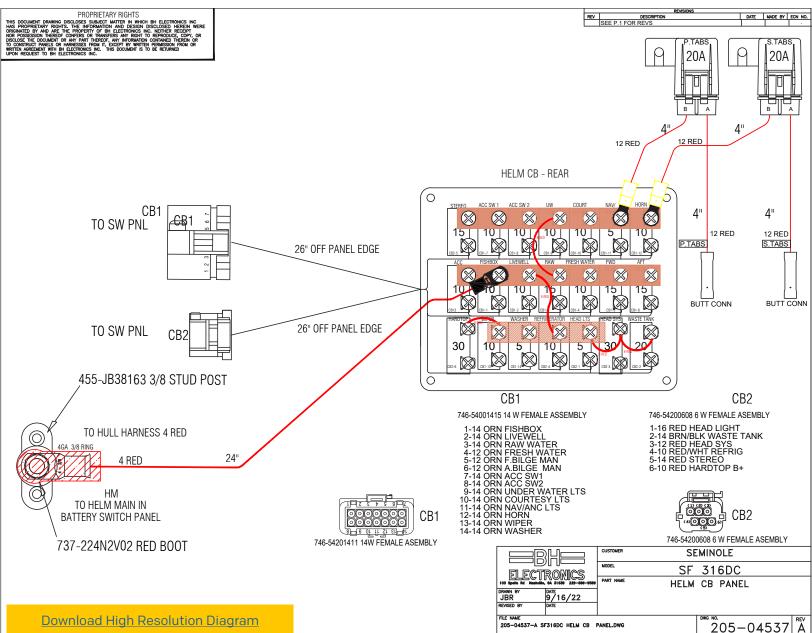





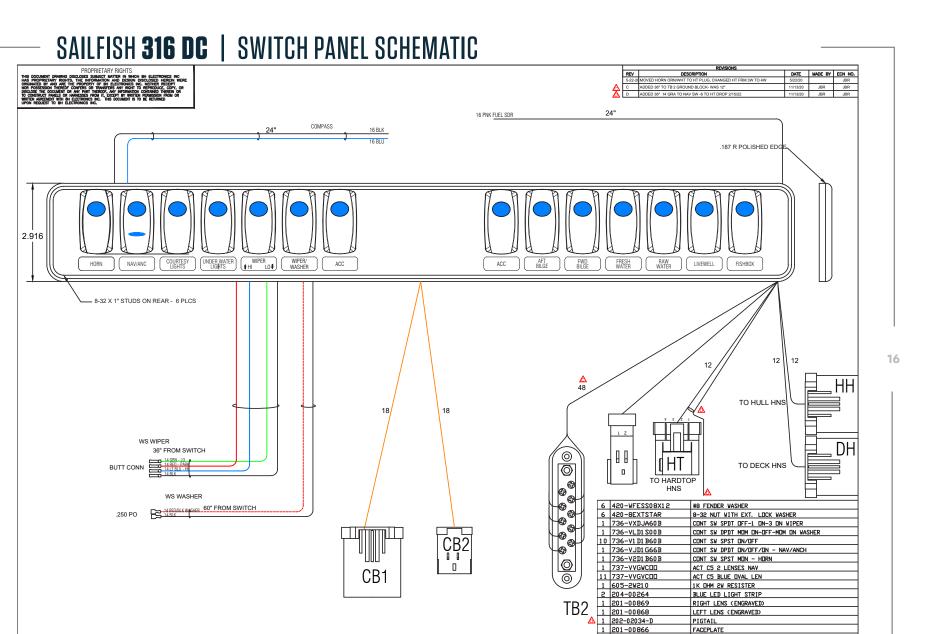

MATERIAL: .370 BLACK ACRYLIC

**Download High Resolution Diagram** 



DESCRIPTION
SEMINOLE MARINE

SAILFISH 276 & 316DC SWITCH PANEL

205-03894 D


FACEPLATE

4/10/20

2/15/22


... 3894-d SF276-316DC HELM SWITCH PANEL.DWG



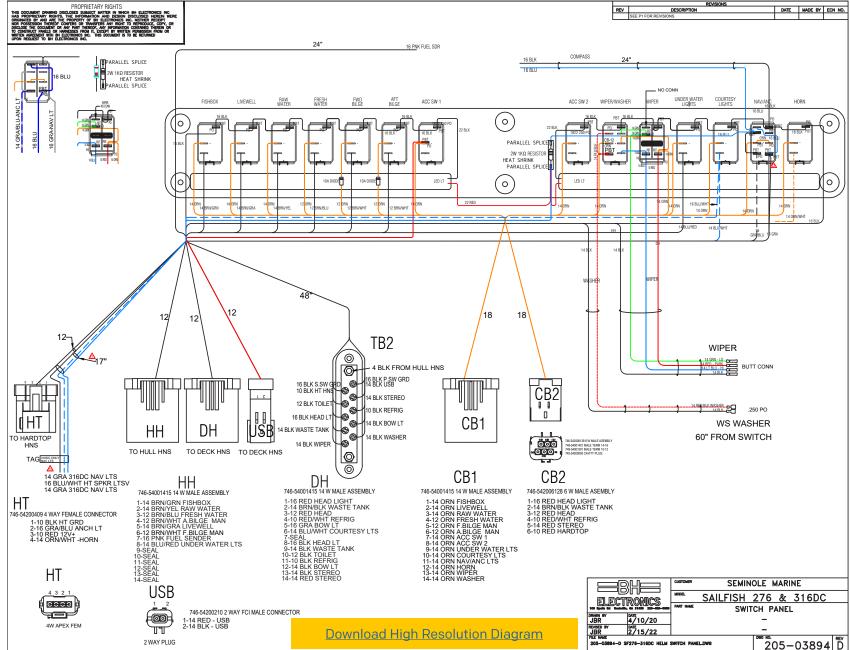






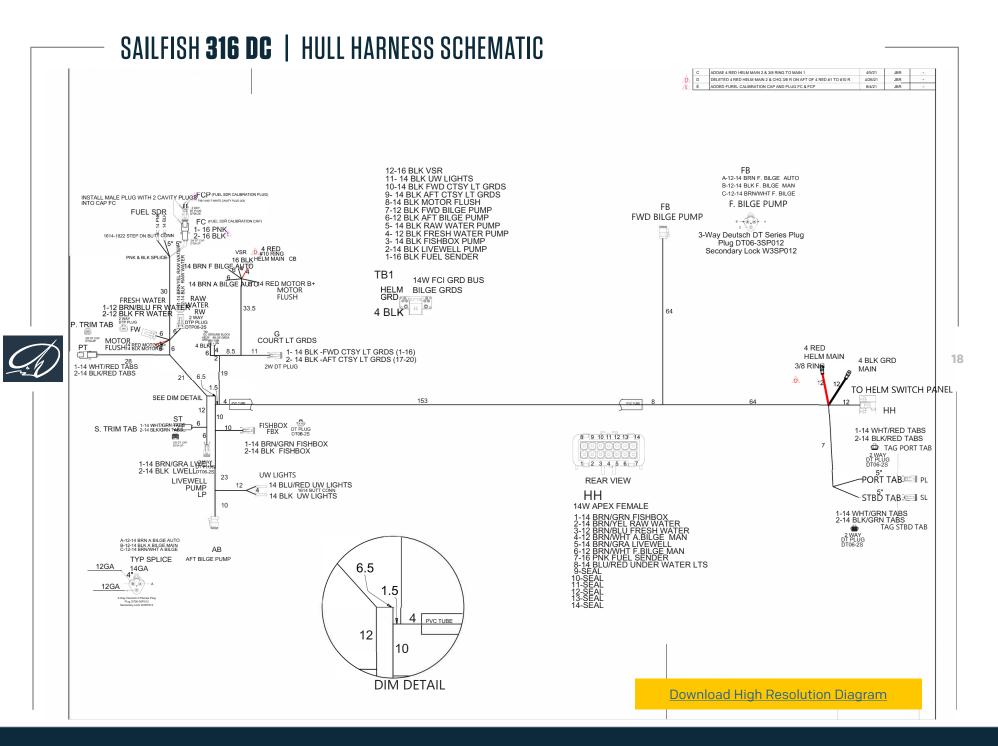




### SAILFISH **316 DC** | DECK HARNESS SCHEMATIC

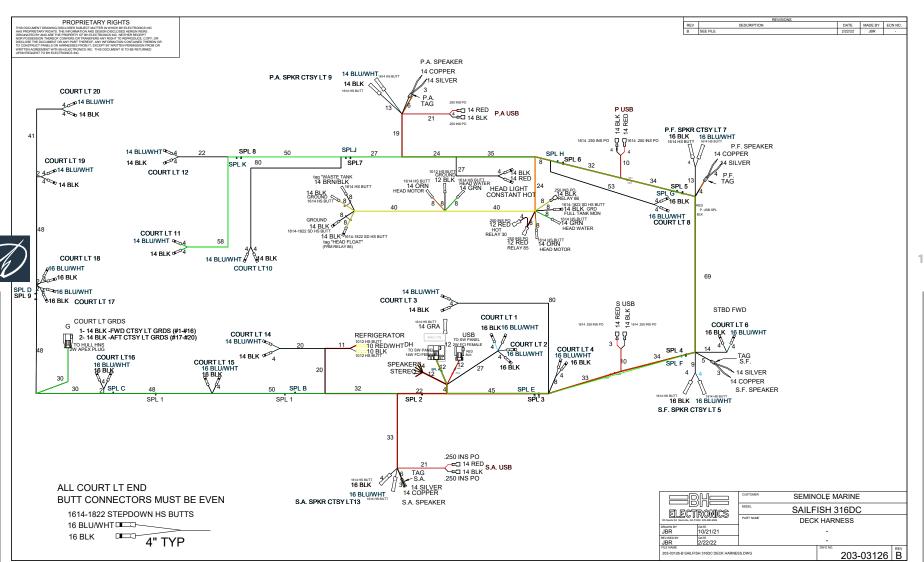

**Download High Resolution Diagram** 




## SAILFISH **316 DC** | DECK HARNESS SCHEMATIC

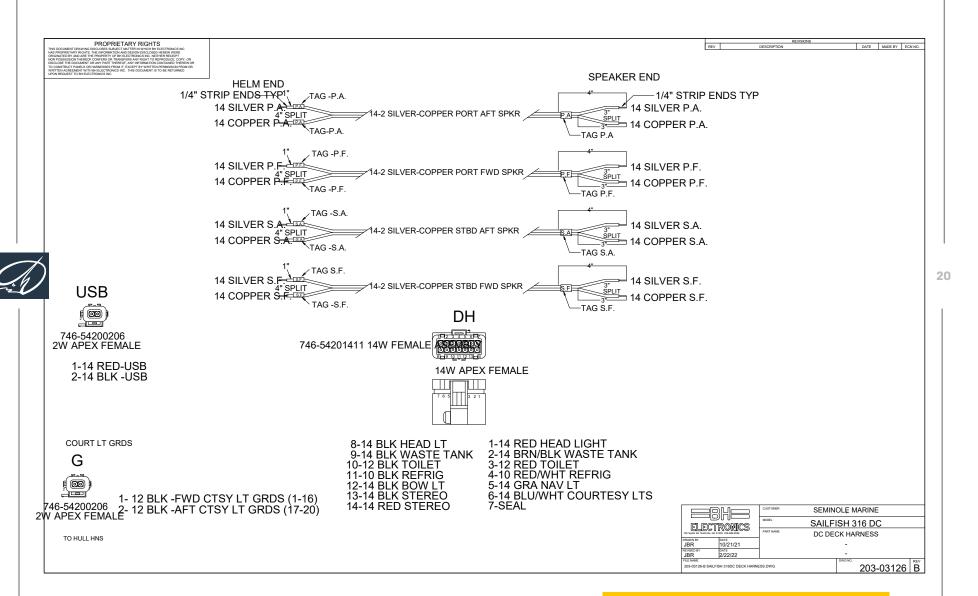

**Download High Resolution Diagram** 




## SAILFISH **316 DC** | HARD TOP HARNESS SCHEMATIC

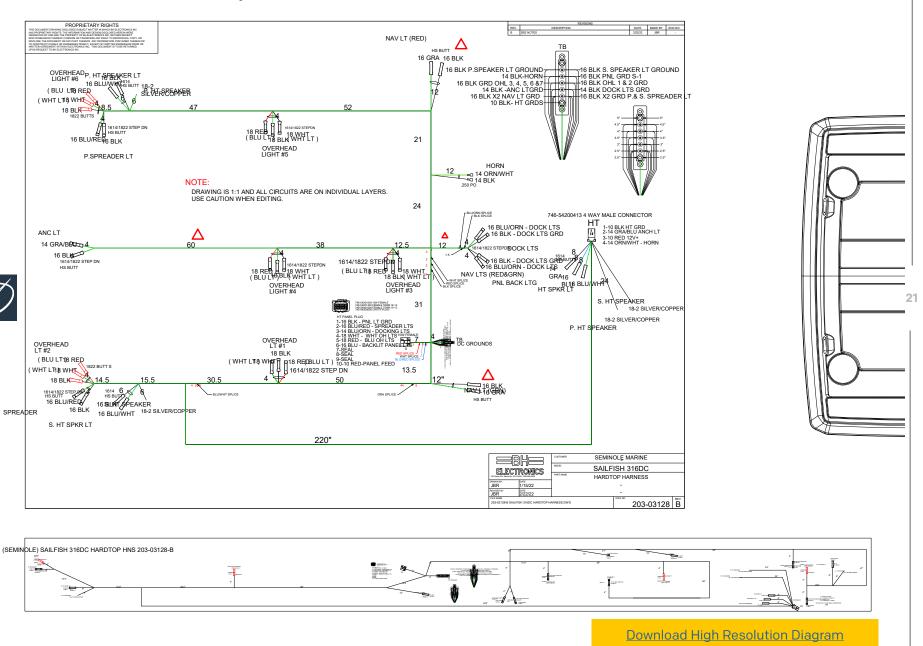



## SAILFISH **316 DC** | HARD TOP SWITCH PANEL SCHEMATIC - YAMAHA

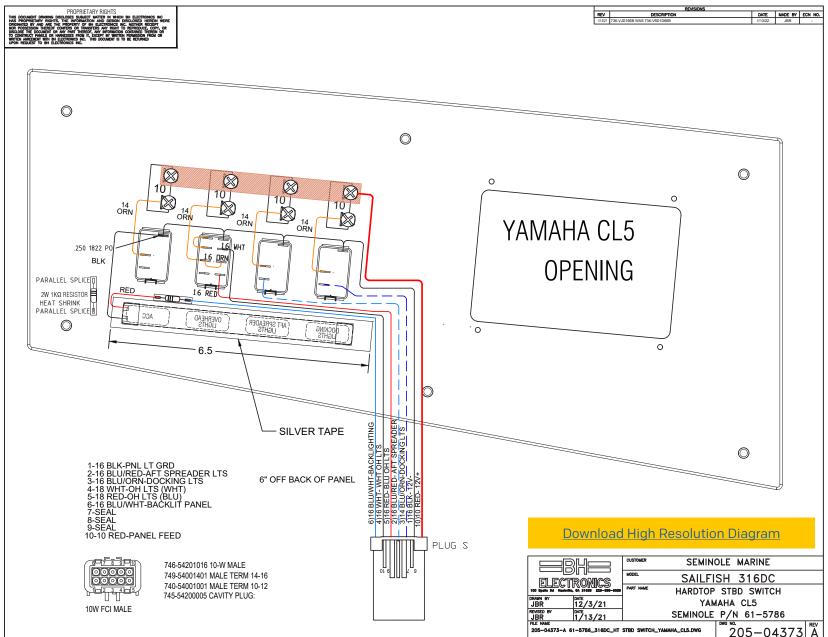






# SAILFISH **316 DC** | FUEL SYSTEM LAYOUT




KEY	DESCRIPTION
1	Fuel Filter Access (Yamaha Only) - Mercury Built-In
2	Fuel Fill
3	Fuel Tank Location
4	Fuel Pickups
5	Fuel Sender
6	Primer Bulb Access (Mercury Only) - Yamaha Built-In





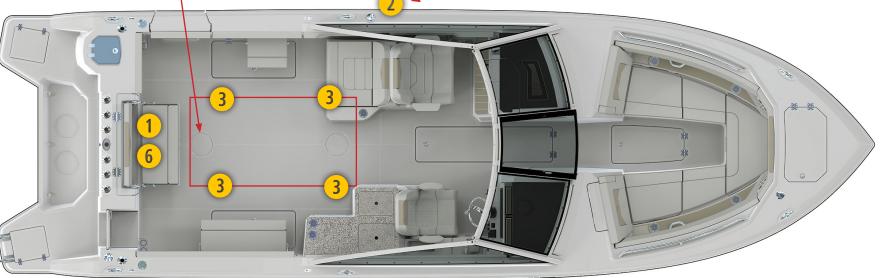

## SAILFISH **316 DC** | PLUMBING DIAGRAM

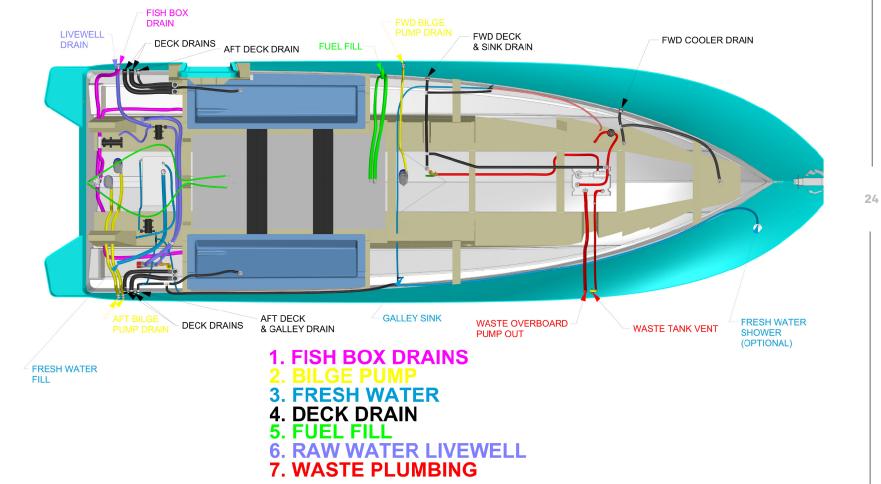

**Download High Resolution Diagram** 





# SAILFISH **316 DC** | HELM AREA



KEY	DESCRIPTION
1	Compass
2	Optional Garmin Units
3	Switch Panel
4	Fusion Stereo
5	Uflex Tilt Helm
6	Optional Remote Spotlight Controls
7	Optional Uflex Power Assist Steering Controls
8	Windlass Controls
9	Trim Tab Actuator Switches
10	Optional Garmin VHF
11	Emergency Engine Shutoff Switch & Safety Lanyard
12	Ignition Switches
13	Binnacle
14	Power Helm Seat Controls



### SAILFISH **316 DC** | IGNITION SWITCHES & ENGINE SHUT OFF CORD / LANYARD

# Ignition Switches, Engine Shut-off Cord/Lanyard

Each Sailfish boat will be equipped with an ignition switch with an emergency engine shut off cord/lanyard.

This lanyard should be worn at all times while operating the vessel, if the vessel operator falls or moves a unsafe distance away from the helm controls the lanyard will pull out causing the engine to shut down.

Make sure the lanyard is not attached to a part of your clothing that could be easily torn free causing the switch not to pull. See your YAMAHA, MERCURY or SUZUKI owner's manual for more information on this safety feature.

### **Engine Break-In Period**

Each new outboard motor will need to go through a break in period to make sure all of the internal moving parts and components have a chance to correctly mate.

For more information on the break in period specific to your engine please refer to your YAMAHA, MERCURY or SUZUKI Owner's manual.







### SAILFISH **316 DC** OWNER'S MANUAL

### **Plug and Play Wiring**

Deutsch Connectors are quick disconnect plugs used for durability and ease of replacing components in your Sailfish Boat.

These water resistant plugs are for use in electrical systems where moisture, salt spray, dirt and dust could affect the electrical connections or systems.







### **Fuel-Water Separator**

Sailfish installs water fuel separators in the bilge compartment on all models rigged with Yamaha & Suzuki engines. Each engine will have its own filter, which can be accessed through the bilge access doors in the back of the boat.

On Sailfish boats rigged with Mercury engine(s), the fuel-water separator(s) may be built into the engine - depending on the engine Model.


For more information on these filters, please review your Yamaha, Mercury or Suzuki Owner's Manuals.



# SAILFISH **316 DC** | CONSOLE / HEAD AREA


KEY	DESCRIPTION
1	Large Panel For Easy Access To Console Components
2	Stereo Amplifier
3	Breaker Panel
4	Windshield Washer Fill Tank
5	Starboard Console Storage Area
6	Bow Access to Starboard Console Storage Area



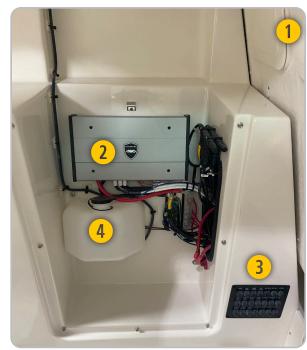





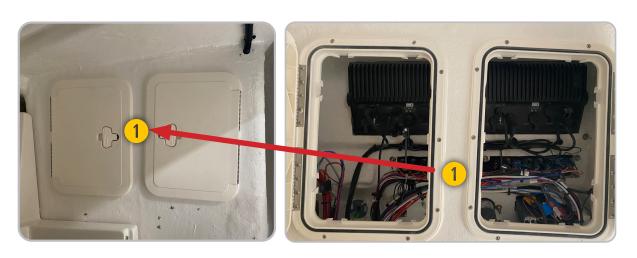

# SAILFISH **316 DC** | CONSOLE / HEAD AREA







KŒY	DESCRIPTION
1	Electric Marine Head w/ 10 gal. Holding Tank & Deck Pump Out Fitting. Overboard Discharge Upgrade Available.
2	Freshwater Sink w/ Pull-Out Shower
3	Storage



The VSR, or Voltage Sensitive Relay, is a very handy little box that solves a load of traditional charging problems on marine electrical systems. It essentially serves as a smart battery switch deciding automatically when either one or two batteries are charged – or discharged. It works great on almost any boat with multiple batteries – and eliminates all of the guesswork that used to come with manual battery switches.

**What a VSR does** 

The VSR is installed between two batteries. Many People are surprised to learn that it is NOT connected to either the alternator or charger output wires! Its setup is much more clever.

It either battery goes above 13.7 volts (due to either alternator or charger output), the VSR connects both batteries together. Both batteries are now charging – without the boat ever having to throw a switch.

Alternately, when the system voltage drops back below 12.6 volts, i.e., no more charging, the relay opens and the batteries are separate. This means that both batteries now discharge independently.

### **How a VSR changes real world boating**

Let's say that a fishing boat has a two battery setup. As is often the case, one of the batteries is dedicated to an important job – starting the engine. The other battery is used for other operations.

As the fisherman runs the boat from hole to hole, the engine alternator elevates the voltage to the cranking battery above 13.7 volts. This triggers the VSR to automatically connect the starting battery and house battery together. Both are now charging. Upon reaching his destination, the boater kills the engine – and, the alternator output – and begins trolling. Because of the lowered voltage, the VSR now disconnects the batteries. Because

he is now discharging only one battery, our fisherman is going to have starting power when he needs it later – no matter how long he uses the trolling motor and depletes that trolling battery. Once underway again, the alternator power causes the VSR to reconnect the batteries and begins replenishing the trolling battery.

Back home, the fisherman powers up his onboard battery charger, this increased voltage causes the VSR to once again link the batteries. This means that even a single output battery charger would now be charging both batteries!








## SAILFISH **316 DC** | BILGE ACCESS

### **Bilge Access and Explanation**

The bilge of your boat can be accessed through the large door in the aft of the boat. This large door allows easy access too many of the boats components.

You may also access it through the two access plates in the splash-well.

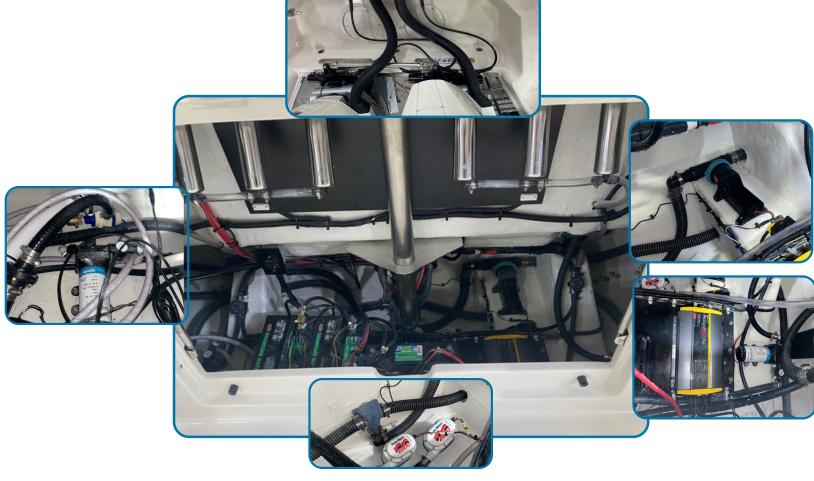

The bilge area of your sailfish boat should be checked before, during and after each operation.



### SAILFISH **316 DC** | BILGE PUMPS

All Sailfish Boats are furnished with Rule Bilge Pumps, The Rule 2000 GPH (gallon per hour) pump has a built in automatic float switch. This is engaged when the water level rises in the bilge and the float rises in the pump causing the pump to turn on.

These pumps can be tested by turning them upside down, the pump should turn on, once turned back over it will run for a few more seconds and then shut off. The pumps also have a manual switch function on the main switch panel.

These pumps are wired into your boat bypassing the battery switch so that they have power at all times, this allows the automatic feature to work while you are away from the boat and the batteries are turned off.

Sailfish boats 241CC and larger are equipped with a forward bilge pump that is an electronic sensor pump. These pumps have a state of the art internal water sensor that detects water and automatically activates the pump when there is enough present to be pumped out.

These pumps can be tested by placing your finger over the "Test Area" on the back of the pump for 5 seconds, the pump will turn on to let you know it is functioning correctly. All wiring and switches to these pumps are the same as the Rule 2000GPH pumps.

The forward bilge is located in the Mid-Ship In-Floor Ski Locker beneath an access plate.









### SAILFISH **316 DC** | RAW WATER WASHDOWN SYSTEM

The raw water wash down on your Sailfish Boat is powered by a Shur-flo Pro Blaster Pump which creates a pressurized system, once the pump is turned on and pressure is created the pump will shut down until more pressure is needed. The raw water wash down pump can be accessed through the bilge access door in the aft of the boat.

To operate make sure the seacock (accessed through the hatch under the transom walk thru door) is in the open position. The hose fitting for the wash down is located in the transom splash well, to use simply attach a hose with a nozzle and turn the switch on. Pressure will build up in the hose and the nozzle and as you spray the pump will continue to engage as needed.











### SAILFISH **316 DC** | FRESHWATER WASHDOWN & SHOWER SYSTEM

The freshwater washdown and shower system on your Sailfish Boat is powered by a Shur-flo Pro Blaster Pump which creates a pressurized system, once the pump is turned on and pressure is created throughout the freshwater hoses; once they are all pressurized the pump will shut down until more pressure is needed.

All of the freshwater systems on the boat will operate on this system once the freshwater switch is engaged.



You should allow a few seconds for the system to prime and pressurize before attempting to use any of the showers/sinks ect.

The freshwater holding tank is located behind the fuel tank in the bilge area.

The fill for this tank is located under the boarding ladder on the starboard side of the vessel. The freshwater pump can be accessed through the bilge access door in the aft of the vessel.













**Galley - Freshwater Sink with Pullout Shower** 




#### **Instructions**

- Make sure the seacock below the baitwell pump is in the open position (seacock is accessed through the hatch under the transom walk thru door).
- Turn on the livewell switch.
- Adjust the black aerator in the livewell to the desired flow (if your model has a livewell in the leaning post you can adjust the aerator to pump water into the transom livewell or the leaning post livewell or both)
- In order to fill the livewell, reach in the access hatch below the livewell and close the red handle ball valve.
- The livewell will fill up until it reaches the Overflow built into the side of the livewell. This allows the water to continually pump in and drain out while maintaining the water level.
- To drain the livewell open the red handle ball valve.

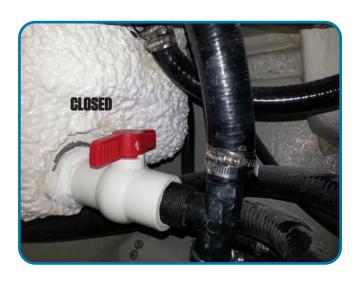

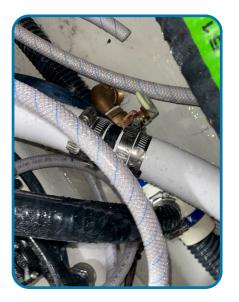

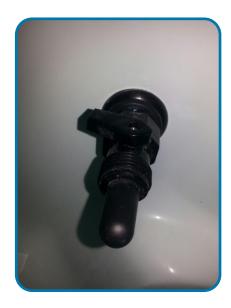



## SAILFISH **316 DC** | FISHBOX PUMP

The 3166DC is equipped with a diaphragm pump called the gulper grouper. (pictured top right). The Whale Gulper Grouper pump has no impeller to clog or burn out. Unlike impeller pumps these have no-choke valves that easily pump out fish box waste. They also offer long term durability, they can run dry without causing damage.

This pump will pump both fish boxes through a system called a flooded T (pictured bottom right) The flooded T allows both boxes to have a centralized drainage location that can be operated by a single pump.

## **Troubleshooting**

Electric Motor Runs but doesn't pump

- Disconnect pump and turn off all power.
- · Disconnect hoses and unscrew housings.
- Check entire hose system for blockage.
- Inspect tricuspid valves for blockage or inverted valve(s).
- If valve(s) are blocked, remove blockage, re-assemble the pump and continue use.
- If a tricuspid valve is inverted, replace with a new tricuspid valve, reassemble the pump and continue use.

If the electric motor will not operate, check that:

- The isolator switch is on.
- There is 12 volts at the battery terminals.
- The in-line fuse / circuit breaker are operational.


If the fuse / circuit breaker has blown, check for debris in pump head and clean out if necessary. Replace the fuse or re-set circuit breaker and run the pump.







## SAILFISH **316 DC** | STANDARD HARD TOP

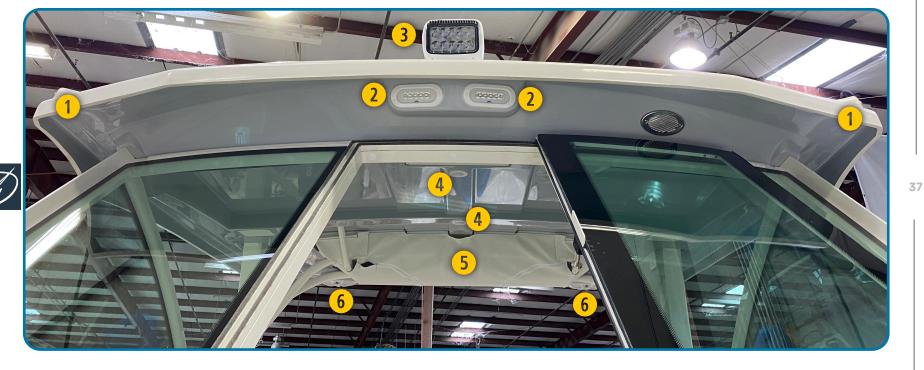


The standard hard top is equipped with navigation lights, courtesy lights, spreader lights, docking lights, an anchor light, two speakers, 6 rocket launchers, and overhead PFD Storage.

KEY	DESCRIPTION	
1	Navigation Lights	
2	Docking Lights	
3	Optional Remote Spotlight	
4	Courtesy Lights	
5	PFD Storage Area	
6	Speakers	





## SAILFISH **316 DC** | STANDARD HARD TOP

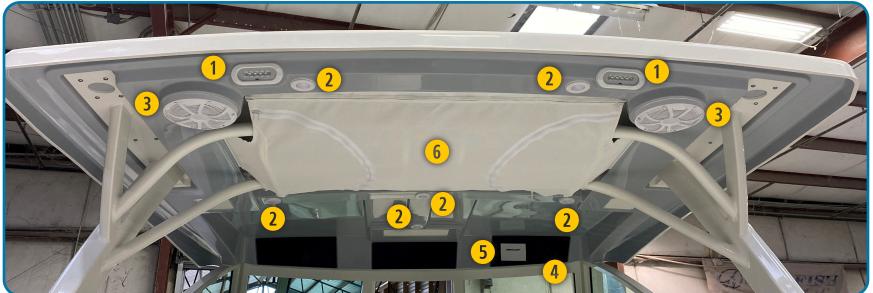



The standard hard top is equipped with navigation lights, courtesy lights, spreader lights, docking lights, an anchor light, two speakers, 6 rocket launchers, and overhead PFD Storage.

KEY	DESCRIPTION	
1	Spreader Lights	
2	Courtesy Lights	
3	Speakers	
4	Switch Panel	
5	Overhead Engine Monitor	
6	PFD Storage Area	



## SAILFISH **316 DC** | OPTIONAL RETRACTABLE SKI TOW PYLON








- Catch fingers under the top of the ski tow bar and pull up
- 2. After pulling up to use the tow bar, turn to the left to lock the tow pole in the UP position by finding and listening to the catch bar secure in place
- 3. To lower the tow bar, turn to the right for it to release and lower gentle into place. DO NOT drop it

Use caution when raising and lowering the ski bar. Ski tow bar is heavy and can cause harm to fingers.

#### **MAX WEIGHT LIMIT - 1,500 / 681 kg**

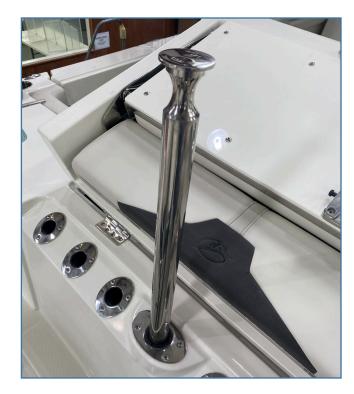



WARNING - NOT TO BE USED TO TOW BOATS, JET SKIS, INFLATABLES OR SUCH. Designed ONLY for use for water sport activities.



## SAILFISH **316 DC** | BENNETT TRIM TAB MAINTENANCE

# Periodically checking the fluid level in hydraulic systems

• With trim tabs completely retracted, fluid level should be about 2 inches from bottom of reservoir (approximately 22 ounces). To refill, remove Lexan cover and filler plug located at the front left hand corner of the reservoir. FILL WITH ANY TYPE AUTOMATIC TRANS-MISSION FLUID (ATF) ONLY. Brands or types of ATF can be mixed. Running HPU with an excess or lack of fluid will not cause damage.



## **Electrical connections**

Periodically, check for clean electrical connections on all components.

## **Cold temperatures**

 Cold temperatures do not affect the trim tab system. No winterization is necessary.

## **Zinc anodes (Saltwater only)**

 (SALTWATER ONLY) To deter electrolysis, a zinc anode should be attached to the top of each trim tab. Zinc must make direct contact with stainless steel. Do not paint zinc. Do not ground trim tabs to other underwater appendages.

# Paint trim tabs to discourage marine growth

- 1. Clean surface of all grease, oil, dirt.
- 2. Apply two coats of epoxy metal primer.

- Apply two coats of anti-fouling paint. Actuator, including the piston, may be painted.
- Unpainted trim tabs may acquire an orange discoloration. THIS OXIDATION OF SURFACE CARBON MOLECULES IS NORMAL. The integrity of the stainless steel is not affected. Orange coating can be cleaned off, but may eventually return. NOTE: This discoloration should not be confused with the pitting and corrosion of electrolysis.

# Safety information & operation precautions

- Take immediate action to correct any malfunction or failure of your trim tabs.
- Occasionally, check for loose or corroded wiring connections.
- Stepping on the trim tab may cause damage to the unit, or injury.
- Make sure the HPU (pump) or control units are mounted in a dry location to avoid drenching and consequent failure.
- Leaving the actuator extended when boat is not in use will NOT cause seal damage.
- For hydraulic systems, occasionally, inspect HPU fluid level.

## **OPERATION PRECAUTIONS**

 Do not over-trim, particularly at high speeds as the bow will dig in and wave action may cause the boat to veer.

- While underway, do not move one trim tab significantly farther down than the other as undesirable listing could occur.
- Use your trim tab helm control with caution.
- For best maneuverability, trim tabs should be fully retracted in a following sea, or when running an inlet.
- Improper use of trim tabs can cause an accident or injury. Bennett Trim Tabs have a significant effect on the operation and versatility of your boat. No one knows your boat better than you. The best learning method is to spend time getting familiar with your boat's reaction to the trim tabs. As your experience with Bennett Trim Tabs increases, so will your enjoyment. Always operate your boat with safety first in mind.






## SAILFISH **316 DC** | WINDSHIELD WASHING AND CARE

- 1. If you have been offshore, be sure to spray the windshield liberally with a hose to melt and wash away any salt crystals.
- 2. Use commercially available glass cleaners or a mixture of fresh water and white vinegar. Do not use abrasives, harsh chemicals, or metal scrapers. Regular cleaning will help assure clarity of the glass for safe boating.





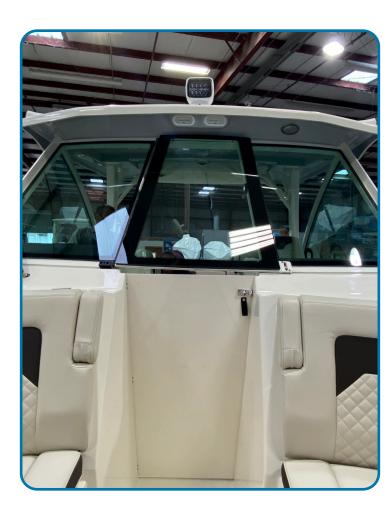

## SAILFISH **316 DC** | LEWMAR PRO-FISH 700 WINDLASS

Your boat has a factory installed windlass and there will be a complete owners' manual in your owners packet. For more detailed information please refer to you windlass owners manual If you have a thru hull windlass system the remote will be stored forward in the windlass hatch.

Included on this page are some maintenance recommendations and a troubleshooting guide.

## **Maintenance**

#### **General Recommendations**

- After the first two or three anchor recoveries, check the mounting nuts to ensure that the windlass is still fastened tightly to your deck, as it should now be bedded-in.
- Regularly wash down the exterior of your windlass with fresh water.
- Examine all electrical connections for possible corrosion, clean and lightly grease as necessary.
- Anchor rode splice should be checked regularly and remade if there is any evidence of wear.
- The Gypsy should be examined on a regular basis, because it is a high wear item. The Gypsy is designed for short scopes of chain and will last longer if properly used.

## **Troubleshooting**

## Anchor Rode pays out independently while windlass is not in use

This problem is a result of not securing the anchor rode combined with the Gypsy Drive Cap being slack. Tighten the Gypsy Drive Cap using the tool provided and always secure the anchor rode independently of the windlass whenever it is not being deployed or recovered.


## **Electrical Troubleshooting**

As with most electrical marine equipment the majority of problems that arise are electrical in nature. Therefore it is essential that the proper voltage be maintained. The proper voltage on a 12 Volt system is 13.5 Volts. (Constant low voltage will destroy the motor). Ensure that electrical cable size is large enough to handle the current draw imposed upon it and keep the voltage drop within acceptable limits. In any circumstance voltage drop due entirely to cable resistance should not exceed 10%.

Follow the charts on the following page to troubleshoot the problem.



The windlass breaker is located in bilge compartment (left side behind batteries).

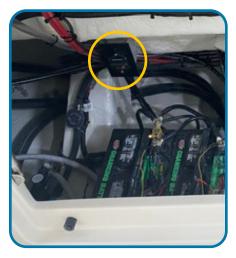



## SAILFISH **316 DC** | LEWMAR PRO-FISH 700 WINDLASS TROUBLESHOOTING CHART

## Failure to Operate Troubleshoot Chart: Reversing Toggle Control Switch (Part No. 0052519)

Is there voltage at the input terminal (positive) to the control switch?

If no voltage is present, the battery isolation is OFF, the breaker is tripped or a fuse has blown. The battery may also have been dead or disconnected.

Check voltage at the output terminals of the control switch with the switch on forward then reverse.

Control switch is defective.



Replace Motol		
Sluggish Operation Troubleshoot Chart		
Is windlass overloaded?		
Yes No No	Ease the load and ensure the battery is well charged.	
Check the voltage across the motor leads with the windlass on. (Proper voltage is 13.5V. Constant low voltage will destroy the motor).	There is a severe voltage drop in the circuit.	
Is the voltage low? (Below 11.0V on a 12V system?	Check for undersized cables, poor connections or corroded connections. Also check for resistance across the battery isola-	
Yes No No	tion switch or solenoid. (Feel them to see if they are heating up).	
Is the voltage correct? (Above 11.0V and anchor is not fouled).	The motor is defective. Replace the motor.	
Yes No No		



## SAILFISH **316 DC** UFLEX POWER ASSIST STEERING (MERCURY & SUZUKI)





Standard on Twin Mercury 300HP and Twin Suzuki 300/350HP engines, MasterDrive™ is a power assisted steering system operated by an electrohydraulic pump which delivers fingertip control regardless of speed or torque conditions, ensuring full control of the boat both during maneuvers and in bad sea conditions.

The MasterDrive™ is made up of three main components: helm, power unit and user interface. The user interface, which is located on the boat dashboard, allows the boater to select three different power modes according to the saliling conditions:

- Fishing
- Cruise
- MasterDrive™



## SAILFISH **316 DC** YAMAHA HELM MASTER EX STEERING SYSTEM - STANDARD

Helm Master EX offers boaters customizable, integrated boat control with more ease and convenience than ever before.

Yamaha's Digital Electronic Steering (DES) is the electronically controlled steering system is the Industry-first integrated electric steer-by-wire system. Unlike aftermarket steering systems, it is digitally connected from the helm to the engine. It offers stable and assured steering and also steering setting can be changed depending on various boating situations.

For more information on the service and maintenance of your Yahama Helm Master EX steering system please refer to your Yamaha owner's manual or view it electronically at <a href="https://yamahaoutboards.com/en-us/home/owner-resources/all/owners-manuals">https://yamahaoutboards.com/en-us/home/owner-resources/all/owners-manuals</a>

Optional Equipment shown: Joystick & Autopilot.







## SAILFISH **316 DC** OPTIONAL OPTIMUS JOYSTICK - (SUZUKI ONLY)



The Dometic Optimus 360 Joystick Control brings a whole new level of precision to your boat's steering. This intuitive, retrofittable joystick allows you to move not only forward and back, but also sideways. With additional features including a sensitive touch function and Take Command mode, the Optimus 360 lets you direct and rotate your boat with confidence and control.

Optimus 360 is designed for low speed maneuvering, and really excels in the marina, when pulling in and out of your slip, or docking. Optimus 360 uses intelligent programming to minimize the amount of shifting required to complete a maneuver.



## SAILFISH **316 DC** STANDARD ELECTRIC STEERING (MERCURY 350/400HP VERADOS)

#### **Electric Advantage**

With no hydraulics, you get more space in the utility compartment of your boat and a cleaner transom installation. Electric Steering also minimizes noise and distraction – a meaningful benefit for Joystick Piloting for Outboards (JPO) applications, when the engines are actively holding the boat in position or maneuvering the vessel.



Enjoy instantly responsive handling and precise, smooth maneuvers.







## SAILFISH **316 DC** OPTIONAL MERCURY JOYSTICK (JPO)

#### Full 360 degree control. Right at your fingertips

Move sideways, diagonally or spin the boat on its own axis. Dock in close quarters without being concerned about wind or current. Easily load the boat on a trailer. Throttle, shift and steering - right at your fingertips.

#### **SKYHOOK Digital Anchor**

A digital anchor that locks in your boat's position and heading via GPS with the push of a button.



**VesselView 502** 








## SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM

#### Dometic MasterFlush

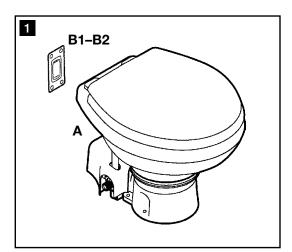



Installed toilet (fig. 1)

Ref.	Description
Α	Macerator toilet
B1	DFS-2F flush switch (standard - freshwater flush toilet)
B2	DFS-1F flush switch (standard - sea water flush toilet)

NS DFST flush switch (optional)
NOT SHOWN



# 

## Toilet components (fig. 2 )

Ref.	Description
1	Rim flush check valve (freshwater toilet) or adapter (sea water model)
2	Water supply hose
3	Macerator pump (under plastic cover)
4	Electric water valve
5	Product ID label location
6	Stainless steel compression band
7	Discharge fitting




## SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM

KEY	DESCRIPTION	
1	Battery	
2	Fuse	
3	Waste Management System	
4	Master Switch	
5	Controller for Waste Management System	



KEY	DESCRIPTION	
1	Vent	
2	Inlet	
3	Toilet	
4	Deck Pump Out	
5	Overboard Discharge (Optional)	
6	Waste Holding Tank	
7	Outlet	

**Download High Resolution Diagram** 

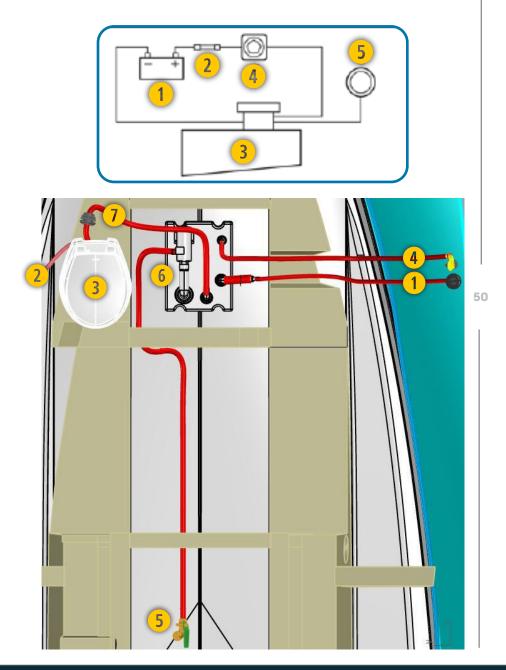



## **Dometic Flush Toggle Switch**

#### Freshwater Flush (toilet with DFST switch)

#### Toilet system start-up

- 1. Turn on fresh water supply to toilet.
- 2. Press "Flush" switch (2) and hold for at least 10 seconds.
- 3. Toss several sheets of toilet paper into bowl and repeat cycle. The bowl should completely clear.

#### Normal toilet operation

#### ADDING WATER TO TOILET BOWL

Press "Add Water" switch (1) and hold until desired water level is achieved. (Do not press "Add Water" switch too long or overflow may occur.)

#### **FLUSHING TOILET**

Press "Flush" switch (2) down and hold until waste drains from toilet bowl (about 10 – 20 seconds). This switch activates a macerator pump that siphons water and waste from the bowl, macerates, and propels the effluent to the discharge line/holding tank. To use less water for liquid-only flushes, press "Flush" switch for shorter period of time.

Dometic

#### "DRY BOWL" OPERATION

During periods of rough travel, water in a toilet bowl can splash out and into the bathroom area. To avoid this situation, press "Dry Bowl" switch (3) to drain water completely from toilet bowl. Water is not added to bowl during or after pressing the "Dry Bowl" switch.





Caution: Do not operate toilet without water supply turned on. Damage to internal components may occur.



## SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM

## **Full Tank Monitor**

## Toilet operation when connected to "full tank" shut-down relay and tank monitor system

When a Dometic macerator toilet system uses a "full tank" shut-down relay, electrical power to the toilet is shut off when the holding tank level reaches "full". To restore electrical power to the toilet for flushing, holding tank contents must be emptied or discharged until the "full" tank indicator is not activated.





**Jabsco Tank Monitor installed with Overboard Discharge** 



All Toilets are equipped with a "Full-tank" shut-down relay.



## SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM

## **Maintenance & Winterizing**

#### Cleaning the toilet

To maintain the toilet's original, lustrous appearance, use Dometic® Toilet Bowl Cleaner or other non-abrasive bathroom and toilet bowl cleaners. Please follow label directions.



#### Caution

To avoid damaging internal seals, do not clean toilet with abrasive cleaners, caustic chemicals, or lubricants and cleaners that contain alcohols or petroleum distillates.

#### **Routine maintenance**

#### **MONTHLY**

- 1. Inspect toilet, plumbing, and plumbing connections, wires, and wire connections.
- 2. Open and close all plumbing valves, including seacocks.
- 3. Check in-line water filters and vented loops for blockage.



#### YEARLY

Check water valve filter. Also check water valve filter if water flow into toilet becomes insufficient.

#### During extended periods of non-use

The macerator toilet and sanitation hoses should be protected if toilet will not be needed for an extended period of time (more than two weeks, especially in hot weather).

- 1. Flush toilet and add 4 oz. (118 ml) of liquid biodegradable laundry detergent (should NOT contain bleach or environmentally harmful substances). Note: If using sea water for flushing, shut off power to sea water pump and add fresh water directly into the bowl during the flush cycle.
- 2. Flush toilet at least five times.
- 3. Turn off water supply to toilet.
- 4. Flush the toilet without water very briefly to evacuate all water. (This procedure will minimize any remaining water in the macerator pump.)



#### Caution

During water evacuation process, do not operate sea water pump very long without water. Pump impeller may become damaged.

- 5. Turn off power to the toilet.
- 6. After extended periods of non-use, toilet and pump may dry. For easier re-start of toilet system, add one quart of water to bowl and let it stand for a few minutes before use.





#### Caution - Do Not Flush Foreign Objects!

Flush only water, bodily wastes and rapid-dissolving toilet tissue. Do not flush wet wipes, sanitary napkins, condoms, diapers, paper cups, cotton swabs, food, hair or liquids such as oils or solvents as clogging or damage to the toilet or toilet system may occur.



#### Note

Make sure all guests understand toilet operation before use.



## **Maintenance & Winterizing**

At the end of each season, the Dometic macerator toilet should be winterized for storage by using potable water-safe antifreeze (if boat or vehicle will be exposed to freezing temperatures).

If system will be subjected to freezing temperatures, please follow procedures in section 7.3, "During extended periods of non-use", and then winterize system as described here.



#### Note

Use nontoxic antifreeze designated for potable water systems. (See boat or vehicle owner's manual.)



#### Caution

Never use automotive-type antifreeze in freshwater systems.



#### PRESSURIZED FRESH WATER SYSTEM

- 1. Drain potable water tank and empty holding tank.
- 2. Add freshwater antifreeze to potable water tank.
- Flush potable water antifreeze and water mixture through toilet(s) and into entire system, including the waste holding tank, diverter valve connections, discharge pumps, etc. Turn off power to toilet.

Each installation is different, so amounts may vary. User discretion is required to assure adequate protection.

#### **SEA WATER SYSTEM**

Parts required:

- Hose that fits sea water pump, about 3 ft. (1 m) long
- one container
- 1. Close intake and discharge seacocks. See Hazard of Flooding risks in this manual.
- 2. Turn off power to toilet.
- 3. Disconnect and drain intake hose and in-line filters.
- 4. Connect hose to sea water pump intake.
- 5. Place hose connected to pump intake into bucket with antifreeze in it.
- 6. Turn on power to toilet and flush until antifreeze is removed from toilet.
- 7. Disconnect power to toilet and reconnect all intake and drain hoses.



Access to the Marine Head Discharge Seacock is located in the Mid-Ship In-Floor Ski Locker. it is the same access plate used for the Fwd Bilge pump.

NOTE: This is a freshwater marine head system that runs off the boats freshwater tank, using the head will effect the boats freshwater supply.



## SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM



- Rugged Polyethylene holding tank
- Barbed fittings for all hose connections
- Heavy Duty Macerator
- Three run-dry and accidental activation safety features
- Evacuation Pump
- Touch-pad waste management control panel
- Additional dock side evacuation pick up

PUMP FEATURES			
Pump:	Self-Priming Flexible Impeller with Stainless Steel Wearplate		
Impeller:	Jabsco Nitrile compound		
Macerator:	Stainless Steel Cutter reduces particle size to 1/8" (3mm) maximum		
Seal:	Lip Type		
Ports:	Intec – 1-1/2: (38mm) Hose Barb and 1-1/2" N.P.T. (Male) Outer – 1" (19mm) Hose Barb		
Motor:	Permanent Magnet Type, Fully Enclosed with Stainless Steel Shaft Includes Run-Dry Protection Device that shuts off pump. Powder coated housing with sealed end bolts and bearings.		

## **System Features**

**Level Indication:** When pressed, the level indicator will illuminate for 1 minute. When the tank level reaches full, the indicator will flash automatically to alert the user to empty the tank.

**Sleep Mode:** If the flashing LED is a disturbance, the unit can be put into sleep mode. The unit will emerge from sleep if the system is turned off or the tank level is increased. NOTE: the unit is unable to be put into sleep mode if the tank is 7/8 full or greater.

**Empty Button:** This button needs to be pressed and held for 3 seconds to activate the pump. This eliminates the possibility of accidental operation.

**Averaging:** Two different level averaging methods have been used – one when filling and one when emptying. This compensates for the boat's movement when the tank is filling, and still allows an accurate reading when emptying.

**Fail Safe Feature:** If no fluid movement is sensed 20 seconds after the pump is set to run, the pump will shut down and indicate a fault check pump and plumbing for a blockage.





## SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM

## **Installation:**

The holding tank should be located close to the toilet. A proper seacock is required if the discharge thru-hull is positioned below the waterline.

Both the discharge thru-hull and the holding tank are installed to prevent a potential siphon. Contact a marine plumber or Jabsco technical support specialist for installation assistance.

Mount on a strong flat surface. Note: the area of installation needs to support the weight of the unit and its contents.

Four mounting feet (included) need to be attached to the platform with four machine or lag screws and four flat washers.

## **Plumbing:**

#### **Each tank contains:**

- 1 x 1 ½" deck pump out evacuation pickup tube (Install to dockside pump-out deck plate)
- 1 X 1 ½" inlet port from toilet system
- 1 x 3" O-ring sealed inspiration hatch
- 1 x 1" vent\* connect to vent outlet usually sited high on a vessel's hull near the gunwale
- 1 x 1" Overboard discharge port macerator pump out.
   Discharge: connect to the overboard discharge thru-hull fitting.
- \* See plumbing diagram for recommended installation.

## **Maintenance:**

Flush system with clean water to remove any build up of sludge or debris. It is recommended that this process be completed at least once a year. Please reference 18590 Series Macerator datasheet servicing section for details.

## **Winter Storage:**

Empty the complete system of all water making sure pipe work and pump are completely free of waste.



## **TROUBLESHOOTING**

SAILFISH **316 DC** | TYPE III MSD WASTE MANAGEMENT SYSTEM

Dyahlam	Descible Cours	Camina Instruction
Problem	Possible Cause	Service Instruction
<ol> <li>Flush function works, but water in bowl empties slowly or not at all.</li> </ol>	<ul><li>a. Discharge piping is pinched or kinked.</li><li>b. Discharge piping is too high.</li></ul>	<ul><li>a. Check discharge piping.</li><li>b. Reroute discharge piping.</li></ul>
	(Remember, all upward vertical loops and should not exceed a total of 4 feet (1.2 m) in height.)	
	c. The macerator pump or discharge piping is blocked.	<ul> <li>c. Close seacocks and clear blockage.</li> </ul>
Macerator pump makes unusually loud noise or continually trips breaker.	a. Foreign material in pump chamber.	a. Close seacocks and clear foreign material.
3. Flush cycle is not activated after pushing on flush switch.	A. Holding tank is full and signal from tank has shut down electrical power to toilet.	a. Empty holding tank.
	<ul><li>b. Electrical power to toilet is shut off or disrupted.</li><li>c. Flush switch is malfunctioning.</li></ul>	<ul><li>b. Check wiring and circuit breakers (or fuses).</li><li>c. Replace flush switch.</li></ul>
4. Insufficient or no water enters the bowl.	Water supply line is pinched or kinked.	a. Check water supply line.
	b. Screen in water valve is blocked.	b. Clear blockage at water valve.

c. Intake water filters are blocked

(in sea water system).
d. Water valve is malfunctioning.





c. Clear water filters.

d. Replace water valve.

STEP-BY-STEP CLEANING INSTRUCTIONS			
TYPE OF STAIN STEPS:	1	2	3
General Care	А	В	
Dirt Build-Up	А	В	
Ballpoint Ink*	Е	В	Α
Chewing Gum	D	Α	
Coffee, Tea, Chocolate	В		
Grease	D	В	
Household Soil	А	В	
Ketchup	А	В	
Latex Paint	А	В	
Lipstick	Α	В	
Mildew or Wet Leaves*	С	В	Α
Motor Oil	В		
Oil-Based Paint	D	В	
Permanent Marker*	Е	В	С
Spray Paint	В		
Suntan Lotion	Α	В	
Tar / Asphalt	D	В	
Yellow Mustard	А	В	С

#### Legend

- **A.** Medium-Soft brush, warm soapy water, Rinse / Dry
- **B.** Vinyl Finish Vinyl Cleaner®, Rinse / Dry
- **C.** One (1) tablespoon of ammonia; one-fourth (1/4) cup of Hydrogen Peroxide, three-fourth (3/4) cup of water, Rinse / Dry
- **D.** Wipe or scrape off excess (chill gum with ice before hand)
- **E.** Hemisphere Ink Remover, Rinse / Dry

Failure to care for your vinyl properly, or use of improper cleaners may void your warranty & damage your vinyl.

#### Do's & Don'ts

#### Nn'e

- · Vinyl Finish Vinyl Cleaner
- Dish Soap (Dawn, Ivory)
- Fantastik
- 303 Aerospace Protectant

58

#### Don'ts

- Formula 409
- Murphy's Oil Soap
- Simple Green
- Armor All
- Son-of-a-Gun
- Turtle Wax / Tar Remover

All cleaning methods must be followed by a thorough rinse with clean warm water. Certain household cleaners, powdered abrasives, steel wool, and industrial cleaners can cause damage and discoloration and are not recommended. Dry cleaning fluids and lacquer solvents should not be used as they will remove printed pattern and gloss. Waxes should be used with caution as many contain dyes or solvents that can permanently damage the protective coating. \*Suntan lotion, tree pollen, wet leaves, and some other products can contain dyes that stain permanently.

\*Always Remove Stains Immediately!





## **What Causes It?**

Corrosion is a natural phenomenon that affects metals by either a chemical or electrochemical reaction. The rate at which aluminum corrodes depends greatly on the environmental conditions and the amount of preventative maintenance performed.

Our goal is to slow down or stop this natural phenomenon we call pitting (or corrosion).

## **Anodized Aluminum**

The aluminum on your boat has been anodized. This creates a very hard protective seal on the surface of the aluminum to protect it as much as possible from pitting. When the anodized coating is broken and raw aluminum is exposed, corrosion will take place. Damage from other abrasive impacts can break the anodized coating.

## **Chemical Attack**

Corrosive chemicals containing high concentrations of acids or alkalis will remove the anodized coating. Solutions containing chlorine, salts, or ammonia are all harmful to the anodized aluminum on your boat. Many common household cleaners contain chemicals that will remove the anodizing and cause pitting.



AVOIDABLE	UNAVOIDABLE
Strong acidic solutions found in cleaners, paint remover, degreasers, etc.	Airborne pollution. Airborne particles from local sources: vehicles, incinerators, paper mills, chemical plants, power plants, etc.
Concentrated alkaline based solutions. Many concentrated soaps fall into this category.	Harsh chemicals from work performed at local shipyards and dry docks.
Chlorine, sulfurs, solvents and ammonia based products.	Be aware of local sources that can expose your new boat to corrosive chemicals.





## SAILFISH **316 DC** | CARING FOR ALUMINUM

## **Tips**

Avoid the use of bleach or chlorides to clean the aluminum or nearby components. Chlorides can leach onto the aluminum when used nearby.

Avoid abrasive cleaning products. Never use steel or brass wool, wire brushes, polishing wheels, rubbing or polishing compounds. These items will remove the anodizing and lead to pitting.

## **Protective Products**

There are many different products available to protect aluminum. Some



are designed to seal and protect before problems occur and others are designed to use after pitting has appeared.

While these products are effective, they are not one time solutions. Metal protectors must be reapplied on a regular basis. How often a protector should be used varies according to the protector you choose, the types of exposure your boat is subjected to, and how often you use and wash your boat. Follow the application guidelines provided with the protector you choose.

## **Harmful Cleaners**

- Bleach (Chlorox, etc.)
- Mild abrasive cleaners (Ajax, Comet,
- Soft Scrub, Rubbing Compounds, etc.)
- Strong cleaners (409, Engine
- Degreasers, Bilge Cleaners, Teak
- Cleaners, Bottom Cleaners, etc.)

BELOW ARE SOME METAL PROTECTION PRODUCTS THAT ARE READILY AVAILABLE AT MARINE RETAILERS.		
Woody Wax CPR	Woody Wax woody-wax.com 800-619-4363	
Boeshield T-9	PMS Products, Inc. boeshield.com 800-962-1732	
Premier Polish	Aquatech aquatech-marine.com 800-853-7760	
Corrosion Block	Lear Chemical learchem.com 800-256-2548	





The information provided is designed to give you a thorough understanding of the factors that can impact the appearance of your stainless steel. By using this information, we hope to help you enhance the beauty and value to our products.

## **What Makes Stainless Steel Stainless?**

Oxygen is the key element in causing rust, or red oxide on steel and other metals. Stainless Steel contains Chromium which reacts with the oxygen in the air to form a chrome-oxide surface layer that is invisible to the eye, but strong enough to prevent further oxygen from "staining" (rusting) the surface. Higher levels of Chromium and the addition of other alloying elements such as nickel and molybdenum enhance this surface layer and improve the corrosion resistance of the stainless material.

# **What Determines Different Grades of Stainless Steel?**

The grade of Stainless Steel is primarily determined by the amount of the Chromium and Nickel alloys contained in the material. 304 and 316 are the prominent grades of Stainless Steel: 304 contains 1% Chromium and 8% Nickel, while 316 Contains 16% Chromium and 10% Nickel and 2% Molybdenum. The Molybdenum is added to help resist corrosion to chlorides (like sea water and de-icing salts).

## **Can Stainless Steel rust?**

Not in the way steel rusts. Steel will discolor, bubble and flake from red oxide development. Stainless Steel may develop red spots, but this is usually due to Iron particles on the surface of the Stainless Steel. Any Iron particles must be removed and the Stainless Steel cleaned with a high concentration of citric acid or a commercial cleaner specifically designed for Stainless Steel.

## Is Stainless Steel Green (Environmentally Friendly)?

Stainless Steel is highly sought after by recyclers and is 100% recyclable. New Stainless Steel typically has a recycled content of between 65% & 80% which makes it one of the highest average content recycled construction materials on the planet.

## **Will Stainless Steel Discolor?**

Cleaners that are typically used with cement, grout and stone, etc., may contain Muriatic Acid. Stainless Steel is not resistant to Muratic Acid. MURIATIC ACID SHOULD NOT BE USED IF STAINLESS STEEL IS PRESENT. It is not even necessary that the acid touch the Stainless Steel, just the "fumes" from it will cause a discoloration of the Stainless Steel. Other than this, Stainless Steel is usually very resistant to discoloring.



## SAILFISH **316 DC** | GEL COAT

### **Your Boat's Gel Coat Finish**

Congratulations! You are the proud owner of a new Sailfish. You are also the owner of a new gel coat finish on the hull and/or topside, and we would like you to be as proud of it as we are. That beautiful, shiny new color you love is the result of many years of gel coat research, testing and development.

But as proud as we are of the gel coat, no finish is totally impervious to chemicals and weathering. Imagine what a brand new car could look like if allowed to sit at a marina for years with no cover and no washing or waxing. With the same minimum maintenance you would ordinarily give your new automobile's finish, your boat's gel coat finish will retain its depth of color and gloss for years.

## **Overall Maintenance**

Normal maintenance of your gel coated fiberglass boat is similar to the care you would give your automobile. Overall, automotive cleaners and waxes work fine, as well as the marine cleaners and waxes.

Note: Do not use caustic or highly alkaline (high pH) cleaners or those containing ammonia. These type of cleaners may darken white or off-

white weathered gel coat surfaces. A chemical reaction producing staining occurs if these type of cleaners are used on weathered gel coat. However, the stain may be removed with a rubbing compound or by lightly sanding with 400 grit sandpaper followed by an application of rubbing compound and a thorough waxing.

## **Cleaning**

We recommend general washing to avoid soil build-up and staining. The soil to your gel coat is the result of regular use and environmental pollutants such as soot and smog. Periodic cleaning with a mild detergent is necessary to remove normal deposits of soil.

## **Waxing**

From constant exposure over time to our natural environment and undesired pollutants, the gel coat begins to lose its gloss. To restore your finish to the original gloss and color requires your special attention. After washing with a mild soap or detergent, give the surface a good polishing with a self-cleaning marine or automotive wax. Waxing in the fall and spring is generally recommended to maintain and restore most of the original gloss. If the surface has not been maintained and has weathered badly, and if cleaning and waxing

does not restore the finish satisfactorily, compounding will be required.

## **Compounding**

Please see your marine dealer for advice. Polishing and compound (fine abrasive) or rubbing compound (coarser abrasive) is recommended for use on fiberglass boats to remove scratches, stains, or a severely weathered surface. Polishing or rubbing compound can be applied by hand or by pneumatic buffer. After the scratched, stained or weathered surface has been moved, it should be waxed to enhance the gloss and color while providing a seal to retard staining or new soil accumulation.

## **Discoloration Removal**

Your marine dealer is best equipped and trained to do this work. If regular washing and waxing has been neglected, discoloration of the gel coated fiberglass surface may occur.





## SAILFISH **316 DC** | GEL COAT

Discolored areas are very shallow in depth, literally right on the surface. The discoloration may be removed by gently wet-sanding the affected areas only by using 600 grit, wet or dry specially treated waterproof sandpaper. It's important to always sand in one direction, this includes the curves too. Use plenty of water to cool and clean the sandpaper and cut back on dust. After you are finished sanding, dry the areas and verify all the discoloration has been removed. If not, repeat the process.

After all the discoloration has been removed, the area will need to be buffed. Using an electrical or pneumatic buffer, buff at low speed (1750 rpm – 2250 rpm), this will restore the luster to the sanded surface. Using a generous amount of rubbing compound, apply it in a circular motion with a soft wool pad. When buffing has been completed, wash off the rubbing compound with clean water, and dry the surface.

To restore the gloss to the affected area, use a high-grade marine or automotive wax.

## **Repairs**

During the life of your boat, some damage to the gel coat surface is unavoidable. We recommend repairs done by trained, experienced professionals at your local marine dealer.

## **Scratches**

If the scratch is in the gel coat surface, not penetrating the fiberglass, use an automotive polishing compound and rub it out. Apply the compound by hand using a damp rag or by using a power buffer. The scratch may not entirely disappear, but it should be noticeably better.

## **Gouges and Chips**

 
Our recommended patching procedure is to first clean the area needing repair with an acetone solvent to remove all traces of wax and oil. Next, thoroughly mix one tablespoon of "Patch Paste" with two or three drops of catalyst on a scrap piece of cardboard.

Apply the mixture to the pit, chip or gouge with a single-edge razor blade, matching the surface and contour of the area being repaired. Apply slightly more mixture to avoid having to fill the damaged section a second time. Allow the patch to harden thoroughly for a minimum of two to three hours.

Using a fine grit "wet or dry" sandpaper on a sanding block, wet-sand the patch until it is level with the surrounding surface. Finish with a marine or automotive rubbing compound using the same approach as used for the scratches.

## Refinishing

For a severely scratched or weathered fiberglass boat that is no longer restorable by using the previous methods, it may then be necessary to refinish it with two-package or two-part aliphatic urethane enamel. This can be done very effectively, but it is recommended refinishing should only be done by experienced professionals.





## SAILFISH BOATS LIMITED WARRANTY

SEMINOLE MARINE INC. ("Sailfish" producer of Sailfish Boats warrants to you, the first retail purchaser of a new boat bought from a factory authorized dealer, that it will repair or replace defects in materials or workmanship that occur and are reported to your factory authorized dealer within the applicable Warranty Periods set forth below, subject to the terms, conditions and exclusions ("What This Warranty Does NOT Cover") set forth below. Your acceptance of delivery of the warranted boat constitutes your acceptance of the terms of this limited warranty. All warranty periods run from the date (the "Effective Date") of delivery to the original retail owner (the "Owner"), or twelve (12) months from the date the boat was delivered to the Sailfish dealer, whichever is earlier. This limited warranty applies only to covered defects first arising and reported to Sailfish or its authorized dealer within the applicable warranty coverage period.

U.S. purchasers: this warranty gives you specific legal rights, and you may also have other rights which vary from state to state. E.C. purchasers: the owner has legal rights under applicable national legislation and the Consumers Protective Directive 1999/44/EC of the European Parliament and of the Council of 25 May 1999 governing the sale of consumer goods, and those rights are not affected by this limited warranty. Any claim that the boat was nonconforming at the time of delivery must be made within two (2) years from the date of delivery.

#### WHAT THIS WARRANTY COVERS:

<u>Structural Warranty:</u> Structural fiberglass defects in workmanship and materials in the hull, stringers, transom causing the boat to be unfit for general use as a pleasure craft under normal conditions of operation - Limited Original Purchaser's Ten (10) years.

<u>Component Warranty:</u> For defects in workmanship and materials in factory manufactured and installed non-structural parts and components - One (1) year Limited Warranty.

The applicable Warranty Period runs from the date of delivery of the boat to the first retail customer, and warranty coverage applies only to warranted claims that first arise and are reported to Sailfish within the applicable warranty period. This warranty extends only to the first retail purchaser.

The express limited warranty described above is the sole and exclusive express warranty from Sailfish. Under the laws of certain states, there may be no implied warranties or conditions from Sailfish applicable to your boat, and all implied warranties (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) and conditions are excluded and disclaimed from warranty coverage where allowed by law. Any IMPLIED WARRANTIES (if any) arising under applicable law are LIMITED IN THEIR DURATION TO TWO (2) YEARS FROM THE EFFECTIVE DATE.

ALL IMPLIED WARRANTIES, if any, INCLUDING MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED AND DISCLAIMED IN THEIR ENTIRETY AFTER TWO (2) YEARS FROM THE EFFECTIVE DATE. There are no warranties which extend beyond the description on the face hereof. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

#### WHAT THIS WARRANTY DOES NOT COVER:

Sailfish does not provide any warranty coverage, nor have any liability or responsibility, for any defects, costs, expenses or damages relating to the following:

- The failure to use, maintain or store the boat as specified in the manuals supplied to the Owner;
- A boat purchased from anyone other than an authorized dealer;
- · A boat, including its components, that has been altered, modified or not properly maintained;
- A boat, including components and systems, that has been altered or modified from factory specifications; equipment and accessories not factory installed by Sailfish;
- Engines, outdrives, controls, propellers, batteries, generators, appliances, air conditioners, stereos and other equipment or accessories that are not manufactured by Sailfish, whether or not warranted by other manufacturers. It is the owner's obligation to fulfill any warranty registration and other obligations as to any third-party manufacturer's warranty coverage, and to submit any warranty claims directly to the third-party warrantor. Note: it is the Owner's responsibility to complete any OEM warranty registration procedure that may be applicable;
- Non-structural parts and components manufactured or installed by third parties, whether or not warranted by other manufacturers:
- The cost of removal or reinstallation of parts or disassembly of units to repair or replace components covered by this limited warranty;
- · Any boat which has been in an accident, misused, used in a negligent manner, used for racing, used for rental, charter,

## SAILFISH BOATS LIMITED WARRANTY

demo, military, rescue, fire, safety, medical, police, law enforcement, patrol, or other governmental or commercial purposes, operated contrary to any instruction furnished by Sailfish, or operated in violation of any governmental or agency laws, rules or regulations;

- · Fiberglass blistering attributable to water penetration of the fiberglass (osmotic blistering);
- · Any representation relating to speed, range, fuel consumption or other estimated performance characteristic;
- Loss of time, inconvenience, boat payments, retail charges, improper lifting or trailering, travel expenses, loss of use, in-and-out-of-water charges, towing and storage charges, loss of or damage to personal property, or other remedies not specifically allowed;
- Damage from osmosis blistering if the original gel surface has been altered in any way;
- Damage or deterioration of cosmetic surface finishes, including corrosion, cracking, crazing, discoloration, fading, rusting or
  oxidation of gel coat and painted fiberglass surfaces, wood finishes (varnishes, stains and paints), fabrics, plated or painted/powder coated metal and stainless steel finishes; anti-fouling bottom paint or zinc anodes;
- The cost to remove, disassemble or reinstall components not installed by Sailfish that require removal to access parts covered by this limited warranty;
- · Dealer preparation, cleaning, final adjustments and alignments in preparing the boat for delivery or commissioning;
- Normal and routine maintenance and wear and tear, including leakage around windshield, hatches, canvas, or other designated openings;
- Window glass and windshield damage, leaks or breakage; damage, shrinkage or deterioration of carpet, upholstery, and exterior canvas tops, enclosures, and weather covers;
- · Fit and adjustment of exterior canvas tops, enclosures and weather covers;
- · Sacrificial deterioration of anti-fouling paint or zinc anodes; or
- Cosmetic and/or damage resulting from normal wear and tear, or improper care and maintenance, either by dealer prior to consumer purchase or by consumer are not covered.

#### **REMEDIES AND OTHER INFORMATION:**

Your **sole and exclusive remedy** (including any applicable implied warranty) is the repair or replacement, at Sailfish sole option, of parts and components covered by this warranty, **and does not include incidental or consequential damages which are specifically DISCLAIMED and EXCLUDED from warranty coverage**. U.S. purchasers: some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any legal action alleging a breach of warranty must be brought within one (1) year from the date the alleged breach first occurred, regardless of the time remaining in the applicable warranty period. The boat, including any alleged defective part, must be returned to an authorized dealer (or as otherwise directed by Sailfish) within the applicable warranty period to obtain warranty service. The authorized dealer will carry out the warranty procedures on the owner's behalf. All warranty work will be performed at an authorized dealer, another repair facility that Sailfish selects, or the factory, at Sailfish' option. The owner is responsible for the expense associated with transporting the boat to and from the repair facility.

This document contains the entire warranty given by Sailfish and there are no terms, promises, conditions or warranties regarding your Sailfish other than those contained herein. Sailfish reserves the right to change Sailfish specifications, features, and prices without prior notification and without obligation for Sailfish previously manufactured.

Your acceptance of delivery of the warranted Sailfish constitutes your acceptance of the terms of this limited warranty. Your Sailfish dealer is an independent business and is not the agent of Sailfish. Your Sailfish dealer may not modify or change the terms of this limited warranty, and any questions concerning the scope of this limited warranty coverage should be addressed directly to Sailfish. Neither your Sailfish dealer nor anyone else is authorized to extend the time or scope of this warranty, or to create or assume for Sailfish any other obligation or liability with respect to Sailfish or this warranty.

Any legal action alleging a breach of this warranty (or any implied warranty) must be brought within one (1) year from the date the alleged breach first occurred. The exclusive jurisdiction and venue for any court action commenced by you under or relating to this limited warranty or any implied warranty(ies) shall be in the Circuit Court for Grady County, Georgia or United States District Court for the Middle District of Georgia.

We may be contacted as follows: Sailfish Boats, Attention: Customer Service Department, 2501 Industrial Park Drive, Cairo, GA 39828, USA. +1-229-377-2125.



#### **SAILFISHBOATS.COM**

Specifications, features, equipment, options, colors, materials and trim are based on information available at time of printing and are subject to change without notice. Some accessories shown in photographs, or described, may not be standard equipment or even available as an option(s). Confirm availability of all accessories and equipment with an authorized Sailfish Boats dealer prior to purchase.

© 2023 Sailfish Boats.